

VISIT...

LANZAROTE
Caliente.COM

Project Planning and Control

Project Planning and Control

Fourth Edition

Eur Ing Albert Lester, CEng, FICE, FIMechE,
FIStructE, FAPM



ELSEVIER
BUTTERWORTH
HEINEMANN

AMSTERDAM BOSTON HEIDELBERG LONDON NEW YORK OXFORD
PARIS SAN DIEGO SAN FRANCISCO SINGAPORE SYDNEY TOKYO

Elsevier Butterworth-Heinemann
Linacre House, Jordan Hill, Oxford OX2 8DP
200 Wheeler Road, Burlington MA 01803

First published by Butterworth & Co (Publishers) Ltd 1982

Second edition published by Butterworth-Heinemann 1991

Third edition 2000

Fourth edition 2003

Copyright © 1982, 1991, 2000, 2003, Elsevier Ltd. All rights reserved

No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means and whether or not transiently or incidentally to some other use of this publication) without the written permission of the copyright holder except in accordance with the provisions of the Copyright, Designs and Patents Act 1988 or under the terms of a licence issued by the Copyright Licensing Agency Ltd, 90 Tottenham Court Road, London, England W1T 4LP. Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to the publisher

Permissions may be sought directly from Elsevier's Science and Technology Rights Department in Oxford, UK: phone: (+44) (0) 1865 843830; fax: (+44) (0) 1865 853333; e-mail: permissions@elsevier.co.uk. You may also complete your request on-line via the Elsevier homepage (<http://www.elsevier.com>), by selecting 'Customer Support' and then 'Obtaining Permissions'

British Library Cataloguing in Publication Data

A catalogue record for this book is available from the British Library

Library of Congress Cataloguing in Publication Data

A catalogue record for this book is available from the Library of Congress

ISBN 0 7506 5843 6

For information on all Butterworth-Heinemann publications
visit our website at www.bh.com

Composition by Genesis Typesetting, Rochester, Kent

Printed and bound in Great Britain by Biddles Ltd, Guildford and King's Lynn

Contents

Preface to the fourth edition	vii
Preface to the third edition	xi
Preface to the second edition	xv
Preface to the first edition	xvii
Foreword to the first edition	xix
Acknowledgements	xxi
1 Project definition	1
2 Business case	5
3 Organization structures	16
4 Project life cycles	20
5 Work breakdown structures (WBS)	25
6 Estimating	38
7 Project management plan	42
8 Risk management	46
9 Quality management	56
10 Change and configuration management	58
11 Basic network principles	65
12 Precedence or activity on node (AoN) diagrams	81
13 Lester diagram	88
14 Float	96
15 Arithmetical analysis	104
16 Graphical analysis, milestones and LoB	112
17 Computer analysis	127
18 Simple examples	135

19	Progress reporting	147
20	The case for manual analysis	156
21	Subdivision of blocks	165
22	Project management and planning	172
23	Network applications outside the construction industry	181
24	Networks and claims	196
25	Resource loading	203
26	Cash flow forecasting	211
27	Cost control and EVA	220
28	Worked examples	256
29	Example of integration of tools and techniques	289
30	Hornet Windmill	312
31	MS Project 98	339
32	Project close-out	351
33	Stages and sequence	353
34	Abbreviations and acronyms used in project management	359
	Glossary	363
	Bibliography	371
	Index	377

Preface to the fourth edition

About a year ago I was asked by a firm of insurance loss adjusters to investigate the possibility of reducing the anticipated overrun caused by an explosion at a power station. Based on previous experience of similar problems, I asked the contractors (a firm of international design and build constructors) to let me examine the critical path network which formed the basis of the computer-generated bar charts previously sent to the loss adjusters. My objective was to see whether the original sequence of construction activities could be rescheduled to mitigate the inevitable delays caused by long lead times of replacements and in some cases redesign of the damaged components.

To my dismay, I discovered that there was no network. The planners inputted the data straight into the computer, based on very detailed established modular packages. These packages contained the sequences, interrelationships and durations of the constituent activities.

It is a fact that most commercial computer programs recommend such a procedure. The planner can then see the program on the screen in bar chart form as he/she proceeds, but will only obtain a network printout (in precedence format) *after* the data has been processed. In other words the network has become virtually redundant as it has not been used to develop the structure of the project before the data was inputted.

This procedure turns network analysis on its head and does not give a project team the ability to discuss and refine the interrelationships to give the optimum results in terms of time and cost. The very act of communally drafting and developing the network generates not only an understanding and appreciation of the problems, but also enables the overall time to be reduced to an acceptable level by maximizing parallel working without necessarily

increasing resources and costs. It is for this reason that I have retained the chapter setting out the case for manual analysis. Even in this age of the universal use of the PC for just about every management and operational function of an organization, the thinking process, i.e. the basic planning and sequencing of a project cannot be left to a machine.

One of the by-products of computerization was the introduction of precedence or AoN (activity on node) networks. These types of networks seem to militate against manual drafting for large projects, because drawing and filling in of the many node boxes is very time consuming, when compared to the drafting of arrow or AoA (activity on arrow) diagrams.

However, the big advantage of the AoN diagram is the substitution of node numbers by activity numbers. This clearly simplifies the numbering system and enables activities to be added or changed without affecting the numbers of the other activities. Indeed most computer programs add the activity numbers automatically as the data is entered.

There is no reason therefore why a simplified form of AoN network cannot be used in the manual drafting process to give the same benefit as an arrow diagram. A selected number of the arrow (AoA) diagram examples given in Chapters 12 and 18 have therefore been augmented by these simplified precedence diagrams, in the hope that the important part of network analysis, the initial drafting, will be carried out. Unfortunately the description of the activities will have to be written into the nodes, which will usually reduce the number of activities that can be accommodated on a sheet of paper when compared with an arrow diagram. A 'marriage' of the two methods, called the 'Lester' diagram is given in Chapter 13.

At the time of writing, Earned Value Analysis (EVA) has still not been fully embraced by certain sections of industry. One reason for this may be the jargon associated with this technique. When we developed our own EVA system at Foster Wheeler as far back as 1978 we used the simple terms of Actual Cost, Planned Cost and Earned Value. Unfortunately the American CSCSC system introduced such terms as ACWP, BCWS and BCWP which often generated groans from students and rejection from practitioners. It is gratifying to note therefore that the campaign to eradicate these abbreviations has prompted the British Standards Institution and the Association for Project Management to give prominence to the original English words. To encourage this welcome trend, the terms used in EVA methods in this book are in English instead of jargon.

Since publication of the third edition, the APMP examination has undergone a number of changes. In order to meet the new requirements for

paper 2 of the examination, some new topics have been included in this edition and a number of topics have been enhanced. However, no attempt has been made to include the 'soft' topics such as team building and motivation, which, while important, are really part of good general management and are certainly not exclusive to project management.

A number of chapters have been rewritten and their order rearranged to reflect as far as possible the sequence in which the various techniques are carried out when managing a project.

A. Lester

Preface to the third edition

The shortest distance between two points is a straight line

Euclid

The longest distance between two points is a shortcut

Lester

The first two editions of this book dealt primarily with producing planning networks and control systems for all types of projects, whether large or small, complex or simple.

In the last two paragraphs of the second edition, reference was made to other project management skills, emphasizing that planning and monitoring systems were only part of the project manager's armoury. The purpose of this book, therefore, is to explain what some of these other parts are. It was not, however, the intention to produce a comprehensive book on project management, but merely to update the previous edition, adding such sections as were considered to be more closely related to project management than general management.

An examination of courses on project management will reveal that they cover two types of skills:

- 1 *Soft skills* such as investment appraisal, communication, team selection, team building, motivation, conflict management, meetings, configuration management and quality management.
- 2 *Hard skills* such as project organization, project evaluation, project planning, cost control, monitoring, risk management and change management.

As the first two editions already contained such hard skills as project planning and cost control, it seemed logical to only add those skills which would virtually turn the book into a Hard Skill Manual. This, it is hoped, will be of maximum value to readers who have learnt the soft skills through past experience or from the more general management courses including the outward-bound management courses, so popular with up and coming managers.

The original text has been updated where considered necessary, including the list of the currently available project management software programs, which are however being themselves updated constantly. One important change is the substitution of the description of the Primavera P3 program by the Hornet Windmill program. The reason for this change is that while Primavera P3 is still an excellent project tool, the Hornet Windmill now includes an integrated SMAC cost control system which can accept and print both precedence and arrow diagrams and update progress on them directly and automatically from the SMAC returns. Unfortunately, the stipulated book size did not allow space for both, especially as the chapter on MS Project had to be included, simply because after being ‘bundled’ with Microsoft Office, it is now, despite its limitations, so widely used.

When the first edition was written in 1982, the use of arrow diagrams or Activity on Arrow (AoA) diagrams was the generally used method of drafting networks. By the time the second edition was published, precedence diagrams or Activity on Node (AoN) diagrams were already well established, mainly due to the proliferation of relatively inexpensive so called project management computer programs. While AoN has a number of advantages over AoA, it still has two serious drawbacks:

- 1 When producing the first draft of the network by hand, (something which should always be done, especially on large projects), the AoN takes up considerably more space and therefore restricts the size of network which can be drawn on one sheet of A1 or A0 paper (the standard size of a CP network).
- 2 When the network is subsequently reproduced by the computer, the links, which are often drawn either horizontally or vertically to miss the node boxes, are sometimes so close together, that they merge into a thick line from which it is virtually impossible to establish where a dependency comes from or where it goes. As tracing the dependencies is the heart of network analysis, this reduces the usefulness of the network diagram.

Because of these disadvantages, the AoA method was generally retained for this third edition, especially as the new ‘Lester’ diagram described in

Chapter 2 enables the advantages of both the AoA and AoN configuration to be combined to give the best of both worlds. After absorbing the fascinating capabilities of the various computer programs, there is one important message that the author would like to ‘bring across’. This is, that in all cases the network should be roughed out *manually* with the project team *before* using the computer. The thinking part of project planning cannot be left to a machine.

A. Lester

Preface to the second edition

It is nearly 10 years since the first edition of this book was published, so that an update is long overdue. Many of the reviewers of the first edition expressed the opinion that the author was more than a little antagonistic to computerized networks. In that, they were absolutely correct. The book was written during a period when mainframe machines were still largely used and micros had only just arrived on the scene. The problems, delays and useless paper disgorged by the mainframe computers nearly killed network analysis as a project control tool. Indeed, several large companies abandoned the system altogether. The book was therefore written to show that critical path methods and computerization were *not* synonymous – indeed, compared to the time taken by the laborious business of preparing input data sheets and punched cards, the manual method of analysis was far quicker. No apologies are therefore made for the first edition.

Now, however, the personal computer (PC) can be found in nearly all planning offices and many sites. The punched card has been replaced by the keyboard, the test printout by the VDU and the punchgirl by the planner himself. In addition, specialist software houses have produced sophisticated programs (frequently marketed as Project Management Systems) which enable the planner or project manager to see at a glance the effect of a proposed change in logic or time, and produce at the end a vast range of outputs in tabular, bar chart, pie chart or histogram format, often in colour.

It was necessary, therefore, to modify or (in some cases) completely rewrite several chapters of this book to bring the text up to date. For that reason, it was decided to describe one of the better-known computer programs in some detail, but the danger with computer systems is that they get improved and enhanced year after year, so that even the system described may be out of date in its present form within a year of publication.

The bulk of the book, however, is unaltered, since the principles have not changed and an understanding of the basic rules is still necessary to appreciate the usefulness of CPM. Equally, the author still believes that manual analysis of a reasonably sized network when carried out by an experienced practitioner is almost as fast as computerized analysis, and is not subject to power failure or data loss!

Although the NEDO report partially reproduced in Chapter 8 dates back to 1976 when planning was still bedevilled by vast programs using mainframe computers, its inclusion in this edition is still valid, since it shows, above all, that simple planning techniques can be used successfully on even large contracts. This statement is as true today as it was in the mid-1970s.

Reference is made in Chapter 4 to project management systems. These are, of course, mainly computer based planning systems, and while planning is an important part of project management it generally only takes up a small proportion of the project manager's time.

It is relatively easy to produce a program and a host of attractive and informative computer print-outs, but the main task of a project manager is to ensure that the planned dates are, in fact, met or nearly met. This involves a combination of technical expertise, knowledge of construction techniques, the ability to inspire the members of the project team, communication skills, political and diplomatic 'nous' commercial and contractual experience, the capacity to reach a decision from often conflicting 'expert' advice, and the application of every known method of persuasion.

The planning and monitoring systems are therefore, only an aid – albeit an important one – to the project manager.

A. Lester

Preface to the first edition

Critical path methods were first developed in 1958 almost simultaneously by the CEGB in England and the US Navy and Du Ponts in the United States of America.

Since then, critical path methods under the name of CPM, CPA and PERT have been further developed and used successfully as planning aids in a large number of construction and manufacturing organizations for diverse purposes, all over the world.

As a management tool, especially in project management of large capital construction projects, network techniques are unsurpassed, provided – and this is a very important proviso – the activities have been arranged in a logical, practical and easily identifiable manner by people who know the disciplines and problems involved. Unfortunately, there are numerous instances where contractors believe that by merely producing sophisticated computer-analysed networks, they improve their control and increase the chances of completing on time. The fallacy of this belief is borne out by a recent report published by the National Economic Development Office (NEDO) which compared, among other factors, the planning techniques on eighteen construction sites in the UK, Europe and America. Extracts of this report are given in Chapter 8.

It is always dangerous to isolate individual facets of a project from the overall jigsaw of problems, and while it is obviously unrealistic to attribute all successes or failures of a project to good or bad planning, there is no doubt that planning has a considerable influence on the final result.

In areas where labour disputes are not the main cause of delay, good planning has a direct effect on timely completion, since materials and drawings arrive on site in good time, and the major construction sequences are

analysed and firmed up in advance, so that the correct plant and adequate manpower is at hand when required.

Where labour problems are the main disruptive factor, the indirect effect of good planning is frequently overlooked, for if the materials, drawings and access were available, bonuses could be achieved and labour unrest largely avoided.

The NEDO report is of particular interest in that the conclusions reached regarding planning are in line with the writer's experience, i.e. the importance of planning is generally accepted but the success of the planning effort is enhanced by the speed of response and ease of comprehension, rather than the size or sophistication of the network. If the basic network has been wrongly conceived, all the analysis, whether manual or computerized, is just so much waste of paper. Once an error has been found it can be fairly easily rectified manually, but when a computer has been used, the prodigious volume of paper that has – or is threatened – to be wasted could well deter a revision to the network being carried out.

Most management courses run by Universities, Polytechnics, Management Consultants, Industrial Training Boards or professional bodies incorporate at least one session dealing with network analysis as a planning tool. However, few of these courses can do more than introduce the student to the basic principles and give him the opportunity to draw and analyse a few very small networks either manually or by computer.

The object of this book is to develop the subject further with examples of real situations showing the short cuts and pitfalls.

A. Lester

Foreword to the first edition

*by Geoffrey Trimble, Professor of Construction Management,
University of Technology, Loughborough*

A key word in the title of this book is 'control'. This word, in the context of management, implies the observation of performance in relation to plan and the swift taking of corrective action when the performance is inadequate. In contrast to many other publications which purport to deal with the subject, the mechanism of control permeates the procedures that Mr Lester advocates. In some chapters, such as that on Manual and Computer Analysis, it is there by implication. In others, such as that on Cost Control, it is there in specific terms.

The book, in short, deals with real problems and their real solutions. I commend it therefore both to students who seek to understand the subject and to managers who wish to sharpen their performance.

Acknowledgements

The author and publishers would like to make acknowledgement to the following for their help and cooperation in the preparation of this book.

The National Economic Development Office for permission to reproduce the relevant section of their report 'Engineering Construction Performance Mechanical & Electrical Engineering Construction, EDC, NEDO December 1976'.

Foster Wheeler Power Products Limited for assistance in preparing the text and manuscripts and permission to utilize the network diagrams of some of their contracts.

Mr P. Osborne for assistance in producing some of the computerized examples.

Claremont Controls Limited, Suite 43, Wansbeck Business Centre, Rotary Parkway, Ashington, Northumberland NE63 8QZ, for the description and diagrams of their Hornet Windmill project management software.

Microsoft Ltd. for permission to use some of the screen dumps of MS Project 98.

Extracts from BS 6079: 1996 are reproduced with the permission of BSI under licence No. 2003DH0199. Complete editions of the standards are obtainable by post from BSI Customer Services, 389 Chiswick High Road, London W4 4AL. Tel. 44(0)20 8996 9001.

WPMC for some of the diagrams.

Acknowledgements

A. P. Watt for permission to quote the first verse of Rudyard Kipling's poem, 'The Elephant's Child'.

Daimler Chrysler for permission to use their diagram of the Mercedes-Benz 190 car.

Automobile Association for the diagram of an engine.

1

Project definition

Project definition

Many people and organizations have defined what a project is, or should be, but probably the most authoritative definition is that given in BS 6079 'Guide to Project Management'.

This states that a project is:

'A unique set of co-ordinated activities, with definite starting and finishing points, undertaken by an individual or organization to meet specific objectives within defined schedule, cost and performance parameters.'

The next question that can be asked is 'Why does one need project management?' What is the difference between project management and management of any other business or enterprise? Why has project management taken off so dramatically in the last twenty years?

The answer is that project management is essentially management of change, while running a functional or ongoing business is managing a continuum or 'business-as-usual'.

Project management is not applicable to running a factory making sausage pies, but it will be the right system when there is a requirement to relocate the factory, build an extension, or produce a different product requiring new machinery, skills, staff training and even marketing techniques.

As stated in the definition, a project has a definite starting and finishing point and must meet certain specified objectives.

Broadly these objectives, which are usually defined as part of the business case and set out in the project brief, must meet three fundamental criteria:

- 1 The project must be completed on time;
- 2 The project must be accomplished within the budgeted cost;
- 3 The project must meet the prescribed quality requirements.

These criteria can be graphically represented by the well-known project triangle (Figure 1.1). Some organizations like to substitute the word 'quality' with 'performance', but the principle is the same – the operational requirements of the project must be met, and met safely.

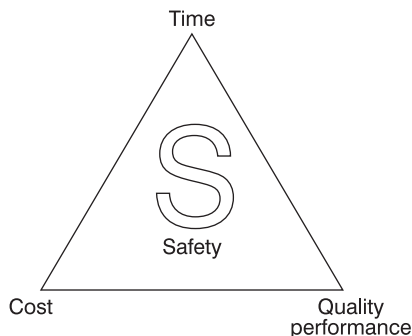


Figure 1.1

In certain industries like airlines, railways and mining etc. the fourth criterion, safety, is considered to be equally, if not more important. In these organizations, the triangle can be replaced by a diamond now showing the four important criteria (Figure 1.2).

The order of priority given to any of these criteria is not only dependent on the industry, but also on the individual project. For example, in designing and constructing an aircraft, motor car or railway carriage, safety must be paramount. The end product may cost more than budgeted, may be late in going into service and certain quality requirements in terms of comfort may

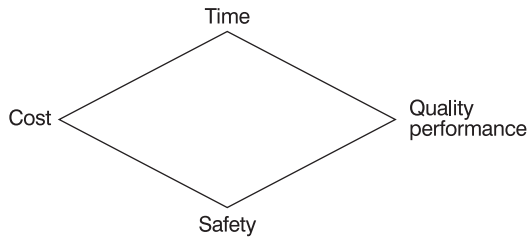


Figure 1.2

have to be sacrificed, but under no circumstances can safety be compromised. Aeroplanes, cars and railways *must* be safe under all operating conditions.

The following (rather obvious) examples show where different priorities on the project triangle (or diamond) apply.

Time bound project

A scoreboard for a prestigious tennis tournament must be finished in time for the opening match, even if it costs more than anticipated and the display of some secondary information, such as the speed of the service, has to be abandoned. In other words, cost and performance may have to be sacrificed to meet the unalterable starting date of the tournament.

(In practice, the increased cost may well be a matter of further negotiation and the temporarily delayed display can usually be added later during the non-playing hours.)

Cost bound project

A local authority housing development may have to curtail the number of housing units and may even overrun the original construction programme, but the project cost cannot be exceeded, because the housing grant allocated by central government for this type of development has been frozen at a fixed sum. Another solution to this problem would be to reduce the specification of the internal fittings instead of reducing the number of units.

Performance (quality) bound project

An armaments manufacturer has been contracted to design and manufacture a new type of rocket launcher to meet the client's performance specification in terms of range, accuracy and rate of fire. Even if the delivery has to be delayed

to carry out more tests and the cost has increased, the specification must be met. Again if the weapons were required during a war, the specification might be relaxed to get the equipment into the field as quickly as possible.

Safety bound project

Apart from the obvious examples of public transport given previously, safety is a factor that is required by law and enshrined in the Health & Safety at Work Act.

Not only must safe practices be built into every project, but constant monitoring is an essential element of a safety policy. To that extent it could be argued that *all* projects are safety bound, since if it became evident after an accident that safety was sacrificed for speed or profitability, some or all of the project stakeholders could find themselves in real trouble, if not in jail.

A serious accident which may kill or injure people will not only cause anguish among the relatives, but, while not necessarily terminating the project, could very well destroy the company. For this reason the 'S' symbol when shown in the middle of the project management triangle gives more emphasis of its importance (see Figure 1.1).

It can be seen therefore that the priorities can change with the political or commercial needs of the client even within the life cycle of the project, and the project manager has to constantly evaluate these changes to determine the new priorities. Ideally, all the main criteria should be met (and indeed on many well-run projects, this is the case), but there are times when the project manager, with the agreement of the sponsor or client, has to take difficult decisions to satisfy the best interests of most, if not all, the stakeholders.

2

Business case

Before embarking on a project, it is clearly necessary to show that there will be a benefit either in terms of money or service or both. The document which sets out the main advantages and parameters of the project is called the *Business Case* and is (or should be) produced by either the client or the sponsor of the project who in effect becomes the owner of the document.

A business case in effect outlines the ‘why’ and ‘what’ of the project as well as making the financial case by including the investment appraisal.

As with all documents, a clear procedure for developing the business case is highly desirable and the following headings give some indication of the subjects to be included:

- 1 Why is the project required?
- 2 What are we trying to achieve?
- 3 What are the deliverables?
- 4 What is the anticipated cost?
- 5 How long will it take to complete?
- 6 What quality standards must be achieved?
- 7 What are the performance criteria?
- 8 What are Key Performance Indicators (KPI)?

- 9 What are the main risks?
- 10 What are success criteria?
- 12 Who are the main stakeholders?

In addition any known information such as location, key personnel, resource requirements etc. should be included so that the recipients, usually a board of directors, are in a position to accept or reject the case for carrying out the project.

Investment appraisal

The investment appraisal, which is part of the business case, will, if properly structured, improve the decision-making process regarding the desirability or viability of the project. It should have examined all the realistic options before making a firm recommendation for the proposed case. The investment appraisal must also include a cost/benefit analysis and take into account all the relevant factors such as:

- Capital costs, operating costs, overhead costs
- Support and training costs
- Dismantling and disposal costs
- Expected residual value (if any)
- Any cost savings which the project will bring
- Any benefits which cannot be expressed in monetary terms

To enable some of the options to be compared, the payback, return on capital, net present value and anticipated profit must be calculated. In other words, the project viability must be established.

Project viability

1 Return on investment (ROI)

The simplest way to ascertain whether the investment in a project is viable is to calculate the return on investment (ROI).

If a project investment is £10 000, and gives a return of £2000 per year over 7 years,

$$\begin{aligned}\text{the average return/year} &= \frac{(7 \times £2000) - £10\,000}{7} \\ &= \frac{£4000}{7} = £571.4.\end{aligned}$$

The return on the investment, usually given as a percentage, is the average return over the period considered $\times 100$, divided by the original investment, i.e.

$$\begin{aligned}\text{return on investment \%} &= \frac{\text{average return} \times 100}{\text{investment}} \\ &= \frac{£571.4 \times 100}{£10\,000} = 5.71\%.\end{aligned}$$

This calculation does not, however, take into account the cash flow of the investment which in a real situation may vary year by year.

2 Net Present Value

As the value of money varies with time due to the interest it could earn if invested in a bank or other institution, the actual cash flow must be taken into account to obtain a realistic measure of the profitability of the investment.

If £100 were invested in a bank earning an interest of 5%

The value in 1 year would be $£100 \times 1.05 = £105$

The value in 2 years would be $£100 \times 1.05 \times 1.05 = £110.25$

The value in 3 years would be $£100 \times 1.05 \times 1.05 \times 1.05 = £115.76$

It can be seen therefore that, today, to obtain £115.76 in 3 years it would cost £100. In other words, the present value of £115.76 is £100.

Another way of finding the present value (PV) of £115.76 is to divide it by $1.05 \times 1.05 \times 1.05$ or 1.157, for

$$\frac{115.76}{1.05 \times 1.05 \times 1.05} = \frac{115.76}{1.157} = £100.$$

If instead of dividing the £115.76 by 1.157, it is multiplied by the inverse of 1.157, one obtains the same answer, since

$$£115.76 \times \frac{1}{1.157} = £115.76 \times 0.8638 = £100.$$

The 0.8638 is called the discount factor or Present Value Factor and can be quickly found from discount factor tables, a sample of which is given in Figure 2.1.

Table A Present value of £1

Years Hence	1%	2%	4%	6%	8%	10%	12%	14%	15%	16%	18%	20%	22%	24%	25%	26%	28%	30%	35%	40%	45%	50%
1	0.990	0.980	0.962	0.943	0.926	0.909	0.895	0.877	0.870	0.862	0.847	0.833	0.820	0.806	0.800	0.794	0.781	0.769	0.741	0.714	0.690	0.667
2	0.980	0.961	0.925	0.890	0.857	0.826	0.797	0.769	0.756	0.743	0.718	0.694	0.672	0.650	0.640	0.630	0.610	0.592	0.549	0.510	0.476	0.444
3	0.971	0.942	0.889	0.840	0.794	0.751	0.712	0.675	0.658	0.641	0.609	0.579	0.551	0.524	0.512	0.500	0.477	0.455	0.406	0.364	0.328	0.296
4	0.961	0.924	0.855	0.792	0.735	0.683	0.636	0.592	0.572	0.552	0.516	0.482	0.451	0.423	0.410	0.397	0.373	0.350	0.301	0.260	0.226	0.198
5	0.951	0.906	0.822	0.747	0.681	0.621	0.567	0.519	0.497	0.476	0.437	0.402	0.370	0.341	0.328	0.315	0.291	0.269	0.223	0.186	0.136	0.132
6	0.942	0.888	0.790	0.705	0.630	0.564	0.507	0.456	0.432	0.410	0.370	0.335	0.303	0.275	0.262	0.250	0.227	0.207	0.165	0.133	0.108	0.088
7	0.933	0.871	0.760	0.665	0.583	0.513	0.452	0.400	0.376	0.354	0.314	0.279	0.249	0.222	0.210	0.198	0.178	0.159	0.122	0.095	0.074	0.059
8	0.923	0.853	0.731	0.627	0.540	0.467	0.404	0.351	0.327	0.305	0.266	0.233	0.204	0.179	0.168	0.157	0.139	0.123	0.091	0.068	0.051	0.039
9	0.914	0.837	0.703	0.592	0.500	0.424	0.361	0.308	0.284	0.263	0.225	0.194	0.167	0.144	0.134	0.125	0.108	0.094	0.067	0.048	0.035	0.026
10	0.905	0.820	0.676	0.558	0.463	0.386	0.322	0.270	0.247	0.227	0.191	0.162	0.137	0.116	0.107	0.099	0.085	0.073	0.050	0.035	0.024	0.017
11	0.896	0.804	0.650	0.527	0.429	0.350	0.287	0.237	0.215	0.195	0.162	0.135	0.112	0.094	0.086	0.079	0.066	0.056	0.037	0.025	0.017	0.012
12	0.887	0.788	0.625	0.497	0.397	0.319	0.257	0.208	0.187	0.168	0.137	0.112	0.092	0.076	0.069	0.062	0.052	0.043	0.027	0.018	0.012	0.008
13	0.879	0.773	0.601	0.469	0.368	0.290	0.229	0.182	0.163	0.145	0.116	0.093	0.075	0.061	0.055	0.050	0.040	0.033	0.020	0.013	0.008	0.005
14	0.870	0.758	0.577	0.442	0.340	0.263	0.205	0.160	0.141	0.125	0.099	0.078	0.062	0.049	0.044	0.039	0.032	0.025	0.015	0.009	0.006	0.003
15	0.861	0.743	0.555	0.437	0.345	0.239	0.183	0.140	0.123	0.108	0.084	0.065	0.051	0.040	0.035	0.031	0.025	0.020	0.011	0.005	0.004	0.002
16	0.853	0.728	0.534	0.394	0.292	0.218	0.163	0.123	0.107	0.093	0.071	0.054	0.042	0.032	0.028	0.025	0.019	0.015	0.008	0.005	0.003	0.002
17	0.844	0.714	0.523	0.371	0.270	0.198	0.146	0.108	0.093	0.080	0.060	0.045	0.034	0.026	0.023	0.020	0.015	0.012	0.006	0.003	0.002	0.001
18	0.836	0.700	0.494	0.350	0.250	0.180	0.130	0.095	0.081	0.069	0.051	0.038	0.028	0.021	0.018	0.016	0.012	0.009	0.005	0.002	0.001	0.001
19	0.828	0.686	0.475	0.331	0.232	0.164	0.116	0.083	0.070	0.060	0.043	0.031	0.023	0.017	0.014	0.012	0.009	0.007	0.003	0.002	0.001	
20	0.820	0.673	0.456	0.312	0.215	0.149	0.104	0.073	0.061	0.051	0.037	0.026	0.019	0.014	0.012	0.010	0.007	0.005	0.002	0.001	0.001	
21	0.811	0.660	0.439	0.294	0.199	0.135	0.095	0.064	0.053	0.044	0.031	0.022	0.015	0.011	0.009	0.008	0.006	0.004	0.002	0.001		
22	0.803	0.647	0.422	0.278	0.184	0.123	0.083	0.056	0.046	0.038	0.026	0.018	0.013	0.009	0.007	0.006	0.004	0.003	0.001	0.001		
23	0.795	0.634	0.406	0.262	0.170	0.112	0.074	0.049	0.040	0.035	0.022	0.015	0.010	0.007	0.006	0.005	0.005	0.002	0.001			
24	0.788	0.622	0.390	0.247	0.158	0.102	0.066	0.043	0.035	0.028	0.019	0.013	0.008	0.006	0.005	0.004	0.003	0.002	0.001			
25	0.780	0.610	0.375	0.235	0.146	0.092	0.059	0.038	0.030	0.024	0.016	0.010	0.007	0.005	0.004	0.003	0.002	0.001	0.001			
26	0.772	0.598	0.361	0.220	0.135	0.084	0.053	0.033	0.026	0.021	0.014	0.009	0.006	0.004	0.003	0.002	0.002	0.001	0.001			
27	0.764	0.586	0.347	0.207	0.125	0.076	0.047	0.029	0.023	0.018	0.011	0.007	0.005	0.003	0.002	0.002	0.001	0.001	0.001			
28	0.757	0.574	0.333	0.196	0.116	0.069	0.042	0.026	0.020	0.016	0.010	0.006	0.004	0.002	0.002	0.002	0.001	0.001	0.001			
29	0.749	0.563	0.321	0.185	0.107	0.063	0.037	0.022	0.017	0.014	0.008	0.005	0.003	0.002	0.002	0.001	0.001	0.001	0.001			
30	0.742	0.552	0.308	0.174	0.099	0.057	0.033	0.025	0.015	0.012	0.007	0.004	0.003	0.002	0.001	0.001	0.001	0.001	0.001			
40	0.672	0.453	0.208	0.097	0.046	0.022	0.011	0.005	0.004	0.003	0.001	0.001										
50	0.608	0.372	0.241	0.054	0.021	0.009	0.005	0.004	0.001	0.001												

Figure 2.1

It will be noticed from these tables that 0.8638.5 is the PV factor for a 5% return after 3 years. The PV factor for a 5% return after 2 years is 0.9070 or

$$\frac{1}{1.05 \times 1.05} = \frac{1}{1.1025} = 0.9070.$$

In the above example the income (5%) was the same every year. In most projects, however, the projected annual net cash flow (income minus expenditure) will vary year by year and to obtain a realistic assessment of the Net Present Value (NPV) of an investment, the net cash flow must be discounted separately for every year of the projected life.

The following example will make this clear.

<i>Year</i>	<i>Income</i> £	<i>Discount</i> <i>rate</i>	<i>Discount</i> <i>factor</i>	<i>NPV</i> £
1	10 000	5%	1/1.05 = 0.9523	10 000 × 0.9523 = 9 523.8
2	11 000	5%	1/1.05 ² = 0.9070	10 000 × 0.9070 = 9 070.3
3	12 000	5%	1/1.05 ³ = 0.8638	12 000 × 0.8638 = 10 365.6
4	12 000	5%	1/1.05 ⁴ = 0.8227	12 000 × 0.8227 = 9 872.4
Total	45 000			39 739.1

One of the main reasons for finding the NPV is to be able to compare the viability of competing projects or different repayment modes. Again an example will demonstrate the point.

A company decides to invest £12 000 for a project which is expected to give a total return of £24 000 over the 6 years. The discount rate is 8%.

There are two options of receiving the yearly income.

1	£6000 for years 1 & 2 = £12 000	2	£5000 for years 1, 2, 3 & 4 = £20 000
	£4000 for years 2 & 3 = £8 000		£2000 for years 5 & 6 = £4 000
	£2000 for years 5 & 6 = £4 000		
Total	£24 000		£24 000

The DCF method will quickly establish which is the most profitable option to take as will be shown in the following table.

<i>Year</i>	<i>Discount factor</i>	<i>Cash flow A</i> £	<i>NPV A</i> £	<i>Cash flow B</i> £	<i>NPV B</i> £
1	$1/1.08 = 0.9259$	6 000	5 555.40	5 000	4 629.50
2	$1/1.08^2 = 0.8573$	6 000	5 143.80	5 000	4 286.50
3	$1/1.08^3 = 0.7938$	4 000	3 175.20	5 000	3 969.00
4	$1/1.08^4 = 0.7350$	4 000	2 940.00	5 000	3 675.00
5	$1/1.08^5 = 0.6806$	2 000	1 361.20	2 000	1 361.20
6	$1/1.08^6 = 0.6302$	2 000	1 260.40	2 000	1 260.40
Total		24 000	19 437.00	24 000	19 181.50

Clearly A gives the better return and after deducting the original investment of £12 000, the net discounted return for A = £7 437.00 and for B = £7 181.50.

The mathematical formula for calculating the NPV is as follows:

If NPV = Net Present Value

r = the interest rate

n = number of years the project yields a return

B1, B2, B3 etc. = the annual net benefits for years 1, 2 and 3 etc.

NPV for year 1 = $B1/(1 + r)$

for year 2 = $B1/(1 + r) + B2/(1 + r)^2$

for year 3 = $B1/(1 + r) + B2/(1 + r)^2 + B3/(1 + r)^3$ and so on

If the annual net benefit is the same for each year for n years, the formula becomes

$$NPV = B/(1 + r)^n$$

As explained previously, the discount rate can vary year by year, so that the rate relevant to the year for which it applies must be used when reading off the discount factor table.

Two other financial calculations need to be carried out to enable a realistic decision to be taken as to the viability of the project.

3 Payback

Payback is the period of time it takes to recover the capital outlay of the project, having taken into account all the operating and overhead costs during

this period. Usually this is based on the undiscounted cash flow. A knowledge of the payback is particularly important when the capital must be recouped as quickly as possible as would be the case in short-term projects or projects whose end products have a limited appeal due to changes in fashion, competitive pressures or alternative products. Payback is easily calculated by summing all the net incomes until the total equals the original investment, e.g. if the original investment is £600 000, and the net income is £75 000 per year for the next ten years, the payback is $£600\,000/£75\,000 = 8$ years.

4 Internal Rate of Return (IRR)

It has already been shown that the higher the discount rate (usually the cost of borrowing) of a project, the lower the Net Present Value (NPV). There must therefore come a point at which the discount rate is such that the NPV becomes zero. At this point the project ceases to be viable and the discount rate at this point is the Internal Rate of Return (IRR). In other words it is the discount rate at which the NPV is 0.

While it is possible to calculate the IRR by trial and error, the easiest method is to draw a graph as shown in Figure 2.2.

The horizontal axis is calibrated to give the discount rates from 0 to any chosen value, say 20%. The vertical axis represents the NPVs which are + above the horizontal axis and – below.

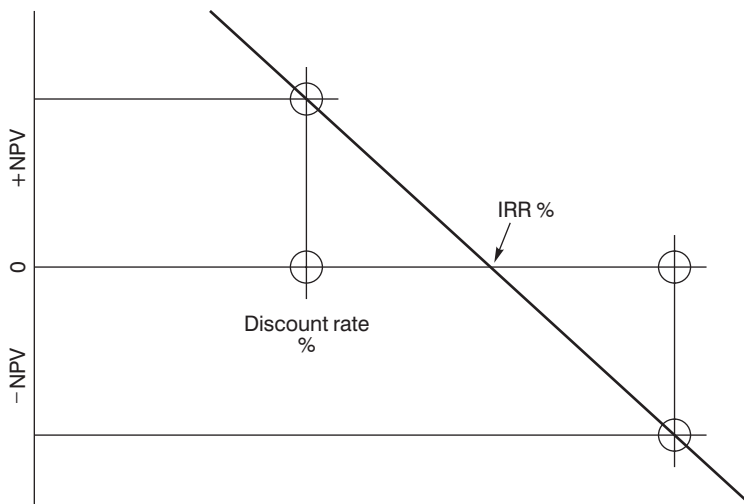


Figure 2.2 Internal Rate of Return (IRR) graph

By choosing two discount rates (one low and one high) two NPVs can be calculated for the same envisaged net cash flow. These NPVs (preferably one +ve and one -ve) are then plotted on the graph and joined by a straight line. Where this line cuts the horizontal axis, i.e. where the NPV is zero, the IRR can be read off.

The basic formulae for the financial calculations are given in Figure 2.3.

Investment appraisal definitions

NPV (Net Present Value)	=	Summation of PV's – Original Investment
Net Income	=	Incoming moneys – Outgoing moneys
Payback Period	=	No. of years it takes for Net Income to equal Original Investment
Profit	=	Total Net Income – Original Investment
Average Return/Annum	=	$\frac{\text{Total Net Income}}{\text{No. of years}}$
Return on Investment %	=	$\frac{\text{Average Return} \times 100}{\text{Investment}}$ $= \frac{\text{Net Income} \times 100}{\text{No. of years} \times \text{Investment}}$

IRR (Internal Rate of Return) = % Discount Rate for NPV = 0

Cost/benefit analysis

Once the cost of the project has been determined, an analysis has to be carried out which compares these costs with the perceived benefits. The first cost/benefit analysis should be carried out as part of the business case investment appraisal, but in practice such an analysis should really be undertaken at the end of every phase of the life cycle to ensure that the project is still viable. The phase interfaces give management the opportunity to proceed with, or alternatively, abort the project if there is an unacceptable escalation in costs or a diminution of the benefits due to changes in market conditions such as a reduction in demand caused by political, economic, climatic, demographic or a host of other reasons.

It is relatively easy to carry out a cost/benefit analysis where there is a tangible deliverable producing a predictable revenue stream. Provided there is

an acceptable NPV, the project can usually go ahead. However, where the deliverables are intangible, such as better service, greater customer satisfaction, lower staff turnover, higher staff morale etc., there may be considerable difficulty in quantifying the benefits. It will be necessary in such cases to run a series of tests and reviews and assess the results of interviews and staff reports.

Similarly while the cost of redundancy payments can be easily calculated, the benefits in terms of lower staff costs over a number of years must be partially offset by lower production volume or poorer customer service. Where the benefits can only be realized over a number of years, a benefit profile curve as shown in Figure 2.3 should be produced, making due allowance for the NPV of the savings.

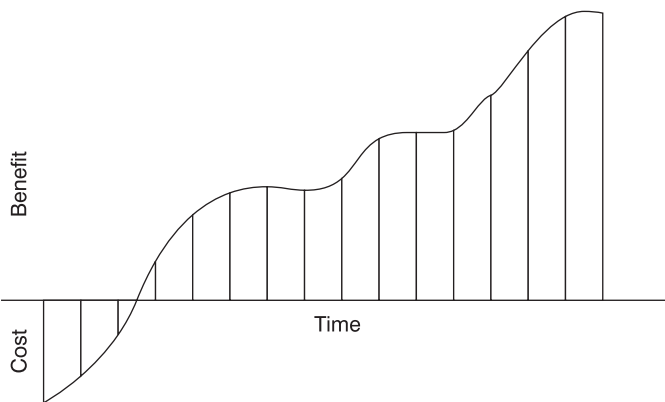


Figure 2.3

The following lists some of the benefits which have to be considered, from which it will be apparent that some will be very difficult to quantify in monetary terms.

- Financial
- Statutory
- Economy
- Risk reduction
- Productivity
- Reliability
- Staff morale
- Cost reduction

Safety
Flexibility
Quality
Delivery
Social

Stakeholder analysis

Almost anyone associated with a project can be termed a *stakeholder*. It is important therefore for the project manager to analyse this list of stakeholders and as far as possible categorize them into two main groups:

1 Direct stakeholders

This group includes the sponsor, client, project manager, the project team, construction or installation team, contractors and subcontractors, suppliers, consultants etc. In other words people or organizations directly involved or have a vested interest in all or some of the various phases of the project.

2 Indirect stakeholders

This group includes the support staff of an organization such as the accounts department, HR department, secretariat, management levels not directly involved in the project, environmental and political pressure groups and of course the families of the members of the project team and construction/installation team. On environmentally sensitive projects, the general public could be termed as indirect stakeholders.

Each group can then be split further into positive and negative stakeholders.

Positive stakeholders are concerned with the design and implementation of the project with the object of completing the project within the specified parameters of time, cost and quality/performance. They therefore include the sponsor, project manager and the project and construction/installation teams.

Negative stakeholders are those who either try to modify or delay the project or indeed prevent it from even starting. These are usually environmental or political pressure groups, trade unions or sections of the media who, though they may seem to be disruptive, must nevertheless be considered and given an opportunity to state their case. In some situations, statutory/regulatory authorities or even government agencies who have the power to issue or

withhold permits, access, wayleaves or other consents can be considered as negative stakeholders. The negotiations with such organizations and the subsequent agreements reached are an essential part of stakeholder analysis, but it must be borne in mind that any compromises reached must be approved by the client or sponsor.

All stakeholders, whether positive or negative, must be analysed to assess their contribution, influence or disruptive capabilities on the project and this will help the project manager to prioritize their needs and decide whether they should be embraced or treated with caution. Diplomacy and tact are essential when negotiating with potentially disruptive organizations and it is highly advisable to enlist experts in the discussion process. Most large organizations employ labour and public relations experts as well as lawyers well versed in dealing with difficult stakeholders and their services can be of enormous help to the project manager.

3

Organization structures

To manage a project, a company or authority has to set up a project organization, which can supply the resources for the project and service it during its life cycle.

There are three main types of project organizations:

- 1 Functional;
- 2 Matrix;
- 3 Project or task force.

Functional organization

This type of organization consists of specialist or functional departments each with their own departmental manager responsible to one or more directors. Such an organization is ideal for routine operations where there is little variation of the end product. Functional organizations are usually found where items are mass produced, whether they are motor cars or sausages. Each department is expert at its function and the interrelationship between them is well established. In this sense a functional organization is not a project-type organization at all and is only included because when small, individual, one-off projects have to be carried out, they may be given

to a particular department to manage. For projects of any reasonable size or complexity, it will be necessary to set up one of the other two types of organizations.

Matrix organization

This is probably the most common type of project organization, since it utilizes an existing functional organization to provide the human resources without disrupting the day-to-day operation of the department.

The personnel allocated to a particular project are responsible to a project manager for meeting the three basic project criteria, time, cost and quality. The departmental manager is, however, still responsible for their 'pay and rations' and their compliance with the department's standards and procedures, including technical competence and conformity to company quality standards. The members of this project team will still be working at their desks in their department, but will be booking their time to the project. Where the project does not warrant a full-time contribution, only those hours actually expended on the project will be allocated to it.

The advantages of a matrix organization are:

- 1 Resources are employed efficiently, since staff can switch to different projects if held up on any one of them;
- 2 The expertise built up by the department is utilized and the latest state-of-the-art techniques are immediately incorporated;
- 3 Special facilities do not have to be provided and disrupting staff movements are avoided;
- 4 The career prospects of team members are left intact;
- 5 The organization can respond quickly to changes of scope;
- 6 The project manager does not have to concern himself with staff problems.

The disadvantages are:

- 1 There may be a conflict of priorities between different projects;
- 2 There may be split loyalties between the project manager and the departmental manager due to the dual reporting requirements;
- 3 Communications between team members can be affected if the locations of the departments are far apart;
- 4 Executive management may have to spend more time to ensure a fair balance of power between the project manager and the department manager.

All the above problems can, however, be resolved if there is a good working relationship between the project manager and the department heads. At times both sides may have to compromise in the interests of the organization as a whole.

Project organization (task force)

From a project manager's point of view this is the ideal type of project organization, since with such a set up he has complete control over every aspect of the project. The project team will usually be located in one area which can be a room for a small project or a complete building for a very large one.

Lines of communication are short and the interaction of the disciplines reduces the risk of errors and misunderstandings. Not only are the planning and technical functions part of the team but also the project cost control and project accounting staff. This places an enormous burden and responsibility on the project manager, who will have to delegate much of the day-to-day management to special project coordinators whose prime function is to ensure a good communication flow and timely receipt of reports and feedback information from external sources.

On large projects with budgets often greater than £0.5 billion, the project manager's responsibilities are akin to those of a managing director of a medium-size company. Not only is he concerned with the technical and commercial aspects of the project, but has also to deal with the staff, financial and political issues, which are often more difficult to delegate.

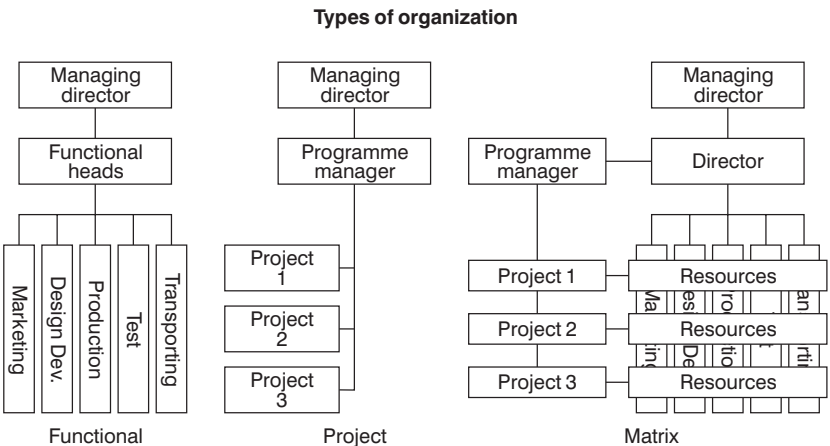


Figure 3.1

There is no doubt that for large projects a task force type of project organization is essential, but as with so many areas of business, the key to success lies with the personality of the project manager and his ability to inspire the project team to regard themselves as personal stakeholders in the project.

One of the main differences between the two true project organizations (matrix and task force) and the functional organization is the method of financial accounting. For the project manager to retain proper cost control during the life of the project, it is vital that a system of project accounting is instituted, whereby all incomes and expenditures, including a previously agreed overhead allocation and profit margin, are booked to the project as if it were a separate self-standing organization. The only possible exceptions are certain corporate financial transactions such as interest payments on loans taken out by the host organization and interest receipts on deposits from a positive cash flow.

Figure 3.1 shows a diagrammatic representation of the three basic project management organizations, Functional, Project (or Task Force) and Matrix.

4

Project life cycles

Most, if not all, projects go through a life cycle which varies with the size and complexity of the project. On medium to large projects the life cycle will generally follow the pattern which has been set out in BS 6079. This is:

- | | |
|------------------|---|
| 1 Concept | Basic ideas, business case, statement of requirements, scope; |
| 2 Feasibility | Tests for technical, commercial and financial viability, technical studies, investment appraisal, DCF etc.; |
| 3 Evaluation | Application for funds, stating risks, options, TCQ criteria; |
| 4 Authorization | Approvals, permits, conditions, project strategy; |
| 5 Implementation | Development design, procurement, fabrication, installation, commissioning; |
| 6 Completion | Performance tests, hand-over to client, post project appraisal; |
| 7 Operation | Revenue earning period, production, maintenance; |
| 8 Termination | Close-down, decommissioning, disposal. |

Items 7 and 8 are not usually included in a project life cycle where the project ends with the issue of an acceptance certificate after the performance tests have been successfully completed. Where these two phases are included, as, for example, with defence projects, the term '*extended project life cycle*' is often used.

The project life cycle of an IT project may be slightly different as the following list shows:

1 Feasibility	Definition, cost benefits, acceptance criteria, time and cost estimates;
2 Evaluation	Definitions of requirements, performance criteria, processes;
3 Function	Functional and operational requirements, interfaces, system design;
4 Authorization	Approvals, permits, firming up procedures;
5 Design and build	Detail design, system integration, screen building, documentation;
6 Implementation	Integration and acceptance testing, installation, training;
7 Operation	Data loading, support set-up, hand-over.

Running through the period of the life cycle are control systems and decision stages at which the position of the project is reviewed. The interfaces of the phases of the life cycle form convenient milestones for progress payments and reporting progress to top management, who can then make the decision to abort or provide further funding. In some cases the interface of the phases overlap, as in the case of certain design and construct contracts, where construction starts before the design is finished. This is known as concurrent engineering and is often employed to reduce the overall project programme.

As the word 'cycle' implies, the phases may have to be amended in terms of content, cost and duration as new information is fed back to the project manager and sponsor. Projects are essentially dynamic organizations which are not only specifically created to effect change, but are also themselves subject to change.

On some projects it may be convenient to appoint a different project manager at a change of phase. This is often done where the first four stages are handled by the development or sales department, who then hand the

project over to the operations department for the various stages of the implementation, and completion phases.

When the decommissioning and disposal is included, it is known as an extended life cycle, since these two stages could occur many years after commissioning and could well be carried out by a different organization.

Figure 4.1 shows three typical life cycles prepared by three different organizations. The first example from BS 6079 is a very simple generic life cycle consisting of only five basic phases. Some of these phases are subdivided in the next (APM) life cycle where ‘implementation’, shown in BS 6079, has been replaced by ‘design, contract & implementation’. The third life cycle shown as formulated by the Ministry of Defence clearly shows the phases required for a typical weapons system, where concept, feasibility and project definition are the responsibility of the MoD, design, development and production are carried out by the manufacturer, and in-service and disposal are the phases when the weapon is in the hands of the armed forces.

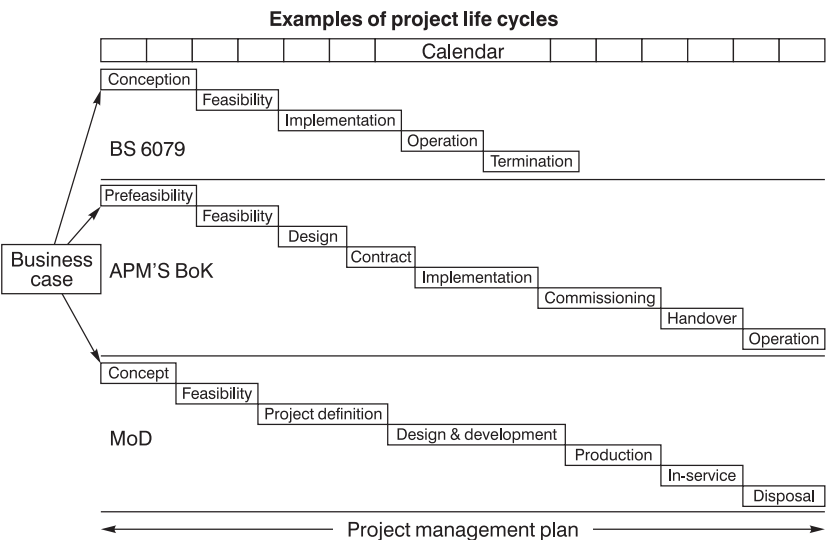


Figure 4.1

The diagram also shows a calendar scale over the top. While this is not strictly necessary, it can be seen that if the lengths of the bars representing the phases are drawn proportional to the time taken by the phases, such a presentation can be used as a high level reporting document, showing which

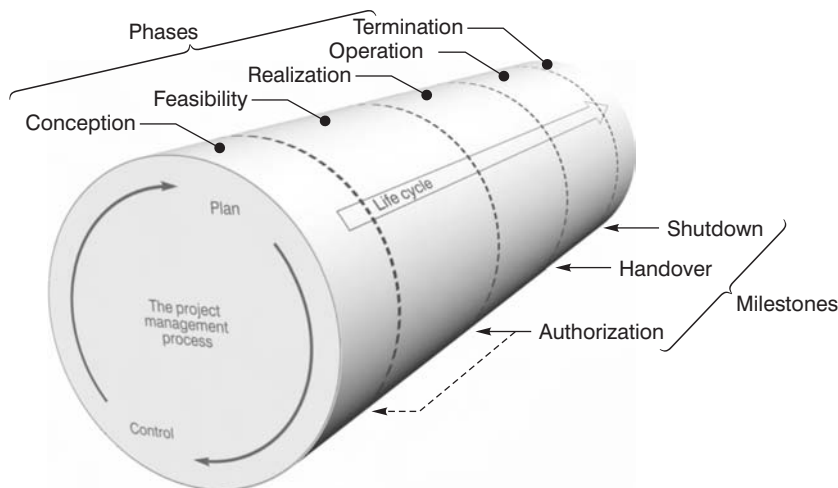


Figure 4.2 Project management life cycle

phases are complete or partially complete in relation to the original schedule.

The important point to note is that each organization should develop its own life cycle diagram to meet its particular needs. Where the life cycle covers all the phases from cradle to grave as it were, it is often called a *programme life cycle*, since it spans over the full programme of the deliverable. The term *project life cycle* is then restricted to those phases which constitute a project within the programme, e.g. the design, development and manufacturing periods.

Figure 4.2 shows how decision points or milestones (sometimes called trigger points or go, no-go gates) relate to the phases of a life cycle.

Figure 4.3 shows how the life cycle of the MoD project shown in Figure 4.1 could be split into the *Project life cycle*, i.e. the phases under the control of the Project Team (conception to production), the *Product life cycle*, the phases of

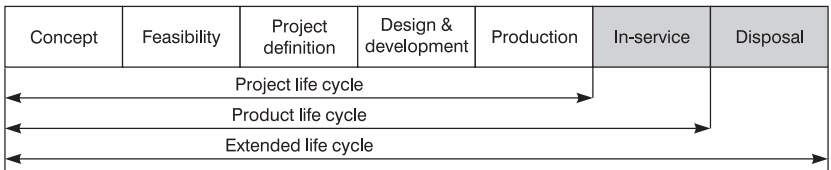


Figure 4.3 Life cycle of MoD project

interest to the sponsor, which now includes the in-service performance, and lastly the *Extended life cycle*, which includes disposal. From the point of view of the contractor, the *Project life cycle* may only include design and development and production. It can be seen therefore that there are no hard and fast rules where the demarcation points are as each organisation will define its own phases and life cycles to suit its method of working.

5

Work breakdown structures (WBS)

Before any meaningful programme can be produced, it is essential that careful thought is given to the number and size of networks required. Not only is it desirable to limit the size of network, but each 'block' of networks should be considered in relation to the following aspects:

- 1 The geographical location of the various portions or blocks of the project;
- 2 The size and complexity of each block;
- 3 The systems in each block;
- 4 The process or work being carried out in the block when the plant is complete;
- 5 The engineering disciplines required during the design and construction stage;
- 6 The erection procedures;
- 7 The stages at which individual blocks or systems have to be completed, i.e. the construction programme;
- 8 The site organization envisaged;
- 9 Any design or procurement priorities.

For convenience, a block can be defined as a *geographical process area within a project*, which can be easily identified, usually because it serves a specific function. The importance of

choosing the correct blocks, i.e. drawing the demarcation lines in the most advantageous way, cannot be overemphasized. This decision has an effect not only on the number and size of planning networks but also on the organization of the design teams and, in the case of large projects, on the organizational structure of the site management set-up.

Because of its importance, a guide is given below which indicates the type of block distribution which may be sensibly selected for various projects. The list is obviously limited, but it should not be too difficult to abstract some firm guidelines to suit the project under consideration.

1 Pharmaceutical factory

Block A Administration block (offices and laboratories)

Block B Incoming goods area, raw material store

Block C Manufacturing area 1 (pills)

Block D Manufacturing area 2 (capsules)

Block E Manufacturing area 3 (creams)

Block F Boiler house and water treatment

Block G Air-conditioning plant room and electrical distribution control room

Block H Finished goods store and dispatch

For planning purposes, general site services such as roads, sewers, fencing and guard houses can be incorporated into Block A or, if extensive, can form a block of their own.

2 New housing estate

Block A Low-rise housing area – North

Block B Low-rise housing area – East

Block C Low-rise housing area – South

Block D Low-rise housing area – West

Block E High-rise – Block 1

Block F High-rise – Block 2

Block G Shopping precinct

Block H Electricity substation

Obviously, the number of housing areas or high-rise blocks can vary with the size of the development. Roads and sewers and statutory services are part of their respective housing blocks unless they are constructed earlier as a separate contract, in which case they would form their own block or blocks.

3 Portland cement factory

- Block A Quarry crushing plant and conveyor
- Block B Clay pit and transport of clay
- Block C Raw meal mill and silos
- Block D Nodulizer plant and precipitators
- Block E Preheater and rotary kiln
- Block F Cooler and dust extraction
- Block G Fuel storage and pulverization
- Block H Clinker storage and grinding
- Block I Cement storage and bagging
- Block J, Administration, offices, maintenance workshops, lorry park

Here again, the road and sewage system could form a block on its own incorporating the lorry park.

4 Oil terminal

- Block A Crude reception and storage
- Block B Stabilization and desalting
- Block C Stabilized crude storage
- Block D NGL separation plant
- Block E NGL storage
- Block F Boiler and water treatment
- Block G Effluent and ballast treatment
- Block H Jetty loading
- Block J Administration block and laboratory
- Block K Jetty 1
- Block L Jetty 2
- Block M Control room 1
- Block N Control room 2
- Block P Control room 3

Here roads, sewers and underground services are divided into the various operational blocks.

5 Multistorey block of offices

- Block A Basement and piling work
- Block B Ground floor
- Block C Plant room and boilers

- Block D Office floors 1–4
- Block E Office floors 5–8
- Block F Lift well and service shafts
- Block G Roof and penthouse
- Block H Substation
- Block J Computer room
- Block K External painting, access road and underground services

Clearly, in the construction of a multistorey building, whether for offices or flats, the method of construction has a great bearing on the programme. There is obviously quite a different sequence required for a block with a central core – especially if sliding formwork is used – than with a more conventional design using reinforced concrete or structural steel columns and beams. The degree of precasting will also have a great influence on the split of the network.

6 Colliery surface reconstruction

- Block A Headgear and airlocks
- Block B Winding house and winder
- Block C Mine car layout and heapstead building
- Block D Fan house and duct
- Block E Picking belt and screen building
- Block F Wagon loading and bunkering
- Block G Electricity substation, switch room and lamp room
- Block H Administration area and amenities
- Block J Baths and canteen (welfare block)

Roads, sewers and underground services could be part of Block J or be a separate block.

7 Bitumen refinery

- Block A Crude line and tankage
- Block B Process unit
- Block C Effluent treatment and oil/water separator
- Block D Finished product tankage
- Block E Road loading facility, transport garage and lorry park
- Block F Rail loading facility and sidings
- Block G Boiler house and water treatment
- Block H Fired heater area

Block J Administration building, laboratory and workshop
Block K Substation
Block L Control room

Depending on size, the process unit may have to be subdivided into more blocks but it may be possible to combine K and L. Again, roads and sewers may be separate or part of each block.

8 Typical manufacturing unit

Block A Incoming goods ramps and store
Block B Batching unit
Block C Production area 1
Block D Production area 2
Block E Production area 3
Block F Finishing area
Block G Packing area
Block H Finished goods store and dispatch
Block J Boiler room and water treatment
Block K Electrical switch room
Block L Administration block and canteen

Additional blocks will, of course, be added where complexity or geographical location dictates this.

It must be emphasized that these typical block breakdowns can, at best, be a rough guide, but they do indicate the splits which are possible. When establishing the boundaries of a block, the main points given on page 25 must be considered.

The interrelationship and interdependence between blocks during the construction stage is, in most cases, remarkably small. The physical connections are usually only a number of pipes, conveyors, cables, underground services and roads. None of these offer any serious interface problems and should not, therefore, be permitted to unduly influence the choice of blocks. Construction restraints must, of course, be taken into account but they too must not be allowed to affect the basic block breakdown.

This very important point is only too frequently misunderstood. On a refinery site, for example, a delay in the process unit has hardly any effect on the effluent treatment plant except, of course, right at the end of the job.

In a similar way, the interrelationship at the design stage is often overemphasized. Design networks are usually confined to work in the various engineering departments and need not include such activities as planning and financial approvals or acceptance of codes and standards. These should preferably be obtained in advance by project management. Once the main flowsheets, plot plans and piping and instrument diagrams have been drafted (i.e. they need not even have been completed), design work can proceed in each block with a considerable degree of independence. For example, the tank farm may be designed quite independently of the process unit or the NGL plant, etc., and the boiler house has little effect on the administration building or the jetties and loading station.

In the case of a single building being divided into blocks, the roof can be designed and detailed independently of the other floors or the basement, provided, of course, that the interface operations such as columns, walls, stairwell, lift shaft and service ducts have been located and more or less finalized. In short, therefore, the choice of blocks is made as early as possible, taking into account all or most of the factors mentioned before, particular attention being given to design and construction requirements.

This split into blocks or work areas is, of course, taking place in practice in any design office or site, whether the programme is geared to it or not. One is, in effect, only formalizing an already well-proven and established procedure. Depending on size, most work areas in the design office are serviced by squads or teams, even if they only consist of one person in each discipline who looks after that particular area. The fact that on a small project the person may look after more than one area does not change the principle; it merely means that the team is half an operator instead of one.

On-site, the natural breakdown into work areas is even more obvious. Most disciplines on a site are broken down into gangs, with a ganger or foreman in charge, and, depending again on size and complexity, one or more gangs are allocated to a particular area or block. On very large sites, a number of blocks are usually combined into a complete administrative centre with its own team of supervisors, inspectors, planners, subcontract administrators and site engineers, headed by an area manager.

No difficulty should, therefore, be experienced in obtaining the cooperation of an experienced site manager when the type, size and number of blocks are proposed. Indeed, this early discussion serves as an excellent opportunity to involve the site team in the whole planning process, the details of which are added later. By that time, the site team is at least aware of the principles and

a potential communication gap, so frequently a problem with construction people, has been bridged.

Generic work breakdown structure

While such a breakdown into blocks is suitable for an engineering contract, a similar system can be used for any other type of project. By breaking the project down into discrete components or tasks, we create what is known as a work breakdown structure or WBS.

The choice of tasks incorporated in the WBS is best made by the project team drawing on their combined experience or engaging in a brainstorming session.

Once the main tasks have been decided upon, they can in turn be broken down into subtasks, which should be coded to fit in with the project cost coding system. This will greatly assist in identifying the whole string of relationships from overall operational areas down to individual tasks. For this reason the WBS is the logical starting point for subsequent planning networks. Another advantage is that a cost allocation can be given to each task in the WBS and, if required, a risk factor can be added. This will assist in building up the total project cost and creates a risk register for a subsequent, more rigorous risk assessment.

The object of all this is to be able to control the project by allocating resources (human, material and financial) and giving time constraints to each task. It is always easier to control a series of small entities which make up a whole, than trying to control the whole enterprise as one operation. What history has proven to be successful for armies, which are divided into divisions, regiments, battalions, companies and platoons, or corporations which have area organizations, manufacturing units and sales territories, is also true for projects, whether they are large or small, sophisticated or straightforward.

The tasks will clearly vary enormously with the type of project in both size and content, but by representing their relationship diagrammatically, a clear graphical picture can be created. This, when distributed to other members of the project team, becomes a very useful tool for disseminating information as well as a reporting medium to all stakeholders. As the main tasks are in effect the major project milestones, the WBS is an ideal instrument for reporting progress upwards to senior management and for this reason it is essential that the status of each task is regularly updated.

Table 5.1

Project risks			
Organization	Environment	Technical	Financial
Management	Legislation	Technology	Financing
Resources	Political	Contracts	Exchange rates
Planning	Pressure groups	Design	Escalation
Labour	Local customs	Manufacture	Financial stability of
Health and safety	Weather	Construction	(a) project
Claims	Emissions	Commissioning	(b) client
Policy	Security	Testing	(c) suppliers

As the WBS is produced in the very early stages of a project, it will probably not reflect all the tasks which will eventually be required. Indeed the very act of draughting the WBS often throws up the missing items or work units, which can then be formed into more convenient tasks. As these tasks are decomposed further, they may be given new names such as unit or work package. It is then relatively easy for management to allocate task owners to each task or group of tasks, who have the responsibility for delivering this task to the normal project criteria of cost, time and quality/performance.

Although the WBS may have been built up by the project team, based on their collective experience or by brainstorming, there is always the risk that a stage or task has been forgotten. An early review then opens up an excellent opportunity to refine the WBS and carry out a risk identification for each task, which can be the beginning of a risk register. At a later date a more rigorous risk analysis can then be carried out. The WBS does in effect give everyone a better understanding of the risk assessment procedure.

Indeed a further type of breakdown structure is the Risk Breakdown Structure. Here the main risks are allocated to the WBS or PBS in either financial or risk rating terms, giving a good overview of the project risks.

In another type of Risk Breakdown Structure the main areas of risk are shown in the first level of the Risk Breakdown Structure and the possible risk headings are listed below. See Table 5.1.

The abbreviation WBS is a generic term for a hierarchy of stages of a project. However, some methodologies like PRINCE call such a hierarchical diagram a Product Breakdown Structure (PBS). The difference is basically what part of speech is being used to describe the stages. If the words used are *nouns*, it is

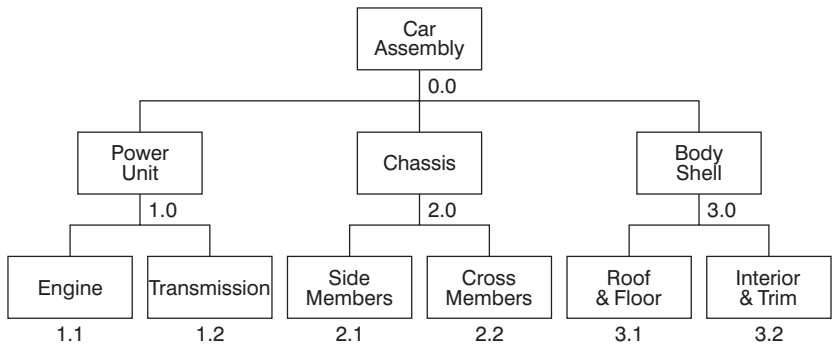


Figure 5.1 PBS

strictly speaking a Product Breakdown Structure (PBS), because we are dealing with products or things. If on the other hand we are describing the work which has to be performed on the nouns and use *verbs*, we call it a Work Breakdown Structure (WBS). Frequently, a diagram starts as a PBS for the first three or four levels and then becomes a WBS as more detail is being introduced.

Despite this unfortunate lack of uniformity of nomenclature in the project management fraternity, the principles of subdividing the project into manageable components are the same.

It must be pointed out, however, that the work breakdown structure is *not* a programme, although it looks like a precedence diagram. The interrelationships shown by the link lines do not necessarily imply a time dependence or indeed any sequential operation.

Figure 5.1, which is a Product Breakdown Structure, shows the process as: Car assembly, Power unit, Chassis, Body shell etc. Giving numbers to the tasks, enables a logical costing system to be built up as shown in Figure 5.3.

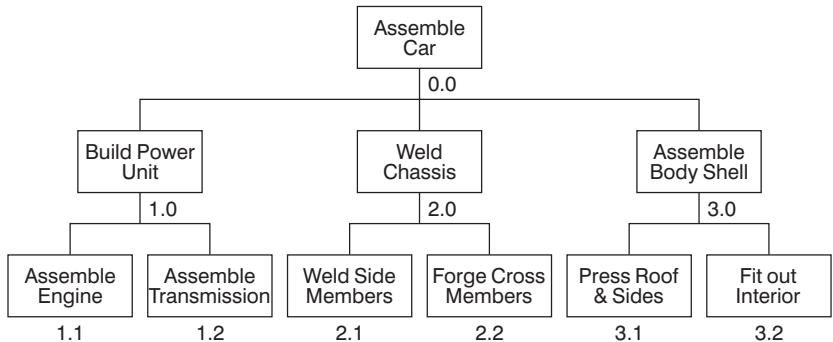


Figure 5.2 WBS

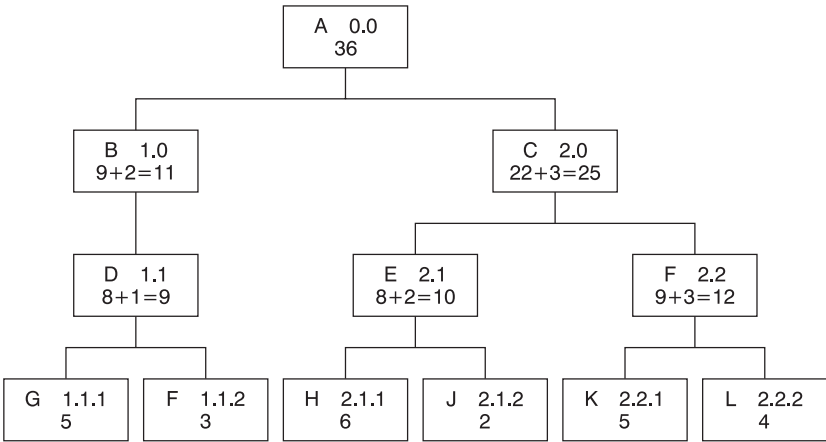


Figure 5.3

The corresponding Work Breakdown Structure shown in Figure 5.2 uses verbs and the descriptions of the packages or tasks then become: *Assemble* car, *build* power unit, *weld* chassis, *press* body shell etc.

It can be seen that a WBS is a powerful tool which can show clearly and graphically who is responsible for a task, how much it should cost and how it relates to the other tasks in the project. It was stated earlier that the WBS is not a programme, but once it has been accepted as a correct representation of the project tasks, it will become a good base for drawing up the network diagram. The interrelationships of the tasks will have to be shown more accurately and the only additional items of information to be added are the durations.

The degree to which the WBS needs to be broken down before a planning network can be drawn, will have to be decided by the project manager, but there is no reason why a whole family of networks cannot be produced to reflect each level of the WBS.

Once the WBS (or PBS) has been drawn, a bottom-up cost estimate can be produced starting at the lowest branch of the family tree. In this method, each work package is costed and arranged in such a way that the total cost of the packages on any branch must add up to the cost of the package of the parent package on the branch above. If the parent package has a cost value of its own, this must clearly be added before the next stage of the process. This is shown in Figure 5.3, which not only explains the bottom-up estimating process, but also shows how the packages can be coded to produce a project cost coding system that can be carried through to network analysis and earned value analysis.

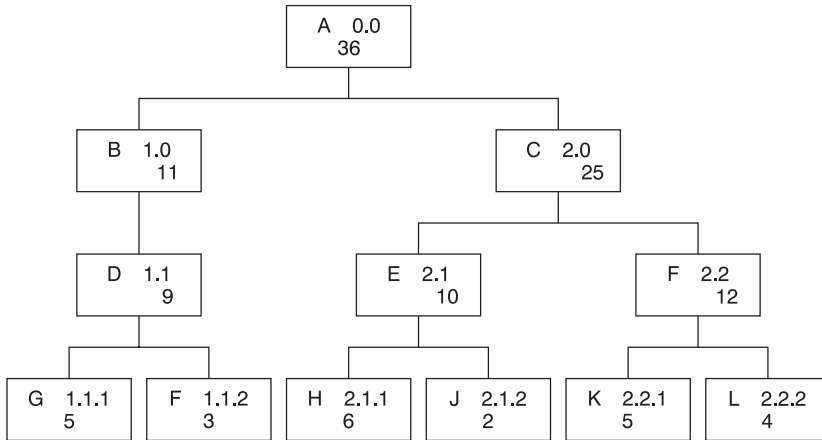


Figure 5.4 Top-down cost allocation

An alternative to the *bottom-up* cost allocation is the *top-down* cost allocation. In this method, the cost of the total project (or subproject) has been determined and is allocated to the top package of the WBS (or PBS) diagram. The work packages below are then forced to accept the appropriate costs so that the total cost of each branch cannot exceed the total cost of the package above. Such a top-down approach is shown in Figure 5.4

In practice both methods may have to be used. For example, the estimator of a project may use the bottom-up method on a WBS or PBS diagram to calculate the cost. When this is given to the project manager, he/she may break this total down into the different departments of an organization and allocate a proportion to each, making sure that the sum total does not exceed the estimated cost. Once names have been added to the work packages of a WBS or PBS it becomes an Organization Breakdown Structure or OBS.

It did not take long for this similarity to be appreciated, so that another name for such an organization diagram became 'Organization Breakdown'. This is the family tree of the organization in the same way that the WBS is in effect the family tree of the project. It is in fact more akin to a family tree or organization chart (organogram).

Figure 5.5 shows a typical OBS for a manufacturing project such as the assembly of a prototype motor car. It can be seen that the OBS is not identical in layout to the WBS, as one manager or task owner can be responsible for more than one task.

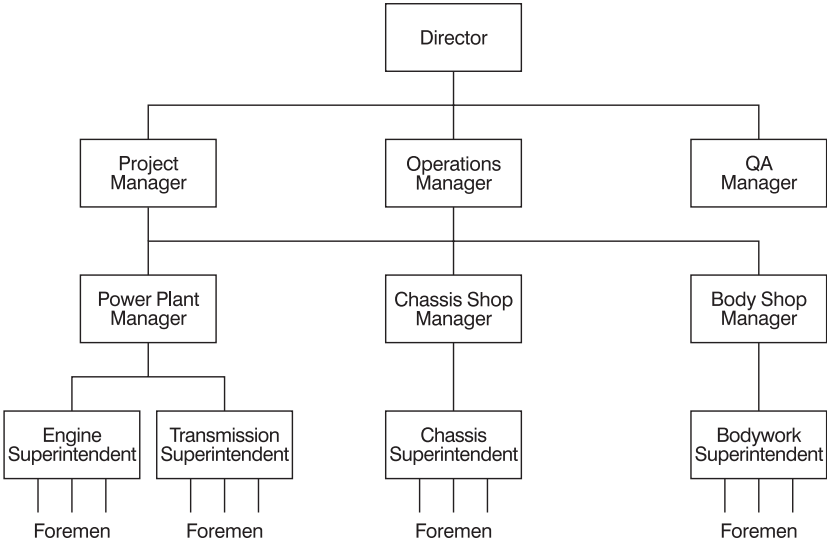


Figure 5.5 OBS

The OBS shown is typical of a matrix-type project organization where the operations manager is in charge of the actual operating departments for ‘pay and rations’, but each departmental head (or his designated project leader) also has a reporting line to the project manager. If required, the OBS can be expanded into a responsibility matrix to show the responsibility and authority of each member of the organization or project team.

	Director	Project Manager	Operations Manager	QA Manager	Power Plant Manager	Chassis Shop Manager	Body Shop Manager	Engine Superintendent	Transmission Superintendent	Chassis Superintendent	Bodywork Superintendent
Car Assembly	A	B	A	B							
Power Unit	A	B	A	B	C						
Chassis	A	B	A	B		C					
Body Shell	A	B	A	B			C				
Engine		B	A	B	C			C			
Transmission		B	A	B	C				C		
Side Members		B	A	B		C				C	
Cross Members		B	A	B		C				C	
Roof & Floor		B	A	B			C				C
Interior & Trim		B	A	B			C				C

Figure 5.6

The quality assurance (QA) manager reports directly to the director to ensure independence from the operating and projects departments. He will, however, assist all operating departments with producing the quality plans and give ongoing advice on QA requirements and procedures as well as pointing out any shortcomings he may discover.

Responsibility matrix

By combining the WBS with the OBS it is possible to create a Responsibility Matrix. Using the car assembly example given in Figures 5.1 and 5.5, the matrix is drawn by writing the WBS work areas vertically and the OBS personnel horizontally as shown in Figure 5.6.

By placing a suitable designatory letter into the intersecting boxes, the level of responsibility for any work area can be recorded on the matrix.

- A = Receiving monthly reports
- B = Receiving weekly reports
- C = Daily supervision

6

Estimating

Allocation of costs to the WBS or PBS requires of course that these costs are known. Unfortunately in only a few situations are these costs available in a form for simply slotting into the work package boxes. It is necessary therefore to produce realistic estimates of each package and indeed the entire project before a meaningful cost allocation can be carried out.

Estimating the costs of a project requires a structured approach, but whichever method is used, the first thing is to decide the level of accuracy required. This depends on the status of the project and the information available. In many cases a client or sponsor requires only an approximate or 'ball park' figure before deciding whether to proceed to the next stage. An estimate in such a situation does not have to be as accurate as an estimate for the final contract cost to which one is then committed.

Estimating is an essential part of project management, since it becomes the baseline for subsequent cost control. If the estimate for a project is too low, a company may well lose money in the execution of the work. If the estimate is high, the company may well lose the contract due to overpricing.

There are a number of estimating methods in use, varying from the very approximate to the very accurate. Most organizations have their own estimating norms, developed over the years and updated regularly to reflect changes in operating methods and systems. In addition the variations in labour rates, material costs and exchange rates will have to be built into the estimate.

The four main types of estimating techniques, each giving different degrees of accuracy, are:

1 Subjective

With this method the estimator relies on his experience of similar projects to give a cost indication based largely on very subjective 'feel' or 'hunch'. Geographical and political factors have to be taken into account as well as the more obvious labour and material content. Frequently such estimates are required to be given with little notice so that the accuracy may well be in the order of $\pm 40\%$. Such an approximate method of estimating is therefore often called 'guesstimating'.

2 Parametric

By using well-known empirical formulae or ratios in which costs can be related to specific characteristics of known sections or areas of the project, it is possible to produce a good estimate on which firm decisions can be based. Clearly such estimates require to be qualified to enable external factors to be separately assessed. For example, an architect will be able to give a parametric estimate of a new house once he is given the cube (height $\times$ length $\times$ depth) of the proposed building and the standard of construction or finish. The estimate will be in £/cubic metre of structure. Similarly, office blocks are often estimated in £/square metre of floor space. The qualifications would be the location, ground conditions and costs of the land etc. Another example of a parametric estimate is when a structural steel fabricator gives the price of fabrication in £/ton of steel depending on whether the steel sections are heavy beams and columns or light lattice work. In both cases the estimate may or may not include the cost of the steel itself.

Such parametric estimates can vary in accuracy between $\pm 10\%$ and 20% .

3 Comparative

When a new project is very similar to another project recently completed, a quick comparison can be made of the salient features. Making due allowance

for the inevitable minor differences and inflation or other cost escalation, a good comparative estimate can be produced with a degree of error of only $\pm 10\%$. An example of such a comparative estimate is the installation of a new computer system in a building when an almost identical (and proven) system was installed 6 months earlier in another building nearby. It must be stressed that such an estimate does not require detailed cost breakdowns.

4 Analytical

As the name implies, this is the most accurate estimating method, but it requires the project to be broken down into sections, subsections and finally individual components. Each component must then be given a cost value including both the material and labour content. The values, which are sometimes referred to as 'norms', are usually extracted from a database or company archives and must be individually updated or factored to reflect the present day political and environmental situation.

Examples of analytical estimates are the norms used by the petrochemical industry where a value exists for the installation of piping depending on pipe diameter, wall thickness, material composition, height from ground level and whether flanged or welded. The norm is given as a cost/linear metre which is then multiplied by the metreage including an allowance for waste. Contingencies, overheads and profit are then added to the total sum.

Quantity surveyors will cost a building or structure by measuring the architect's drawings and applying a cost to every square metre of wall or roof, every door and window, and such systems as heating, plumbing and electrics etc. Such estimates are known as bills of quantities and together with a schedule of rates for costing variations form the basis of most building and civil engineering contracts. The accuracy of such estimates are better than $\pm 5\%$ depending on the qualifications accompanying the estimate. The rates used in bills of quantities (when produced by a contractor) are usually inclusive of labour, materials, plant, overheads and anticipated profit, but when produced by an independent quantity surveyor the last two items may have to be added by the contractor.

It must be emphasized that such detailed estimating is not restricted to the building or engineering industry. Every project, given sufficient time, can be broken down into its labour, material and overhead content and costed very accurately.

Whatever type of estimating method has been used in preparing the base estimate, extra sums must be added to cover overheads, profit and

contingencies based on a risk assessment of the project. This total is then the price, i.e. what the customer is being asked to pay.

Often the estimate produced by the estimator is drastically changed by senior management to reflect market conditions, the volume of work in the company and the strength of the perceived competition. However, from a control point of view, such changes to the final price should be ignored, as they normally fall in the profit/overhead bracket and while they should be realized, they are usually outside the control of the project manager.

7

Project management plan

As soon as the project manager has received his brief or project instructions, he must produce a document which distils what is generally a vast amount of information into a concise, informative and well-organized form that can be distributed to all members of the project team and indeed all the stakeholders in the project. This document is called a project management plan (PMP), but is also sometimes just called a project plan, or in some organizations a coordination procedure.

The PMP is one of the key documents required by the project manager and his/her team. It lists the phases and encapsulates all the main parameters, standards and requirements of the project in terms of time, cost and quality/performance by setting out the 'Why', 'What', 'When', 'Who', 'Where' and 'How' of the project. In some organizations the PMP also includes the 'How much', that is the cost of the project. There may, however, be good commercial reasons for restricting this information to key members of the project team.

The contents of a PMP vary depending on the type of project. While it can run to several volumes for a large petrochemical project, it need not be more than a slim binder for a small, unsophisticated project.

There are, however, a number of areas and aspects which should always feature in such a document. These are set out very clearly in Table 1 of BS 6079-1-2002. With the permission of the British Standards Institution, the main headings of what is termed the *Model Project Plan* are given below, but augmented and rearranged in the sections given above.

General

- 1 Foreword
- 2 Contents, distribution and amendment record
- 3 Introduction
- 3.1 Project diary
- 3.2 Project history

The Why

- 4 Project aims and objectives
- 4.1 Business case

The What

- 5 General description
- 5.1 Scope
- 5.2 Project requirement
- 5.3 Project security and privacy
- 5.4 Project management philosophy
- 5.5 Management reporting system

The When

- 6 Programme management
- 6.1 Programme method
- 6.2 Program software
- 6.3 Project life cycle
- 6.4 Key dates
- 6.5 Milestones and milestone slip chart
- 6.6 Bar chart and network if available

The Who

- 7 Project organization
- 8 Project resource management
- 9 Project team organization
- 9.1 Project staff directory

- 9.2 Organizational chart
- 9.3 Terms of reference (TOR)
 - (a) for staff
 - (b) for the project manager
 - (c) for the committees and working group

The Where

- 10 Delivery requirements
 - 10.1 Site requirements and conditions
 - 10.2 Shipping requirements
 - 10.3 Major restrictions

The How

- 11 Project approvals required and authorization limits
- 12 Project harmonization
- 13 Project implementation strategy
 - 13.1 Implementation plans
 - 13.2 System integration
 - 13.3 Completed project work
- 14 Acceptance procedure
- 15 Procurement strategy
 - 15.1 Cultural and environmental restraints
 - 15.2 Political restraints
- 16 Contract management
- 17 Communications management
- 18 Configuration management
 - 18.1 Configuration control requirements
 - 18.2 Configuration management system
- 19 Financial management
- 20 Risk management
 - 20.1 Major perceived risks
- 21 Technical management
- 22 Tests and evaluations
 - 22.1 Warranties and guarantees
- 23 Reliability management (see also BS 5760: Part 1)
 - 23.1 Availability, reliability and maintainability (ARM)
 - 23.2 Quality management
- 24 Health and safety management
- 25 Environmental issues
- 26 Integrated logistic support (ILS) management
- 27 Close-out procedure

The numbering of the main headings should be standardized for all projects in the organization. In this way the reader will quickly learn to associate a clause number with a subject. This will not only enable him/her to find the required information quickly, but will also help the project manager when he/she has to write the PMP. The numbering system will in effect serve as a convenient checklist. If a particular item or heading is not required, it is best simply to enter 'not applicable' (or NA), leaving the standardized numbering system intact.

Apart from giving all the essential information about the project between two covers, for quick reference, the PMP serves another very useful function. In many organizations the scope, technical and contractual terms of the project are agreed in the initial stages by the proposals or sales department. It is only when the project becomes a reality that the project manager is appointed. By having to assimilate all these data and write such a PMP (usually within two weeks of the hand-over meeting), the project manager will inevitably obtain a thorough understanding of the project requirements as he/she digests the often voluminous documentation agreed with the client or sponsor.

Clearly not every project requires the exact breakdown given in this list and each organization can augment or expand this list to suit the project. If there are any subsequent changes, it is essential that the PMP is amended as soon as changes become apparent so that every member of the project team is immediately aware of the latest revision. These changes must be numbered on the amendment record at the front of the PMP and annotated on the relevant page and clause with the same amendment number or letter.

The contents of the project management plan are neatly summarized in the first verse of the little poem from the *Elephant's Child* by Rudyard Kipling:

I keep six honest serving-men
(They taught me all I knew);
Their names are What and Why and When,
And How and Where and Who.

8

Risk management

Every day we take risks. If we cross the street we risk being run over. If we go down the stairs, we risk missing a step and tumbling down. Taking risks is such a common occurrence, that we tend to ignore it. Indeed, life would be unbearable if we constantly worried whether we should or should not carry out a certain task or take an action, because the risk is, or is not, acceptable.

With projects, however, this luxury of ignoring the risks cannot be permitted. By their very nature, because projects are inherently unique and often incorporate new techniques and procedures, they are risk prone and risk has to be considered right from the start. It then has to be subjected to a disciplined regular review and investigative procedure known as risk management.

Before applying risk management procedures, many organizations produce a *Risk Management Plan*. This is a document produced at the start of the project which sets out the strategic requirements for risk assessment and the whole risk management procedure. In certain situations the risk management plan should be produced at the estimating or contract tender stage to ensure that adequate provisions are made in the cost build-up of the tender document.

The Project Management Plan (PMP) should include a résumé of the Risk Management Plan, which will first of all define the scope and areas to which risk management applies, particularly the risk types to be investigated. It will also specify which techniques will be used for risk identification and assessment, whether SWOT (Strengths, Weaknesses, Opportunities and Threats) analysis is required and which risks (if any) require a more rigorous quantitative analysis such as Monte Carlo methods.

The Risk Management Plan will set out the type, content and frequency of reports, the roles of risk owners and the definition of the impact and probability criteria in qualitative and/or quantitative terms covering cost, time and quality/performance.

The main contents of a Risk Management Plan are as follows:

General introduction explaining the need for the risk management process;
Project description. Only required if it is a stand-alone document and not part of the PMP;

Types of risks. Political, technical, financial, environmental, security, safety, programme etc.;

Risk processes. Qualitative and/or quantitative methods, max. nos of risks to be listed;

Tools and techniques. Risk identification methods, size of P-I matrix, computer analysis etc.;

Risk reports. Updating periods of Risk Register, exception reports, change reports etc.;

Attachments. Important project requirements, dangers, exceptional problems etc.

The Risk Management Plan of an organization should follow a standard pattern in order to increase its familiarity (rather like standard conditions of contract) but each project will require a bespoke version to cover its specific requirements and anticipated risks.

Risk management consists of the following five stages, which, if followed religiously, will enable one to obtain a better understanding of those project risks which could jeopardize the cost, time, quality and safety criteria of the project. The first three stages are often referred to as *qualitative analysis* and are by far the most important stages of the process.

Stage 1 Risk awareness

This is the stage at which the project team begins to appreciate that there are risks to be considered. The risks may be pointed out by an outsider, or the

team may be able to draw on their own collective experience. The important point is that once this attitude of mind has been achieved, i.e. that the project, or certain facets of it, are at risk, it leads very quickly to . . .

Stage 2 Risk identification

This is essentially a team effort at which the scope of the project, as set out in the specification, contract and WBS (see Chapter 5) (if drawn) is examined and each aspect investigated for a possible risk.

To get the investigation going, the team may have a brainstorming session and use a prompt list (based on specific aspects such as legal or technical problems) or a checklist compiled from risk issues from similar previous projects. It may also be possible to obtain expert opinion or carry out interviews with outside parties. The end product is a long list of activities which may be affected by one or a number of adverse situations or unexpected occurrences. The risks which generally have to be considered may be:

Technical	New technology or materials. Test failures;
Environmental	Unforeseen weather conditions. Traffic restrictions;
Operational	New systems and procedures. Training needs;
Cultural	Established customs and beliefs. Religious holidays;
Financial	Freeze on capital. Bankruptcy of stakeholder. Currency fluctuation;
Legal	Local laws. Lack of clarity of contract;
Commercial	Change in market conditions or customers;
Resource	Shortage of staff, operatives or materials;
Economic	Slow-down in economy, change in commodity prices;
Political	Change of government or government policy.
Security	Safety. Theft. Vandalism.

The following list gives the advantages and disadvantages of the more usual risk identification methods:

Brainstorming

Advantages:	Wide range of possible risks suggested for consideration; Involves a number of stakeholders.
Disadvantages:	Time consuming; Requires firm control by facilitator.

Prompt list

- Advantages: Gives benefit of past problems;
Saves time by focusing on real possibilities;
Easy to discuss.
- Disadvantages: Restricts suggestions to past experience;
Past problems may not be applicable.

Checklist

- Advantages: Similar to prompt list; Company standards
- Disadvantages: Similar to prompt list.

Work breakdown structure

- Advantages: Focused on specific project risks;
Quick and economical.
- Disadvantages: May limit scope of possible risks.

Delphi technique

- Advantages: Offers wide experience of experts;
Can be wide ranging.
- Disadvantages: Time consuming if experts are far away;
Expensive if experts have to be paid;
Advice may not be specific enough.

Asking experts

- Advantages: As Delphi.
- Disadvantages: As Delphi.

At this stage it may be possible to identify who is best to manage each risk. This person becomes the *risk owner*.

To reduce the number of risks being seriously considered from what could well be a very long list, some form of screening will be necessary. Only those risks which pass certain criteria need be examined more closely, which leads to the next stage . . .

Stage 3 Risk assessment

This is the qualitative stage at which the two main attributes of a risk, *probability* and *impact*, are examined.

The *probability* of a risk becoming a reality has to be assessed using experience and/or statistical data such as historical weather charts or close-out

reports from previous projects. Each risk can then be given a probability rating of HIGH, MEDIUM or LOW.

In a similar way, by taking into account all the available statistical data, past project histories and expert opinion, the *impact* or effect on the project can be rated as SEVERE, MEDIUM or LOW.

A simple matrix can now be drawn up which identifies whether a risk should be taken any further. Such a matrix is shown in Figure 8.1.

Severe			
Medium			
Low			
Nil			
	Low	Medium	High

Figure 8.1 Probability versus impact table. Such a table could be used for each risk worthy of further assessment, and to assess, for example, all major risks to a project or programme

Each risk can now be given a *risk number*, so that it is now possible to draw up a simple chart which lists all the risks so far considered. This chart will show the risk number, a short description, the risk category, the probability rating, the impact rating (in terms of high, medium or low) and the *risk owner* who is charged with monitoring and managing the risk during the life of the project.

Figure 8.2 shows the layout of such a chart.

A *quantitative analysis* can now follow. This is known as . . .

Stage 4 Risk evaluation

It is now possible to give comparative values, often on a scale 1 to 10, to the probability and impact of each risk and by drawing up a matrix of the risks,

Risk Summary Chart				
Risk No.	Description	Probability rating	Impact rating	Risk owner

Figure 8.2

an order of importance or priority can be established. By multiplying the *impact rating* by the *probability rating*, the *exposure rating* is obtained. This is a convenient indicator which may be used to reduce the list to only the top dozen that require serious attention, but an eye should nevertheless be kept on even the minor ones, some of which may suddenly become serious if unforeseen circumstances arise.

An example of such a matrix is shown in Figure 8.3. Clearly the higher the value, the greater the risk and the more attention it must receive to manage it.

Another way to quantify both the impact and probability is to number the ratings as shown in Figure 8.4 from 1 for very low to 5 for very high. By multiplying the appropriate numbers in the boxes, a numerical (or quantita-

Exposure table							
	Probability						
	Rating		Very low	Low	Medium	High	Very high
Impact	Very high	Value	0.1	0.2	0.5	0.7	0.9
		0.8					
	High	0.5					
	Medium	0.2					
	Low	0.1					
	Very Low	0.05					

Figure 8.3

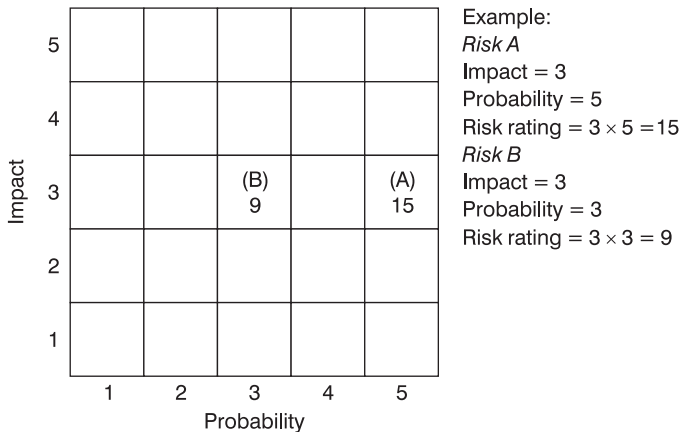


Figure 8.4

tive) exposure rating is obtained, which gives a measure of seriousness and hence importance for further investigation.

For example, if the impact is rated 3 (i.e. medium) and the probability 5 (very high), the exposure rating is $3 \times 5 = 15$.

Further sophistication in evaluating risks is possible by using some of the computer software developed specifically to determine the probability of occurrence. These programs use sampling techniques like 'Monte Carlo simulations' which carry out hundreds of iterative sampling calculations to obtain a probability distribution of the outcome.

One application of the Monte Carlo simulation is determining the probability to meet a specific milestone (like the completion date) by giving three time estimates to every activity. The program will then carry out a great number of iterations resulting in a frequency/time histogram and a cumulative 'S' curve from which the probability of meeting the milestone can be read off (see Figure 8.5)

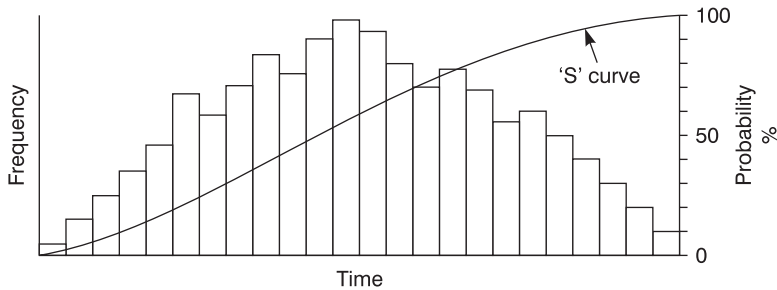


Figure 8.5

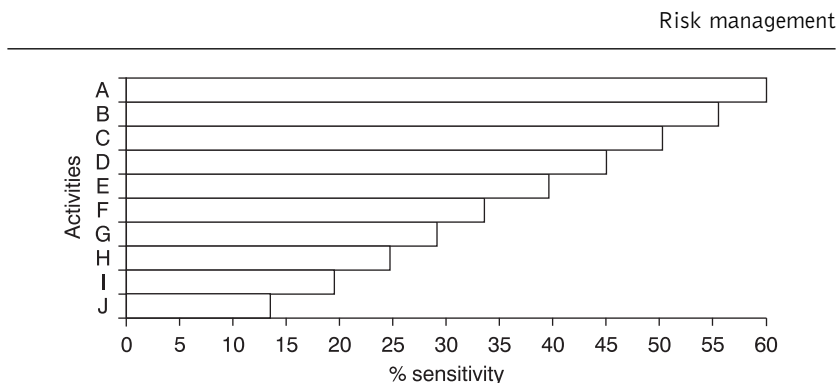


Figure 8.6

At the same time a *Tornado* diagram can be produced, which shows the sensitivity of each activity as far as it affects the project completion (see Figure 8.6).

Other techniques such as sensitivity diagrams, influence diagrams and decision trees have all been developed in an attempt to make risk analysis more accurate or more reliable. It must be remembered, however, that any answer is only as good as the initial assumptions and input data, and the project manager must give serious consideration as to the cost effectiveness of these methods for his/her particular project.

Stage 5 Risk management

Having listed and evaluated the risks and established a table of priorities, the next stage is to decide how to manage the risks. In other words what to do about them and who should be responsible for managing them. For this purpose it is advisable to appoint a *risk owner* for every risk which has to be monitored and controlled. A risk owner may, of course, be responsible for a number or even all the risks. There are a number of options available to the project manager when faced with set of risks. These are:

- avoidance
- reduction
- sharing
- transfer
- deference
- mitigation
- contingency
- insurance
- acceptance

These options are perhaps most easily explained by a simple example.

A owner of a semi-detached house decides to replace part of his roof with solar panels to save on his hot water heating bill. The risks in carrying out this work this are as follows:

- Risk 1 The installer may fall off the roof;
- Risk 2 The roof may leak after completion;
- Risk 3 The panels may break after installation;
- Risk 4 Birds may befoul the panels;
- Risk 5 The electronic controls may not work;
- Risk 6 The heat recovered may not be sufficient to heat the water on a cold day;
- Risk 7 It may not be possible to recover the cost if the house is sold within 2–3 years;
- Risk 8 The cost of the work will probably never pay for itself;
- Risk 9 The cost may escalate due to unforeseen structural problems.

These risks can all be managed by applying one or several of the above options:

- | | | |
|--------|-------------|---|
| Risk 1 | Transfer | Employ a builder who is covered by insurance; |
| Risk 2 | Transfer | Insist on a two-year guarantee for the work (at least two season cycles); |
| Risk 3 | Insurance | Add the panel replacement to the house insurance policy; |
| Risk 4 | Mitigation | Provide access for cleaning (this may increase the cost); |
| Risk 5 | Reduction | Ensure a control unit is used which has been proven for a number of years; |
| Risk 6 | Contingency | Provide for an electric immersion heater for cold spells; |
| Risk 7 | Deference | Wait 3 years before selling the house; |
| Risk 8 | Acceptance | This is a risk one must accept if the work goes ahead, or |
| Risk 8 | Avoidance | Don't go ahead with the work; |
| Risk 9 | Sharing | Persuade the neighbour in the adjoining house to install a similar system at the same time. |

Monitoring

To keep control of the risks, a *risk register* should be produced which lists all the risks and their method of management. Such a list is shown in Figure 8.7.

Figure 8.7

Where risk owners have been appointed, these will be identified on the register. The risks must be constantly monitored and at preset periods, the register must be reassessed and if necessary amended to reflect the latest position. Clearly as the project proceeds, the risks reduce in number, so that the contingency sums allocated to cover the risk of the completed activities can be allocated to other sections of the budget. These must be recorded in the register under the heading of *risk closure*.

The summary of the risk management procedure is then as follows:

- 1 Risk awareness;
- 2 Risk identification (checklists, prompt lists, brainstorming);
- 3 Risk owner identification;
- 4 Qualitative assessment;
- 5 Quantification of probability;
- 6 Quantification of impact (severity);
- 7 Exposure rating;
- 8 Mitigation;
- 9 Contingency provision;
- 10 Risk register;
- 11 Software usage (if any);
- 12 Monitoring and reporting.

To aid the process of risk management, a number of software tools have been developed. The most commonly used ones are *Riskman*, *@Risk*, *Predict*, *Pandora* and *Plantrac Marshal*, but no doubt new ones will be developed in the future.

9

Quality management

Quality (or performance) forms the third corner of the time–cost–quality triangle which is the basis of project management.

Quality management can be divided into quality assurance (QA), quality control (QC) and quality standards.

Quality assurance is the process that ensures that adequate systems, procedures and control documents are in place to meet the quality criteria set by management. The basic principle of QA is to get it right first time, and every time after that.

To ensure that the necessary quality processes are in place, quality management systems (QMS), which may well cover the whole spectrum of an organization, have to be established and regularly monitored. Guidelines for quality management and quality assurance standards are published by BSI in the ISO 9000, 9001 and 9004 series of standards. ISO 10006 are guidelines for quality in project management and ISO 10007 are guidelines for configuration management.

Quality is an attitude of mind which should permeate right through an organization from the board of directors down to the operatives on the shop floor or the site. Ideally everybody should

be responsible for ensuring that his or her work meets the quality standards set down. To ensure that these standards are met, quality assurance requires checks and audits to be carried out on a regular basis.

Quality control is essentially the process of measuring the preset levels of accuracy or performance of a component, system, process or procedure and making sure that these levels are achieved. The methods used to control quality include dimensional checks, material tests, non-destructive tests, pressure tests, leak tests, performance tests, documentation control etc. Most organizations have their own test procedures and standards as well as having to comply with clients' requirements and a quality control system must be in place to meet all these criteria.

The tools of quality management are

- 1 The quality manual (policy manual);
- 2 Operational procedures;
- 3 The quality plan;
- 4 Quality reviews and audits;
- 5 Cause and effect analysis;
- 6 Failure mode analysis;
- 7 Pareto analysis;
- 8 Recording quality problems in a project history;
- 9 A documentation folder containing all the test results, checks and test certificates.

Apart from the quality standards developed by an organization, the following British, European and International standards must generally be complied with:

BS 4778 Quality vocabulary

BS 5760 Reliability of systems equipment & components

BS 5750 Guide to quality management & quality systems now replaced by

BS EN ISO 9000 Series, Quality management & quality assurance standards

BS ISO 10006 Quality management – Guide to quality in project management

ISO 10007 Quality management – Guidelines for configuration management

10

Change and configuration management

There are very few projects which do not change in some way during their life cycle. Equally there are very few changes which do not affect in some way either (or all) the time, cost or quality aspects of the project. For this reason it is important that all changes are recorded, evaluated and managed to ensure that the effects are appreciated by the originator of the change, and the party carrying out the change is suitably reimbursed where the change is a genuine extra to the original specification or brief.

In cases where a formal contract exists between the client and the contractor, an equally formal procedure of dealing with changes (or variations) is essential to ensure that:

- 1 No unnecessary changes are introduced;
- 2 The changes are only issued by an authorized person;
- 3 The changes are evaluated in terms of cost, time and performance;
- 4 The originator is made aware of these implications before the change is put into operation. In practice this may not always be possible if the extra work has to be carried out urgently for

safety or security reasons. In such a case the evaluation and report of the effect must be produced as soon as possible;

- 5 The contractor is compensated for the extra costs and given extra time to complete the contract.

Unfortunately clients do not always appreciate what effect even a minor change can have on a contract. For example, a client might think that by eliminating an item of equipment such as a small pump, a few weeks into the contract would reduce the cost. He might well find, however, that the changes in the design documentation, data sheets, drawings, bid requests etc. will actually cost more than the capital value of the pump, so that the overall cost of the project will increase! The watchwords must therefore be: *is the change really necessary*.

In practice as soon as a change or variation has been requested either verbally or by a change order, it must be confirmed back to the originator with a statement to the effect that the cost and time implications will be advised as soon as possible.

A Change of Contract Scope Notice must then be issued to all departments who may be affected to enable them to assess the cost, time and quality implications of the change.

A copy of such a document is shown in Figure 10.1, which should contain the following information:

- Project or contract no.
- Change of scope no.
- Issue date
- Name of originator of change
- Method of transmission (letter, fax, telephone e-mail etc.)
- Description of change
- Date of receipt of change order or instruction

When all the affected departments have inserted their cost and time estimates, the form is sent to the originator for permission to proceed or for advice of the implications if the work has had to be started before the form could be completed. The method of handling variations will probably have been set out in the contract documentation but it is important to follow the agreed procedures, especially if there are time limitations for submitting the claims at a later stage.

As soon as a change has been agreed, the cost and time variations must be added to the budget and programme respectively to give the revised target values against which costs and progress will be monitored.

FOSTER WHEELER POWER PRODUCTS LTD. HAMSTEAD ROAD LONDON NW1 7QN	ADVICE OF CHANCE OF CONTRACT SCOPE DEPARTMENT: ENGINEERING No 82																
To: Contract Management Department ☒ Please note that the scope of the subject contact has been altered due to the change(s) detailed below. To: Contract Management Department ☐ The following is a statement of the manhours and expenses incurred due to Contract Variation Notice reference _____ dated <u>17 Dec. 1982</u> ICI BILLINGHAM 2-32-07059		Distribution: Project Manager Estimating Department Management Services Departmental Manager Manager Engineering (see note 4 below) File N. Smith J. Harris By internal mail															
BRIEF DESCRIPTION OF CHANGE AND EFFECT ON DEPARTMENTAL WORK The provision of an 'Air to Igniters' control valve. Scope of work includes purchasing and adding to drawings. The clients preferred - specified vendor for control valves is Fisher Controls. Manhour requirements are as follows:- <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">Dept 1104-63 manhours</td> <td style="width: 10%;">(1104 Split)</td> <td style="width: 50%;"></td> </tr> <tr> <td>Dept 1102- 8 manhours</td> <td>Req.</td> <td>60</td> </tr> <tr> <td></td> <td>Drg.</td> <td>2</td> </tr> <tr> <td>Dept 1105-38 manhours</td> <td>MH.</td> <td><u>1</u></td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">63</td> </tr> </table>			Dept 1104-63 manhours	(1104 Split)		Dept 1102- 8 manhours	Req.	60		Drg.	2	Dept 1105-38 manhours	MH.	<u>1</u>			63
Dept 1104-63 manhours	(1104 Split)																
Dept 1102- 8 manhours	Req.	60															
	Drg.	2															
Dept 1105-38 manhours	MH.	<u>1</u>															
		63															

CHANGE NOTIFIED BY ☐ Minutes of Meeting with client ☐ Client's telex ☒ Client's letter ☐ Client's request by telephone ☐ Client's Variation Order Date of Meeting : _____ Subject of Meeting : _____ Minute Number : _____ Date of Telex : _____ Reference : _____ Signed by : _____ Date of Letter : 10.12.1992 Reference : SGP 3641 Signed by : B. Francis Date of Call : _____ Name of Contact : _____ V.O.Ref. : _____ Date of V.O. : _____	MANHOURS AND COSTS INCURRED IN Department No. 1104, 1102, 1105 ☐ Increase ☐ Decrease <table style="width: 100%; margin-top: 10px;"> <tr> <td style="width: 60%;">Engineering</td> <td style="width: 10%; text-align: center;"> 69 </td> <td style="width: 30%;">Manhours</td> </tr> <tr> <td>Design/drghtg</td> <td style="text-align: center;"> 37 </td> <td>Manhours</td> </tr> <tr> <td>Tech clerks</td> <td style="text-align: center;"> 3 </td> <td>Manhours</td> </tr> <tr> <td>TOTAL</td> <td style="text-align: center;"> 109 </td> <td>Manhours</td> </tr> <tr> <td>COSTS</td> <td style="text-align: center;"> £T.B.A. </td> <td>Manhours</td> </tr> </table>	Engineering	69	Manhours	Design/drghtg	37	Manhours	Tech clerks	3	Manhours	TOTAL	109	Manhours	COSTS	£T.B.A.	Manhours
Engineering	69	Manhours														
Design/drghtg	37	Manhours														
Tech clerks	3	Manhours														
TOTAL	109	Manhours														
COSTS	£T.B.A.	Manhours														
NOTES 1. The 'change notified by' section need not be completed if form is used to advise manhours and costs only. 2. This form to be completed IMMEDIATELY ON RECEIPT of definite instructions. 3. Manhours MUST BE REALISTIC. Make FULL ALLOWANCE for all additional and re-cycle work. Take into account 'chain reaction' affect throughout department. 4. Submit copy of this form to Manager Engineering if manhours involved exceed 250.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%; padding: 5px;">Initiated by N. Smith</td> <td style="width: 40%; padding: 5px;">Date 17.12.82</td> </tr> <tr> <td style="padding: 5px;">Checked by MWN</td> <td style="padding: 5px;">Date 22.12.82</td> </tr> <tr> <td style="padding: 5px;">Approved by</td> <td style="padding: 5px;">Date</td> </tr> </table>		Initiated by N. Smith	Date 17.12.82	Checked by MWN	Date 22.12.82	Approved by	Date								
Initiated by N. Smith	Date 17.12.82															
Checked by MWN	Date 22.12.82															
Approved by	Date															

Figure 10.1

The accurate and timely recording and managing of changes could make the difference between a project making a profit or losing money.

Change management must not be confused with *management of change*, which is the art of changing the culture or systems of an organization and managing the human reactions. Such a change can have far-reaching repercussions on the lives and attitudes of all the members of the organization, from the board level to the operatives on the shop floor. The way such changes are handled and the psychological approaches used to minimize stress and resistance are outside the scope of this book.

Document control

Invariably a change to even the smallest part of a project requires the amendment of one or more documents. These may be programmes, specifications, drawings, instructions and of course financial records. The amendment of each document is in itself a change and it is vital that the latest version of the document is issued to *all* the original recipients. In order to ensure that this takes place, a document control, or version control procedure must be part of the project management plan.

In practice a document control procedure may be either a single page of A4 or several pages of a spreadsheet as part of the computerized project management system. The format should, however, feature the following columns:

- Document number
- Document title
- Originator of document
- Original issue date
- Issue code (general or restricted)

- Name of originator (or department) of revision
- Revision (or version) number
- Date of revision (version)

The sheet should include a list of recipients.

A separate sheet records the date the revised document is sent to each recipient and the date of acknowledgement of receipt.

Where changes have been made to one or more pages of a multi-page document, such as a project management plan, it is only necessary to issue the revised pages under a page revision number. This requires a discrete version

control sheet for this document with each clause listed and its revision and date of issue recorded.

Configuration management

Although in the confined project management context configuration management is often assumed to be synonymous with version control of documentation or software, it is of course very much more far reaching in the total project environment. Developed originally in the aerospace industry, it has been created to ensure that changes and modifications to physical components, software, systems and documentation are recorded and identified in such a way that replacements, spares and assembly documentation has conformed to the version in service. It also has been developed to ensure that the design standards and characteristics were reflected accurately in the finished product.

It can be seen that when projects involve complex systems as in the aerospace, defence or petrochemical industry, configuration management is of the utmost importance as the very nature of these industries involves development work and numerous modifications not only from the original concept or design but also during the whole life cycle of the product.

Keeping track of all these changes to specifications, drawings, support documentation and manufacturing processes is the essence of configuration management which can be split into the following five main stages:

- 1 *Configuration management and planning.* This covers the necessary standards, procedures, support facilities, resources and training and sets out the scope, definitions, reviews, milestones and audit dates.
- 2 *Configuration identification.* This encompasses the logistics and systems and procedures. It also defines the criteria for selection in each of the project phases.
- 3 *Configuration change management.* This deals with the proposed changes and their investigation before acceptance. At this stage changes are compared with the configuration baseline including defining when formal departure points have been reached.
- 4 *Configuration status accounting.* This records and logs the accepted (registered) changes and notification as well as providing traceability of all baselines.
- 5 *Configuration audit.* This ensures that all the previous stages have been correctly applied and incorporated in the organization. The output of this stage is the audit report.

In all these stages resources and facilities must always be considered and arrangements must be made to feed back comments to the management stage.

Essentially the process of identification, evaluation and implementation of changes requires accurate monitoring and recording and subsequent dissemination of documentation to the interested parties. This is controlled by a Master Record Index (MRI). An example of such an MRI for controlling documents is shown in Figure 10.2.

Master record index					
Document Title	Reference number	Documents		Responsibility	Distribution
		Issue	Date		
Business Case	Rqmt SR 123	Draft A	14/6/86	Mr Sponsor	PM, Line Mgmt
		Draft B	24/7/86		
		Issue 1	30/7/86		
		Issue 2	30/9/86		
Project Mgmt Plan	PMP/MLS/34	Draft A	28/7/86	Ms MLS PM	All Stakeholders
		Issue 1	30/9/86		
WBS	WBS/PD1	Draft A	30/7/86	Mr MLS Deputy PM	IPMT (Project Team)
		Issue 1	2/8/86		
Risk Mgmt Plan etc.	RMP/MLS/1				

Figure 10.2

On large, complex and especially multinational projects, where the design and manufacture are carried out in different countries, great effort is required to ensure that product configuration is adequately monitored and controlled. To this end a *Configuration Control Committee* is appointed to head up special *Interface Control Groups* and *Configuration Control Boards* which investigate and, where accepted, approve all proposed changes.

11

Basic network principles

It is true to say that whenever a process requires a large number of separate but integrated operations, a critical path network can be used to advantage. This does not mean, of course, that other methods are not successful or that CPM is a substitute for these methods – indeed, in many cases network analysis can be used in conjunction with traditional techniques – but if correctly applied CPM will give a clearer picture of the complete programme than other systems evolved to date.

Every time we do anything, we string together, knowingly or unknowingly, a series of activities which make up the operation we are performing. Again, if we so desire, we can break down each individual activity into further components until we end up with the movement of an electron around a nucleus. Clearly, it is ludicrous to go to such a limit but we can call a halt to this successive breakdown at any stage to suit our requirements. The degree of the breakdown depends on the operation we are performing or intend to perform.

In the UK it was the construction industry which first realized the potential of network analysis and most of, if not all, the large

construction, civil engineering and building firms now use CPM regularly for their larger contracts. However, a contract does not have to be large before CPM can be usefully employed. If any process can be split into twenty or more operations or 'activities', a network will show their interrelationship in a clear and logical manner so that it may be possible to plan and rearrange these interrelationships to produce either a shorter or a cheaper project, or both.

Network analysis

Network analysis, as the name implies, consists of two basic operations:

- 1 Drawing the network and estimating the individual activity times
- 2 Analysing these times in order to find the critical activities and the amount of float in the non-critical ones.

The network

Basically the network is a flow diagram showing the sequence of operations of a process. Each individual operation is known as an activity and each meeting point or transfer stage between one activity and another is an event or node. If the activities are represented by straight lines and the events by circles, it is very simple to draw their relationships graphically, and the resulting diagram is known as the network. In order to show which activity has to be performed before its neighbour, arrow heads are placed on the straight lines, but it must be explained that the length or orientation of these lines is quite arbitrary.

It can be seen, therefore, that each activity has two nodes or events, one at the beginning and one at the end (Figure 11.1). Thus events 1 and 2 in the figure show the start and finish of activity A. The arrow head indicates that 1 comes before 2, i.e. the operation flows towards 2.




Figure 11.1

We can now describe the activity in two ways:

- 1 By its activity title (in this case, A)
- 2 By its starting and finishing event nodes 1–2.

For analysis purposes, the second method must be used.

Basic rules

Before proceeding further it may be prudent at this stage to list some very simple but basic rules for network presentation, which must be adhered to rigidly:

- 1 Where the starting node of an activity is also the finishing node of one or more other activities, it means that *all* the activities with this finishing node must be completed before the activity starting from that node can be commenced. For example, in Figure 11.2, 1–3(A) and 2–3(B) must be completed before 3–4(C) can be started.

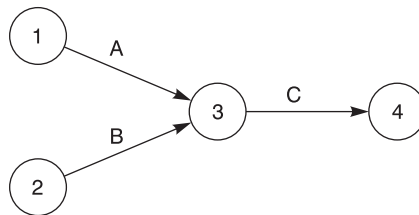


Figure 11.2

- 2 Each activity must have a different set of starting and finishing node numbers. This poses a problem when two activities start and finish at the same event node, and means that the example shown in Figure 11.3 is incorrect. In order to apply this rule, therefore, an artificial or ‘dummy’ activity is introduced into the network (Figure 11.4). This ‘dummy’ has a duration of zero time and thus does not affect the logic or overall time of the project. It can be seen that activity A still starts at 1 and takes 7 units

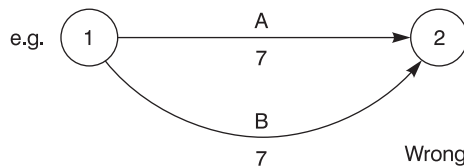


Figure 11.3

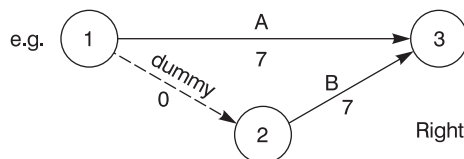


Figure 11.4

of time before being completed at event 3. Activity B also still takes 7 units of time before being completed at 3 but it starts at node 2. The activity between 1 and 2 is a timeless dummy.

- 3 When two chains of activities are inter-related, this can be shown by joining the two chains either by a linking activity or a 'dummy' (Figure 11.5). The dummy's function is to show that all the activities preceding it, i.e. 1–2 (A) and 2–3 (B) shown in Figure 11.5, must be completed before activity 7–8 (F) can be started. Needless to say, activities 5–6(D), 6–7(E) as well as 2–6(G) must also be completed before 7–8(F) can be started.

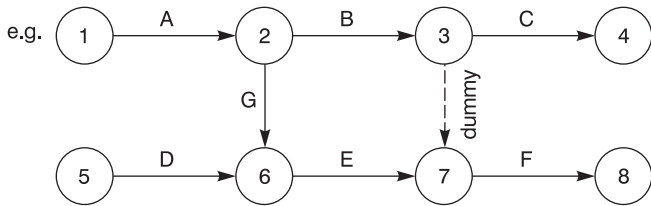


Figure 11.5

- 4 Each activity (except the last) must run into another activity. Failure to do so creates a loose end or 'dangle' (Figure 11.6). Dangles create premature 'ends' of a part of a project, so that the relationship between this end and the actual final completion node cannot be seen. Hence the loose ends must be joined to the final node (in this case, node 6 in Figure 11.7) to enable the analysis to be completed.

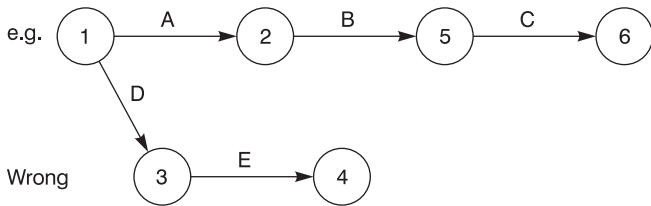


Figure 11.6

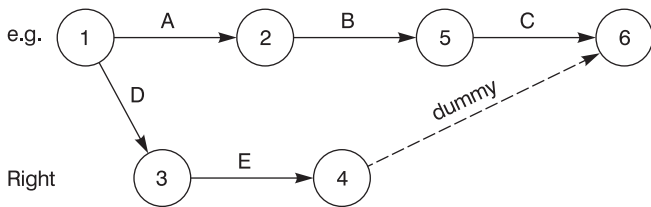


Figure 11.7

- 5 No chain of activities must be permitted to form a loop, i.e. such a sequence that the last activity in the chain has an influence on the first. Clearly, such a loop makes nonsense of any logic since, if one considers activities 2–3(B), 3–4(C), 4–5(E) and 5–2(F) in Figure 11.8, one finds that B, C and E must precede F, yet F must be completed before B can start. Such a situation cannot occur in nature and defies analysis.

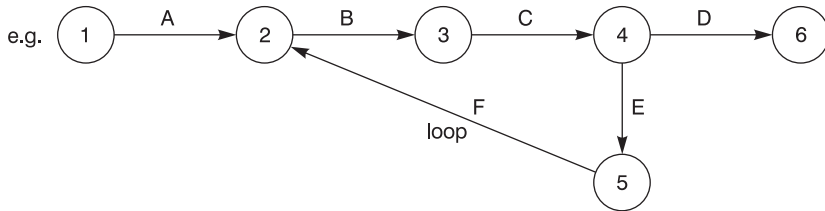


Figure 11.8

Apart from strictly following the basic rules 1 to 5 set out above, the following points are worth remembering to obtain the maximum benefit from network techniques.

- 1 Maximize the number of activities which can be carried out in parallel. This obviously (resources permitting) cuts down the overall programme time.
- 2 Beware of imposing unnecessary restraints on any activity. If a restraint is convenient rather than imperative, it should best be omitted. The use of resource restraints is a trap to be particularly avoided since additional resources can often be mustered – even if at additional cost.
- 3 Start activities as *early* as possible and connect them to the rest of the network as *late* as possible (Figures 11.9 and 11.10). This avoids unnecessary restraints and gives maximum float.

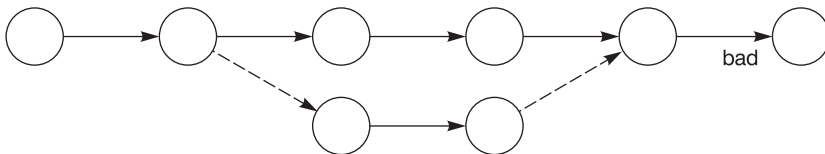


Figure 11.9

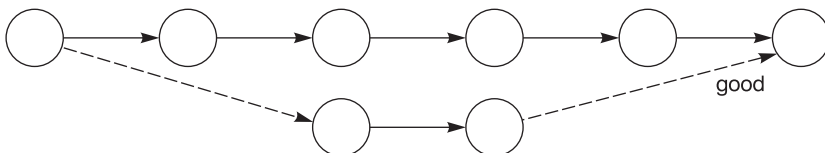


Figure 11.10

4 Resist the temptation to use a conveniently close node point as a 'staging post' for a dummy activity used as a restraint. Such a break in a restraint could impose an additional unnecessary restraint on the succeeding activity. In Figure 11.11 the intent is to restrain activity E by B and D and activity G by D. However, because the dummy from B uses node 6 as a staging post, activity G is also restrained by B. The correct network is shown in Figure 11.12. It must be remembered that the restraint on G may have to be added at a later stage, so that the effect of B in Figure 11.11 may well be overlooked.

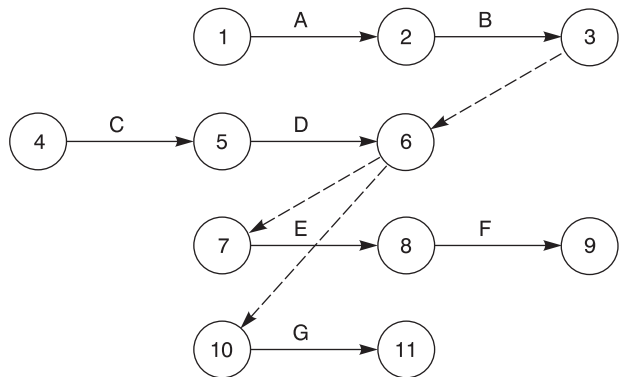


Figure 11.11

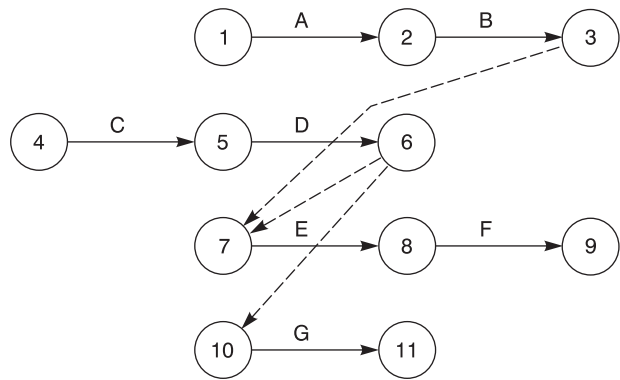


Figure 11.12

5 When drawing ladder networks (see page 75) beware of the danger of trying to economize on dummy activities as described later (Figures 11.24 and 11.25).

Durations

Having drawn the network in accordance with the logical sequence of the particular project requirements, the next step is to ascertain the duration or time of each activity. These may be estimated in the light of experience, in the same manner that programme times are usually ascertained, but it must be remembered that the shorter the duration, the more accurate they are.

The times are then written against each activity in any convenient unit but this must, of course, be the same for every activity. For example, referring to Figure 11.13, if activities 1–2(A), 2–5(B) and 5–6(C) took 3, 2 and 7 days, respectively, one would show this by merely writing these times under the activity.

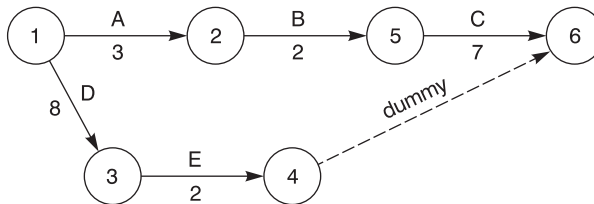


Figure 11.13

Numbering

The next stage of network preparation is numbering the events or nodes. Depending on the method of analysis, the following systems shown in Figure 11.14 can be used.

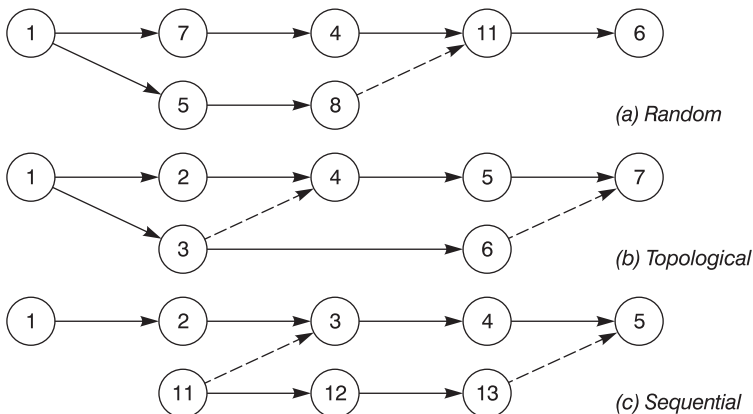


Figure 11.14

Random

This method, as the name implies, follows no pattern and merely requires each node number to be different. All computers (if used) can, of course, accept this numbering system, but there is always the danger that a number may be repeated.

Topological

This method demands that the starting node of an activity must be smaller than the finishing node of that activity. If this law is applied throughout the network, the node numbers will increase in value as the project moves towards the final activity. It has some value for beginners using network analysis since loops are automatically avoided. However, it is very time consuming and requires constant back-checking to ensure that no activity has been missed. The real drawback is that if an activity is added or changed, the whole network has to be renumbered from that point onwards. Clearly, this is an unacceptable restriction in practice.

Sequential

This is a random system from an analysis point of view, but the numbers are chosen in blocks so that certain types of activities can be identified by the nodes. The system therefore clarifies activities and facilitates recognition. The method is quick and easy to use, and should always be used whatever method of analysis is employed. Sequential numbering is usually employed when the network is banded (see Chapter 21). It is useful in such circumstances to start the node numbers in each band with the same prefix number, i.e. the nodes in band 1 would be numbered 101, 102, 103, etc., while the nodes in band 2 are numbered 201, 202, 203, etc. Figure 21.1 would lend itself to this type of numbering.

Coordinates

This method of activity identification can only be used if the network is drawn on a gridded background. In practice, thin lines are first drawn on the *back* of the translucent sheet of drawing paper to form a grid. This grid is then given coordinates or map references with letters for the vertical coordinate and numbers for the horizontal (Figure 11.15). The reason for drawing the lines on the back of the paper is, of course, to leave the grid

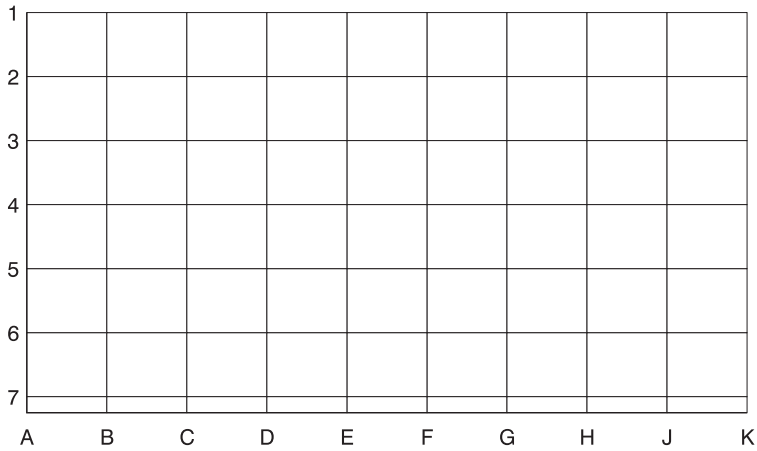


Figure 11.15

intact when the activities are changed or erased. A fully drawn grid may be confusing to some people, so it may be preferable to draw a grid showing the intersections only (Figure 11.16).

When activities are drawn, they are confined in length to the distance between two intersections. The node is drawn on the actual intersection so that the coordinates of the intersection become the node number. The number may be written in or the node left blank, as the analyst prefers.

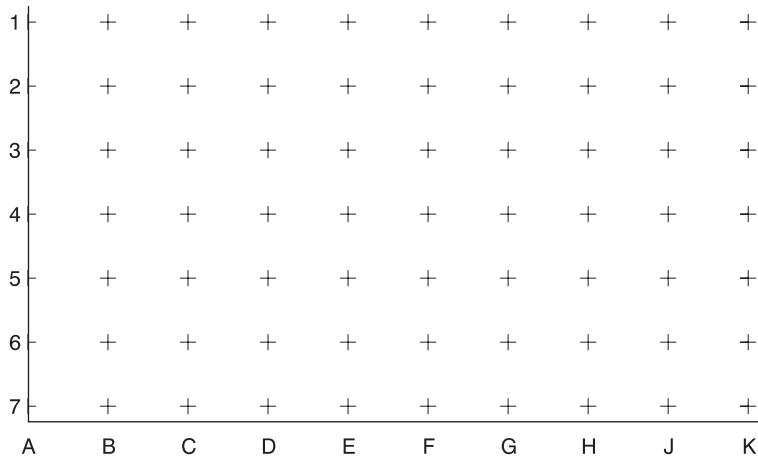


Figure 11.16

As an alternative to writing the grid letters on the nodes, it may be advantageous to write the letters *between* the nodes as in Figure 13.5. This is more fully described on pages 89 and 90.

Figure 11.17 shows a section of a network drawn on a gridded background representing the early stages of a design project. As can be seen, there is no need to fill in the nodes, although, for clarity, activities A1–B1, B1–B2, A3–B3, A3–B4 and A5–C5 have had the node numbers added. The node numbers for ‘electrical layout’ would be B4–C4, and the map reference principle helps to find the activity on the network when discussing the programme on the telephone or quoting it on email.

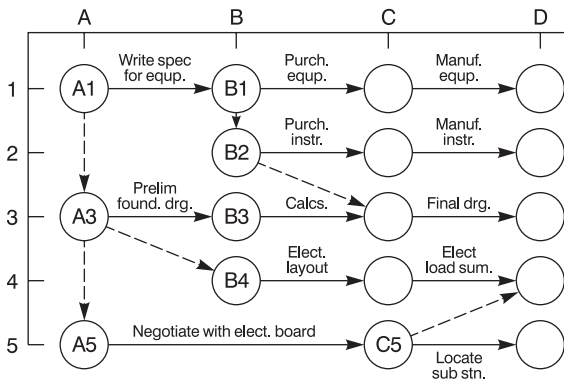


Figure 11.17

There is no need to restrict an activity to the distance between two adjacent intersections of coordinates. For example, A5–C5 takes up two spaces. Similarly, any space can also be used as a dummy and there is no restriction on the length or direction of dummies. It is, however, preferable to restrict activities to horizontal lines for ease of writing and subsequent identification.

When required, additional activities can always be inserted in an emergency by using suffix letters. For example, if activity ‘preliminary foundation drawings’ A3–B3 had to be preceded by, say, ‘obtain loads’, the network could be redrawn as shown in Figure 11.18.

Identifying or finding activities quickly on a network can be of great benefit and the above method has considerable advantages over other numbering systems. The use of coordinates is particularly useful in minimizing the risk

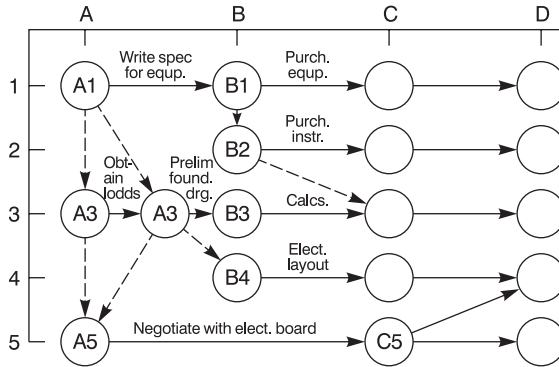


Figure 11.18

of duplicating node numbers in a large network. Since each node is, as it were, prenumbered by its coordinates, the possibility of double numbering is virtually eliminated.

Unfortunately, if the planner enters any number twice on a computer input sheet the results can be disastrous, since the machine will, in many instances, interpret the error as a logical sequence. The following example shows how this is possible. The intended sequence is shown in Figure 11.19. If the planner by mistake enters a number 11 instead of 15 for the last event of activity d, the sequence will, in effect, be as shown in Figure 11.20, but the computer will interpret the error as in Figure 11.21. Clearly, this will give a wrong analysis. If this little network had been drawn on a grid with coordinates as node numbers, it would have appeared as in Figure 11.22. Since the planner knows

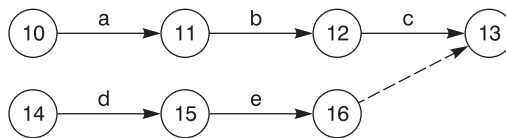


Figure 11.19

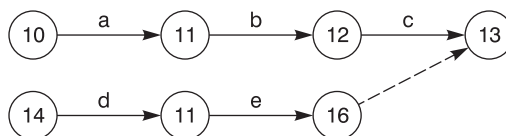


Figure 11.20

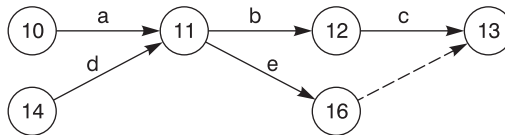


Figure 11.21

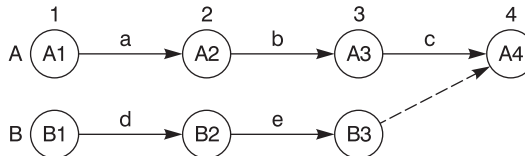


Figure 11.22

that all activities on line B must start with a B, the chance of the error occurring is considerably reduced. Furthermore, to make the computer program foolproof, one could programme it *not* to accept activities with different node letters *and* having a duration other than zero. In this way, only dummy activities can cross the grid lines.

Hammocks

When a number of activities are in series, they can be summarized into one activity encompassing them all. Such a summary activity is called a *Hammock*. It is assumed that only the first activity is dependent on another activity outside the hammock and only the last activity affects another activity outside the hammock.

On bar charts, hammocks are frequently shown as summary bars above the constituent activities and can therefore simplify the reporting document for a higher management who are generally not concerned with too much detail. For example, in Figure 11.22, activities A1 to A4 could be written as one hammock activity since only A1 and A4 are affected by work outside this activity string.

Ladders

When a string of activities repeats itself, the set of strings can be represented by a configuration known as a ladder. For a string consisting of, say, four activities relating to two stages of excavation, the configuration is shown in

Figure 11.23. This pattern indicates that, for example, hand trim of Stage II can only be done if

- 1 Hand trim of Stage I is complete
- 2 Machine excavation of Stage II is complete.

This, of course, is what it should be.

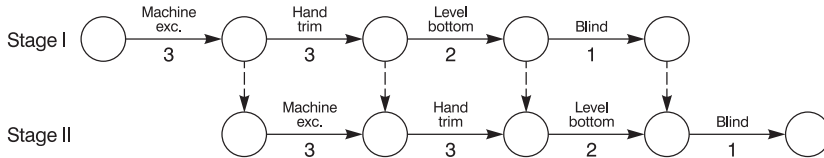


Figure 11.23

However, if the work were to be divided into three stages, the ladder could, on the face of it, be drawn as shown in Figure 11.24. Again, in Stage II all the operations are shown logically in the correct sequence, but closer examination of Stage III operations will throw up a number of logic errors which the inexperienced planner may miss.

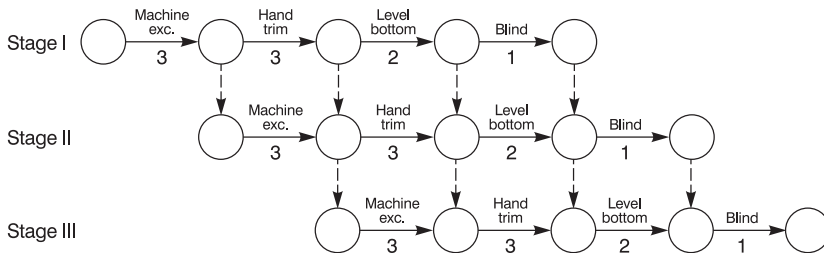


Figure 11.24

What we are trying to show in the network is that Stage III hand trim cannot be performed until Stage III machine excavation is complete and Stage II hand trim is complete. However, what the diagram says is that, in addition to these restraints, Stage III hand trim cannot be performed until Stage I level bottom is also complete.

Clearly, this is an unnecessary restraint and cannot be tolerated. The correct way of drawing a ladder therefore when more than two stages are involved is as in Figure 11.25. We must, in fact, introduce a dummy activity in Stage II

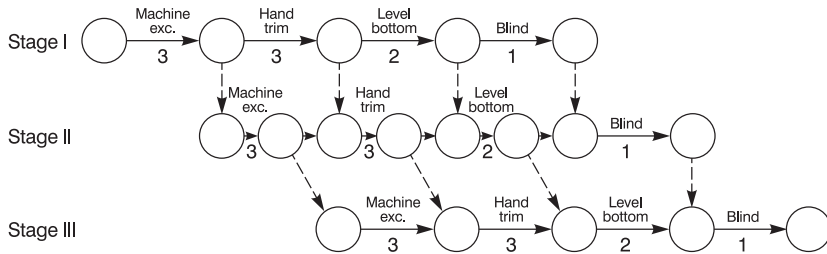


Figure 11.25

(and any intermediate stages) between the starting and completion node of every activity except the last. In this way, the Stage III activities will not be restrained by Stage I activities except by those of the same type.

An examination of Figure 11.25 shows a new dummy between the activities in Stage II, i.e.





Figure 11.26

This concept led to the development of a new type of network presentation called the 'Lester' diagram, which is described more fully in Chapter 13. This has considerable advantages over the conventional arrow diagram and the precedence diagram, also described later.

Once the network has been numbered and the times or durations added, it must be analysed. This means that the earliest starting and completion dates must be ascertained and the floats or 'spare times' calculated. There are three main types of analysis:

- 1 Arithmetical;
- 2 Graphical;
- 3 Computer.

Since these three different methods (although obviously giving the same answers) require very different approaches, a separate chapter has been devoted to each technique (Chapters 15, 16 and 17).

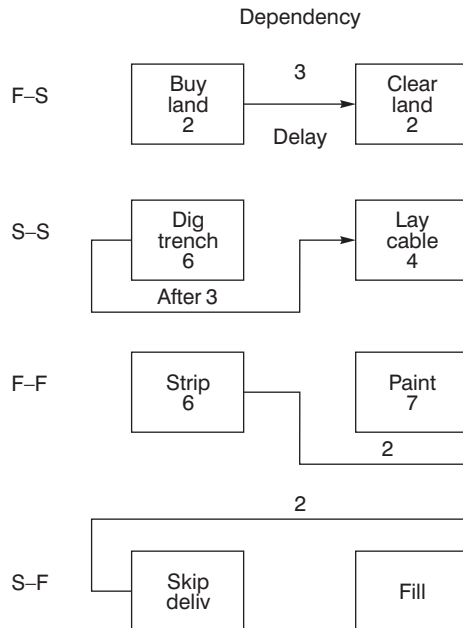**Figure 11.27**

By far the most common logical constraint of a network is as given in the examples on the previous pages, i.e. 'Finish to Start' or activity B can only start when activity A is complete. However, it is possible to configure other restraints. These are: Start to Start, Finish to Finish and Start to Finish. Figure 11.27 shows these less usual constraints which are sometimes used when a lag occurs between the activities. Analysing a network manually with such restraints can be very confusing and should there be a lag or delay between any two activities, it is better to show this delay as just another activity. In fact all these three less usual constraints can be redrawn in the more conventional Finish to Start mode as shown in Figure 11.28



12

Precedence or activity on node (AoN) diagrams

Some planners prefer to show the interrelationship of activities by using the node as the activity box and interlinking them by lines. Because the durations are written in the activity box, dummy activities are eliminated. In a sense, each connecting line is, of course, a dummy because it is timeless. The network produced in this manner is called variously a 'precedence diagram', a 'circle and link diagram' or an 'activity on node diagram'.

Precedence diagrams have a number of advantages over arrow diagrams in that

- 1 No dummies are necessary;
- 2 They may be easier to understand by people familiar with flow sheets;
- 3 Activities are identified by one number instead of two so that a new activity can be inserted between two existing activities without changing the identifying node numbers of the existing activities;
- 4 Overlapping activities can be shown very easily without the need for the extra dummies shown in Figure 11.25.

Analysis and float calculation (see Chapter 15) is identical to the methods employed for arrow diagrams and, if the box is large enough, the earliest and latest start and finishing times can be written in.

A typical precedence network is shown in Figure 12.1, where the letters in the box represent the description or activity numbers. Durations are shown above-centre and the earliest and latest starting and finish times are given in

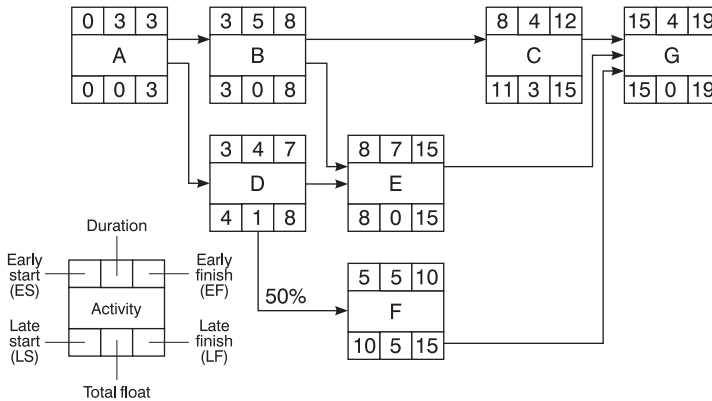


Figure 12.1

the corners of the box, as explained in the key diagram. The top line of the activity box gives the earliest start (ES), duration (D) and earliest finish (EF). Therefore:

$$EF = ES + D$$

The bottom line gives the latest start and the latest finish. Therefore:

$$LS = LF - D$$

The centre box is used to show the total float.

ES is, of course, the *highest* EF of the previous activities leading into it, i.e. the ES of activity E is 8, taken from the EF of activity B.

LF is the *lowest* LS of the previous activity *working backwards*, i.e. the LF of A is 3, taken from the LS of activity B.

The earliest start (ES) of activity F is 5 because it can start after activity D is 50% complete, i.e.

ES of activity D is 3
 Duration of activity D is 4
 Therefore 50% of duration is 2
 Therefore ES of activity F is $3 + 2 = 5$

Sometimes it is advantageous to add a percentage line on the bottom of the activity box to show the stage of completion before the next activity can start (Figure 12.2). Each vertical line represents 10% completion. Apart from showing when the next activity starts, the percentage line can also be used to indicate the percentage completion of the activity as a statement of progress once work has started, as in Figure 12.3.

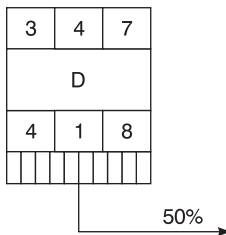


Figure 12.2

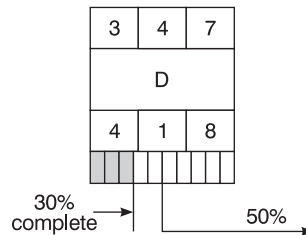


Figure 12.3

There are two other advantages of the precedence diagram over the arrow diagram.

- 1 The risk of making the logic errors is virtually eliminated. This is because each activity is separated by a link, so that the unintended dependency from another activity is just not possible.

This is made clear by referring to Figure 12.4 which is the precedence representation of Figure 11.25.

As can be seen, there is no way for an activity like 'level bottom' in Stage I to affect activity 'Hand trim' in Stage III, as is the case in Figure 11.24.

- 2 In a precedence diagram all the important information of an activity is shown in a neat box.

A close inspection of the precedence diagram (Figure 12.5), shows that in order to calculate the total float, it is necessary to carry out the forward and backward pass. Once this has been done, the total float of any activity is simply the difference between the latest finishing time (LF) obtained from the backward pass and the earliest finishing time (EF) obtained from the forward pass.

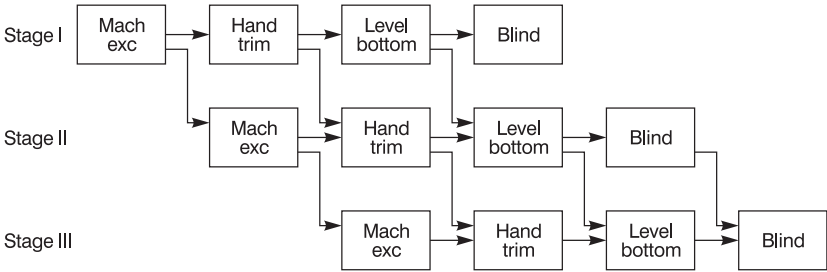


Figure 12.4

On the other hand, the free float can be calculated from the forward pass only, because it is simply the difference of the earliest start (ES) of a subsequent activity and the earliest finishing time (EF) of the activity in question.

This is clearly shown in Figure 12.5.

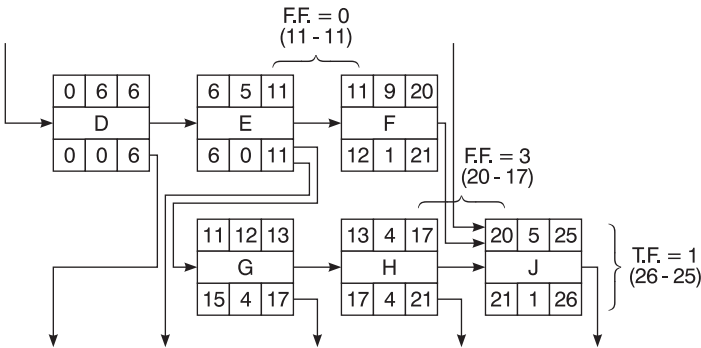


Figure 12.5

Despite the above-mentioned advantages, which are especially appreciated by people familiar with flow diagrams as used in manufacturing industries, many prefer the arrow diagram because it resembles more closely a bar chart. Although the arrows are not drawn to scale, they do represent a forward-moving operation and, by thickening up the actual line in approximately the same proportion as the reported progress, a 'feel' for the state of the job is immediately apparent.

One major disadvantage of precedence diagrams is the practical one of size of box. The box has to be large enough to show the activity title, duration and

earliest and latest times, so that the space taken up on a sheet of paper reduces the network size. By contrast, an arrow diagram is very economical, since the arrow is a natural line over which a title can be written and the node need be no larger than a few millimetres in diameter – if the coordinate method is used.

The difference (or similarity) between an arrow diagram and a precedence network is most easily seen by comparing the two methods in the following example. Figure 12.6 shows a project programme and Figure 12.7 the same project programme as a precedence diagram. The difference in area of paper required by the two methods is obvious (see also Chapter 27).

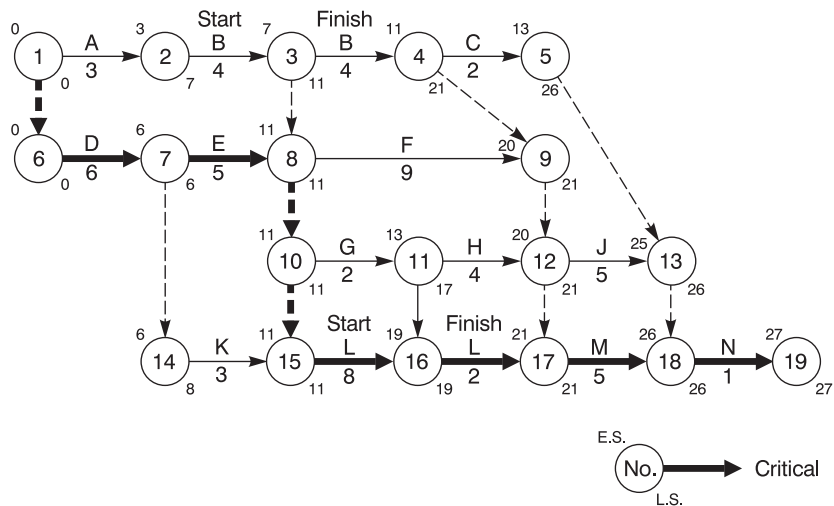


Figure 12.6

Figure 12.7 shows the precedence version of Figure 12.6.

In practice, the only information necessary when drafting the original network is the activity title, the duration and of course the interrelationships of the activities. A precedence diagram can therefore be modified by drawing ellipses just big enough to contain the activity title and duration, leaving the computer (if used) to supply the other information at a later stage. The important thing is to establish an acceptable logic before the end date and the activity floats are computed. In explaining the principles of network diagrams in text books (and in examinations), letters are often used as activity titles, but in practice when building up a network, the real descriptions have to be used.

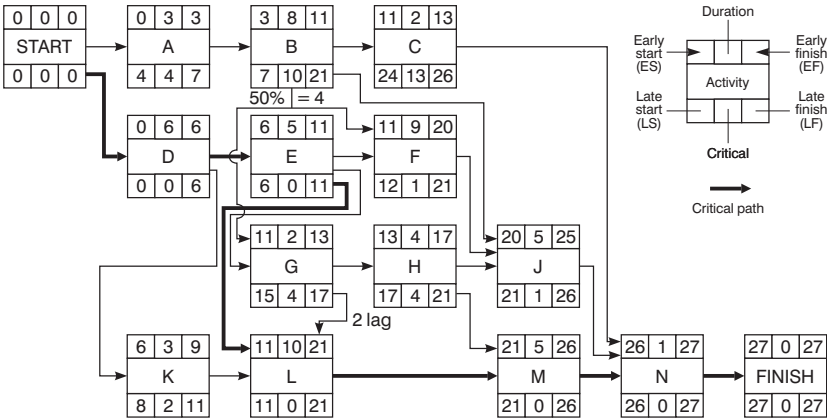


Figure 12.7

An example of such a diagram is shown in Figure 12.8. Care must be taken not to cross the nodes with the links and to insert the arrowheads to ensure the correct relationship.

One problem of a precedence diagram is that when large networks are being developed by a project team, the drafting of the boxes takes up a lot of time and paper space and the insertion of links (or dummy activities) becomes a nightmare, because it is confusing to cross the boxes, which are in effect nodes. It is necessary therefore to restrict the links to run horizontally or vertically between the boxes, which can lead to congestion of the lines, making the tracing of links very difficult.

When a large precedence network is drawn by a computer, the problem becomes even greater, because the link lines can sometimes be so close

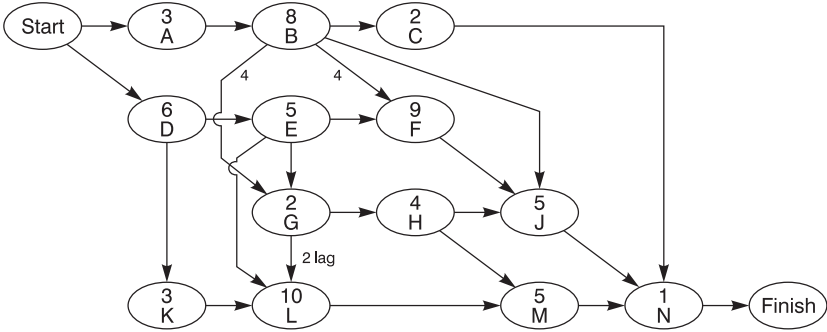


Figure 12.8

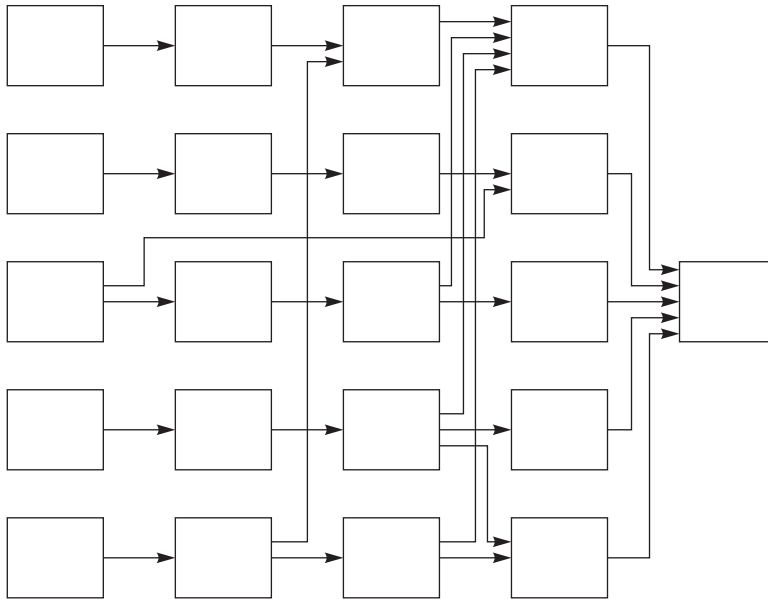


Figure 12.9

together that they will appear as one thick black line. This makes it impossible to determine the beginning or end of a link, thus nullifying the whole purpose of a network, i.e. to show the interrelationship and dependencies of the activities. See Figure 12.9.

For small networks with few dependencies, precedence diagrams are no problem, but for networks with 200–400 activities per page, it is a different matter. The planner must not feel restricted by the drafting limitations to develop an acceptable logic, and the tendency by some irresponsible software companies to advocate eliminating the manual drafting of a network altogether must be condemned. This manual process is after all the key operation for developing the project network and the distillation of the various ideas and inputs of the team. In other words, it is the thinking part of network analysis. The number crunching can then be left to the computer.

13

Lester diagram

With the development of the *network grid*, the drafting of an arrow diagram enables the activities to be easily organized into disciplines or work areas and eliminates the need to enter reference numbers into the nodes. Instead the grid reference numbers (or letters) can be fed into the computer. The grid system also makes it possible to produce acceptable arrow diagrams on a computer which can be used 'in the field' without converting them into the conventional bar chart. An example of such a computerized arrow diagram, which has been developed by Claremont Controls as part of their latest Hornet Windmill program, is given in Figure 13.1. It will be noticed that the link lines never cross a node!

A grid system can, however, pose a problem when it becomes necessary to insert an activity between two existing ones. In practice, resourceful planners can overcome the problem by combining the new activity with one of the existing activities.

If, for example, two adjoining activities were 'Cast Column, 4 days' and 'Cast Beam, 2 days' and it were necessary to insert 'Strike Formwork, 2 days' between the two activities, the planner

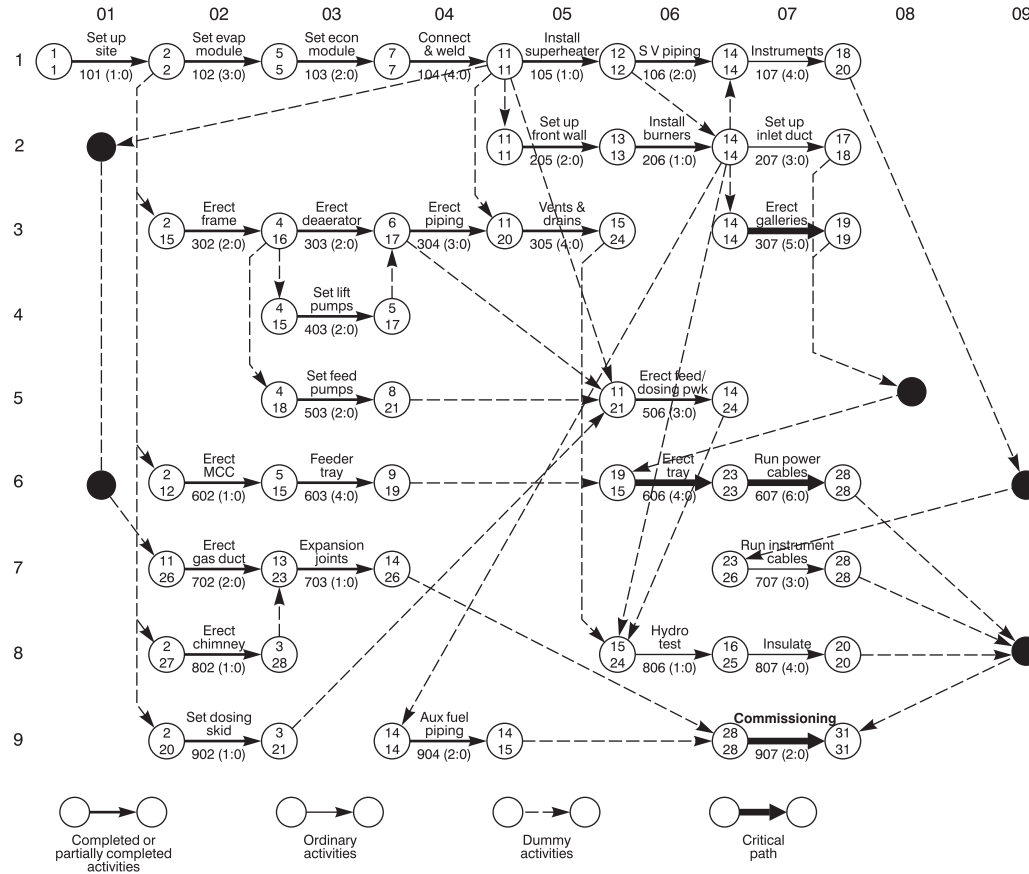


Figure 13.1

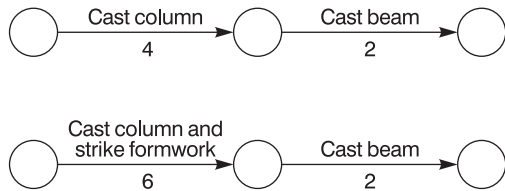


Figure 13.2

would simply restate the first activity as ‘Cast Column and Strike Formwork, 6 days’ (Figure 13.2).

While this overcomes the drafting problem it may not be acceptable from a cost control point of view, especially if the network is geared to an EVA system (see Chapter 27). Furthermore the fact that the grid numbers were *on* the nodes meant that when it was necessary to move a string along one or more grid spaces, the relationship between the grid number and the activity changed. This could complicate the EVA analysis. To overcome this, the grid number was placed *between* the nodes (Figure 13.3).

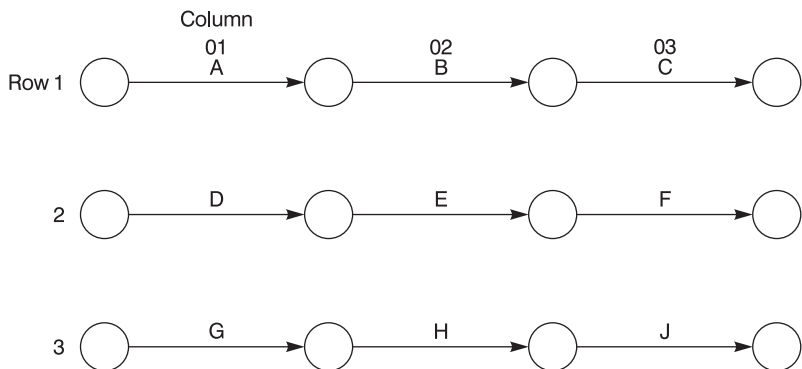


Figure 13.3

It can be argued that a precedence network lends itself admirably to a grid system as the grid number is always and permanently related to the activity and is therefore ideal for EVA. However, the problem of the congested link lines (especially the vertical ones) remains.

Now, however, the perfect solution has been found. It is in effect a combination of the arrow diagram and the precedence diagram and like the marriage of Henry VII which ended the Wars of the Roses, this marriage should end the war of the networks!

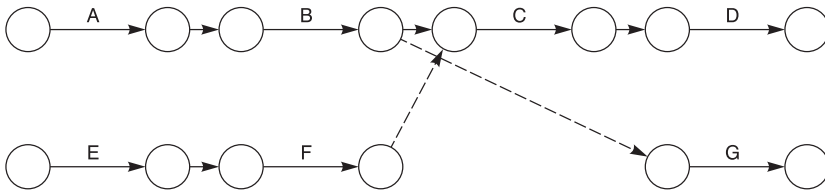


Figure 13.4

The new diagram, which could be called the ‘Lester’ diagram, is simply an arrow diagram where each activity is separated by a short link in the same way as in a precedence network (Figure 13.4).

In this way it is possible to eliminate or at least reduce logic errors, show total float and free float as easily as on a precedence network, but has the advantages of an arrow diagram in speed of drafting, clarity of link presentation and the ability to insert new activities in a grid system without altering the grid number/activity relationship. Figure 13.5 shows all these features.

If a line is drawn around any activity, the similarity between the Lester diagram and the precedence diagram becomes immediately apparent. See Figure 13.6.

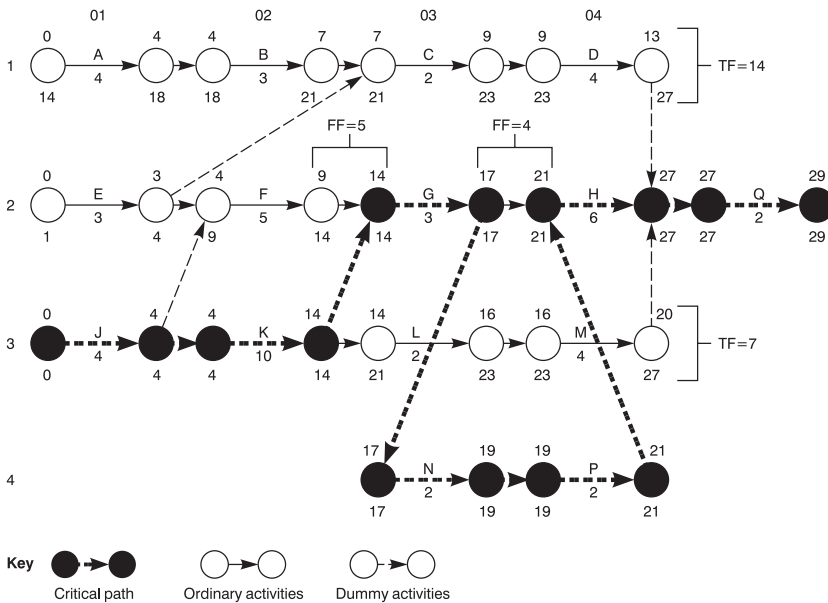


Figure 13.5

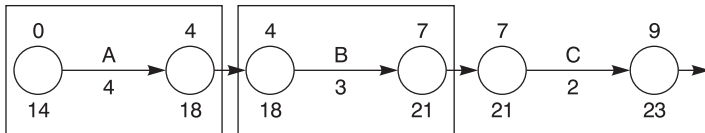


Figure 13.6

Although all the examples in subsequent chapters use arrow diagrams, precedence diagrams or ‘Lester’ diagrams could be substituted in most cases. The choice of technique is largely one of personal preference and familiarity. Provided the user is satisfied with one system and is able to extract the maximum benefit, there is little point in changing to another.

Time scale networks and linked bar charts

When preparing presentation or tender documents, or when the likelihood of the programme being changed is small, the main features of a network and bar chart can be combined in the form of a time scale network, or a linked bar chart. A time scale network has the length of the arrows drawn to a suitable scale in proportion to the duration of the activities. The whole network can, in fact, be drawn on a gridded background where each square of the grid represents a period of time such as a day, week or month. Free float is easily ascertainable by inspection, but total float must be calculated in the conventional manner.

By drawing the activities to scale and starting each activity at the earliest date, a type of bar chart is produced which differs from the conventional bar chart in that some of the activity bars are on the same horizontal line. The disadvantage of such a presentation is that part of the network has to be redrawn ‘downstream’ from any activity which changes its duration. It can be seen that if one of the early activities changes in either duration or starting point, the whole network has to be modified.

However, a time scale network (especially if restricted to a few major activities) is a clear and concise communication document for reporting up. It loses its value in communicating down because changes increase with detail and constant revision would be too time consuming.

A linked bar chart is very similar to a normal bar chart, i.e. each activity is on a separate line and the activities are listed vertically at the edge of the paper. However, by drawing interlinking vertical (or inclined) dummy

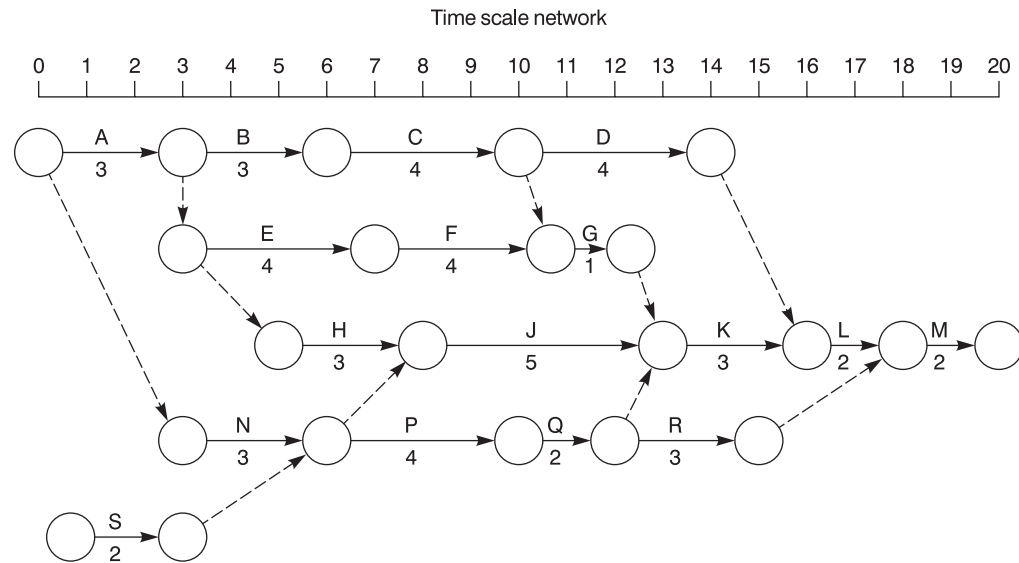


Figure 13.7

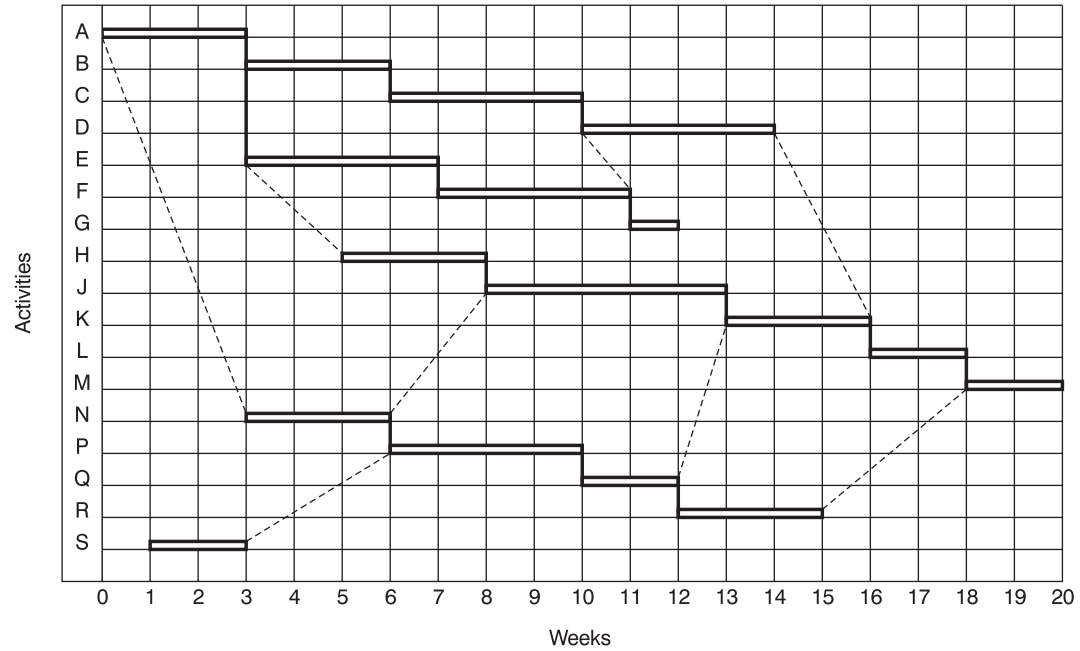


Figure 13.8

activities to join the main bars, a type of programme is produced which clearly shows the interrelationship of the activity bars.

Chapter 16 describes the graphical analysis of networks, and it can be seen that if the ends of the activities were connected by the dummies a linked bar chart would result. Figure 13.7 shows a small time scale network and Figure 13.8 shows the same programme drawn as a linked bar chart.

Float

Because float is such an important part of network analysis and because it is frequently quoted – or misquoted – by computer protagonists as another reason why computers *must* be used, a special discussion of the subject may be helpful to those readers not too familiar with its use in practice.

Of the three types of float shown on a printout, i.e. the total float, free float and independent float, only the first – the total float – is in general use. Where resource smoothing is required, a knowledge of free float can be useful, since it is the activities with free float that can be moved backwards or forwards in time without affecting any other activities. Independent float, on the other hand, is really quite a useless piece of information and should be suppressed (when possible) from any computer printout. Of the many managers, site engineers or planners interviewed, none has been able to find a practical application of independent float.

Total float

Total float, in contrast to other types of float, does have a role to play. By definition, it is the time

between the anticipated start (or finish) of an activity and the latest permissible start (or finish).

The float can be either positive or negative. A positive float means that the operation or activity will be completed earlier than necessary, and a negative float indicates that the activity will be late. A prediction of the status of any particular activity is, therefore, a very useful and important piece of information for a manager. However, this information is of little use if not transmitted to management as soon as it becomes available, and every day of delay reduces the manager's ability to rectify the slippage or replan the mode of operation.

The reason for calling this type of float 'total float' is because it is the total of all the 'free floats' in a string of activities when working back from where this string meets the critical path to the activity in question.

For example, in Figure 16.2, the activities in the lowest string J to P, have the following free floats: $J = 0$, $K = 10 - 9 = 1$, $L = 0$, $M = 15 - 14 = 1$, $N = 21 - 19 = 2$, $P = 0$. Total float for K is therefore $2 + 1 + 1 + 1 = 4$. This is the same as the 4 shown in the lower middle space of the node.

It is very easy to calculate the total floats and free floats in a precedence or Lester diagram. For any activity, the total float is the difference between the *latest finish* and *earliest finish* (or *latest start* and *earliest start*). The free float is the difference between the *earliest finish* of the activity in question and the *earliest start* of the following activity. The diagram in Figure 14.9 makes this clear.

Calculation of float

By far the quickest way to calculate the float of a particular activity is to do it manually. In practice, one does not require to know the float of *all* activities at the same time. A list of floats is, therefore, unnecessary. The important point is that the float of a particular activity which is of immediate interest is obtainable quickly and accurately.

Consider the string of activities in a simple construction process. This is shown in Figure 14.1 in Activity on Arrow (AoA) format and in Figure 14.2 in the simplified Activity on Node (AoN) format.

It can be seen that the total duration of the sequence is 34 days. By drafting the network in the method shown, and by using the day numbers at the end of *each* activity, including dummies, an accurate prediction is obtained immediately and the float of any particular activity can be seen almost by

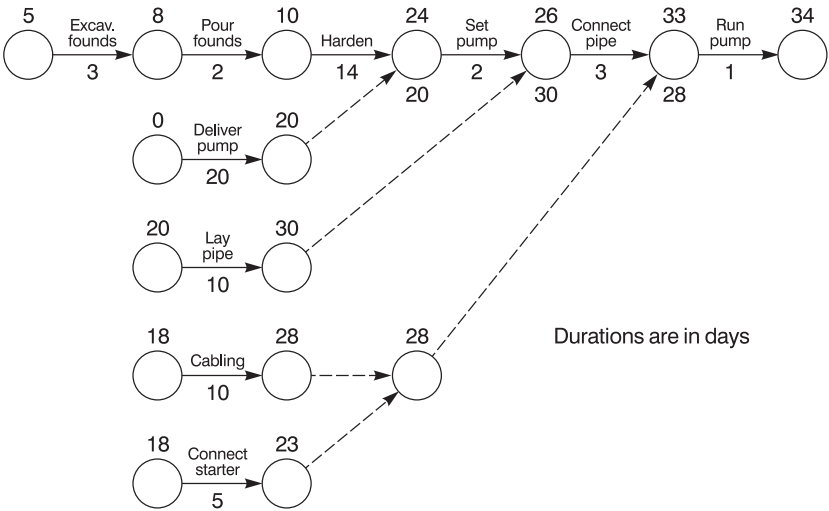


Figure 14.1

inspection. It will be noted that each activity has two dates or day numbers – one at the beginning and one at the end (Figure 14.3). Therefore, where two (or more) activities meet at a node, all the end day numbers are inserted (Figure 14.4). The highest number is now used to calculate the overall project duration, i.e. $30 + 3 = 33$, and the difference between the highest and the other number immediately gives the float of the other activity and *all* the activities

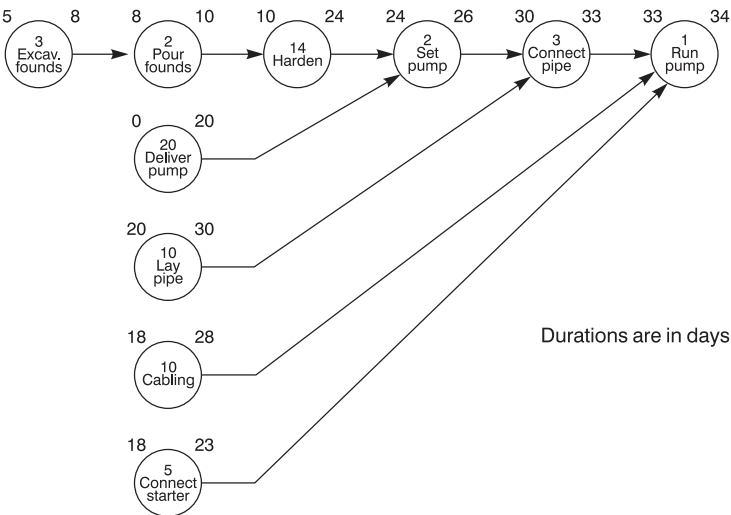


Figure 14.2




Figure 14.3

in that string up to the previous node at which more than one activity meet. In other words, 'set pumps' (Figure 14.1) has a float of $30 - 26 = 4$ days, as have all the activities preceding it except 'deliver pump', which has an additional $24 - 20 = 4$ days float.

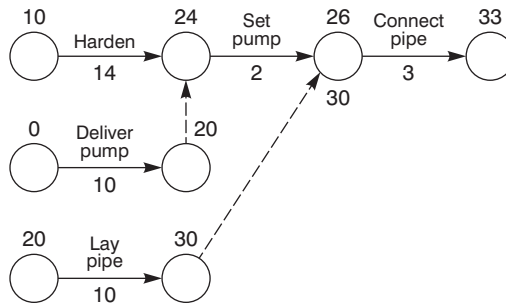


Figure 14.4

If, for example, the electrical engineer requires to know for how long he can delay the cabling because of an emergency situation on another part of the site, without delaying the project, he can find the answer right away. The float is $33 - 28 = 5$ days. If the labour he needs for the emergency can be drawn from the gang erecting the starters, he can gain another $28 - 23 = 5$ days. This gives him a total of 10 days' grace to start the starter installation without affecting the total project time.

A few practice runs with small networks will soon emphasize the simplicity and speed of this method. We have in fact only dealt in this exposition with small – indeed, tiny – networks. How about large ones? It would appear that this is where the computer is essential, but in fact, a well-drawn network can be analysed manually just as easily whether it is large or small. Provided the very simple base rules are adhered to, a very fast forward pass can be inserted. The float of any *string* can then be seen by inspection, i.e. by simply subtracting the lower node number from the higher number of the node which forms the termination point of the string in question. This point can best be

illustrated by the example given in Figure 14.5. For simplicity, the activities have been given letters instead of names, since the importance lies in understanding the principle, and the use of letters helps to identify the string of activities. In this example there are 50 activities. Normally, a practical network should have between 200 and 300 activities maximum (i.e. four to six times the number of activities shown) but this does not pose any greater problem. All the times (day numbers) were inserted, and the floats of activities in strings A, B, C, E, F, G and H were calculated in 5 minutes. A 300-activity network would, therefore, take 30 minutes.

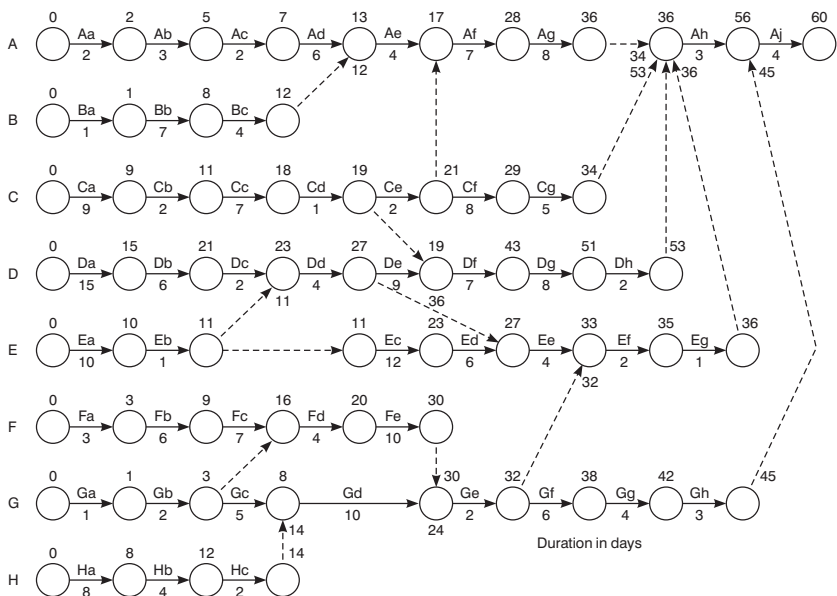


Figure 14.5

It can in fact be stated that any practical network can be ‘timed’, i.e. the forward pass can be inserted and the important float reported in 45 minutes. It is, furthermore, very easy to find the critical path. Clearly, it runs along the strings of activities with the highest node times. This is most easily calculated by working back from the end. Therefore the path runs through Aj, Ah, dummy, Dh, Dg, Df, De, Dd, Dc, Db, Da.

An interesting little problem arises when calculating the float of activity Ce, since there are two strings emanating from the end node of that activity. By conventional backward pass methods – and indeed this is how a computer carries out the calculation – one would insert the backward pass

in the nodes starting from the end (see Figure 14.6). When arriving at Ce, one finds that the latest possible time is 40 when calculating back along string Cg and Cf, while it is 38 when calculating back along string Ag, Af. Clearly, the actual float is the difference between the earliest date and the earliest of the two latest dates, i.e. day 38 instead of day 40. The float of Ce is therefore $38 - 21 = 17$ days.

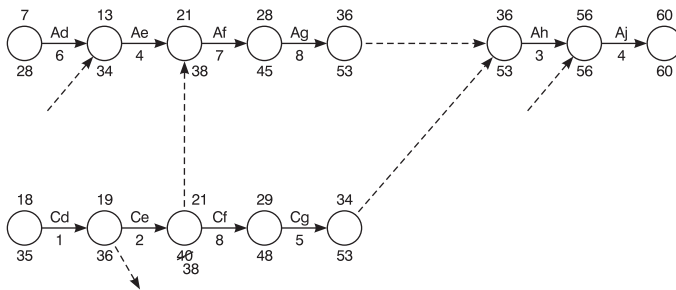


Figure 14.6

As described above, the calculation is tedious and time consuming. A far quicker method is available by using the technique shown in Figure 14.5, i.e. one simply inserts the various forward passes on each string and then looks at the end node of the activity in question – in our case, activity Ce. It can be seen that by following the two strings emanating from Ce that string Af, Ag joins Ah at day 36. String Cf, Cg, on the other hand, joins Ah at day 34. The float is, therefore, the *smallest* difference between the *highest* day number and one of the two day numbers just mentioned. Clearly, therefore, the float of activity Ce is $53 - 36 = 17$ days. Cf and Cg, of course, have a float of $53 - 34 = 19$ days.

The time to inspect and calculate the float by the second method is literally only a few minutes. All one has to do is to run through the paths emanating from the end node of the selected activity and note the *highest* day number where the strings *meet the critical path*. The difference between the day number of the critical string and the highest number on the tributary strings (emanating from the activity in question) is the float.

Supposing we now wish to find the float of activity Gb:

- Follow string Fd, Fe,
- Follow string Gc, Gd, Ge,
- Follow string Gf, Gg, Gh,
- Follow string Ef, Eg, Ah.

Fe and Gd meet at Ge, therefore they can be ignored.

String Gf–Gh meets Aj at day 45
String Ef–Eg meets Ah at day 36
Therefore float is either $56-45 = 11$
or $53-36 = 17$

Clearly, the correct float is 11 since it is the smaller. The time taken to inspect and calculate the float was exactly 21 seconds!

All the floats calculated above have been total floats. Free float can only occur on activities entering a node when more than one enters that node. It can be calculated very easily by subtracting the total float of the incoming activity from the total float of the outgoing activity, as shown in Figure 14.7. It should be noted that one of the activities entering the node *must* have zero *free* float.

When more than one activity leaves a node, the value of the free float to be subtracted is the *lowest* of the outgoing activity floats, as shown in Figure 14.8.

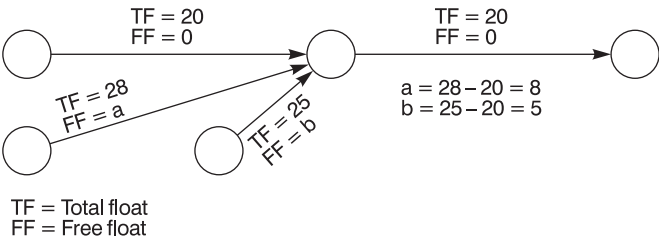


Figure 14.7

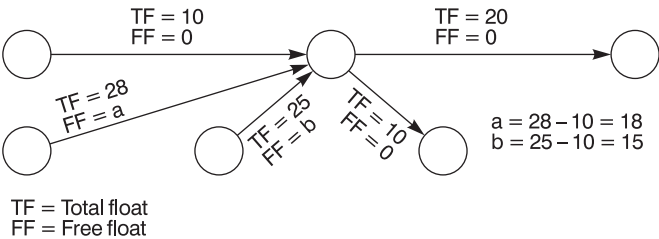


Figure 14.8

Free float

If a computer is not available, free float on an arrow diagram can be ascertained by inspection, since it can only occur where more than one activity meets a

node. This is described in detail in Chapter 15 with Figures 15.5 and 15.6. If the network is in the precedence format, the calculation of free float is even easier. All one has to do is to subtract the early finish time in the preceding node from the early start time of the succeeding node. This is clearly shown on Figure 14.9, which is the precedence equivalent to Figure 14.1.

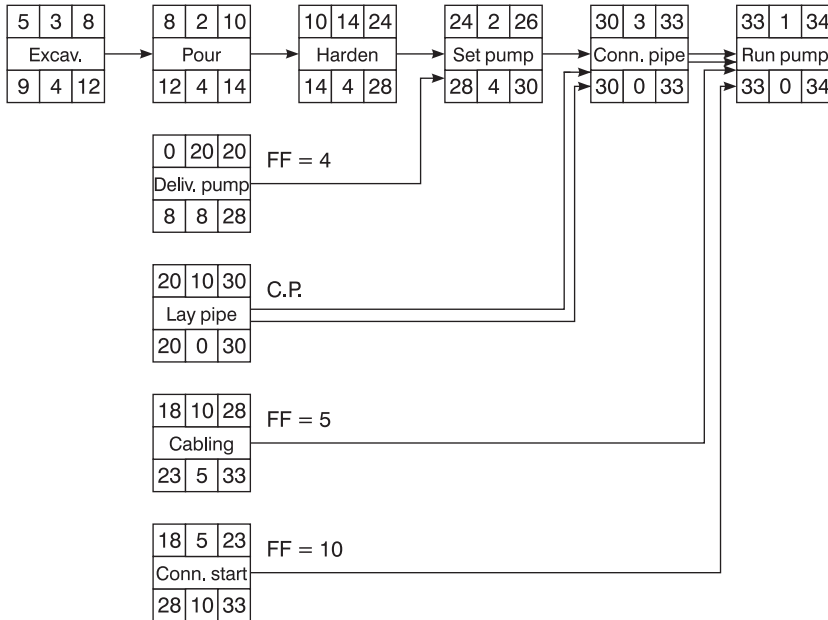


Figure 14.9 (Durations in days)

One of the phenomena of a computer printout is the comparatively large number of activities with free float. Closer examination shows that the majority of these are in fact dummy activities. The reason for this is, of course, obvious, since, by definition, free float can only exist when more than one activity enters a node. As dummies nearly always enter a node with another (real) activity, they all tend to have free float. Unfortunately, no computer program exists which automatically transfers this free float to the preceding real activity, so that the benefit of the free float is not immediately apparent and is consequently not taken advantage of.

15

Arithmetical analysis

This method is the classical technique and can be performed in a number of ways. One of the easiest methods is to add up the various activity durations on the network itself, writing the sum of each stage in a square box at the end of that activity, i.e. next to the end event (Figure 15.1). It is essential that each route is examined separately and where the routes meet, the *largest* sum total must be inserted in the box. When the complete network has been summed in this way, the *earliest* starting will have been written against each event.

Now the reverse process must be carried out. The last event sum is now used as a base from which the activities leading into it are subtracted. The result of these subtractions are entered in triangular boxes against each event (Figure 15.2). As with the addition process for calculating the earliest starting times, a problem arises when a node is reached where two routes or activities meet. Since the *latest* starting times of an activity are required, the *smallest* result is written against the event.

The two diagrams are combined in Figure 15.3. The difference between the earliest and latest times gives the 'float', and if this difference

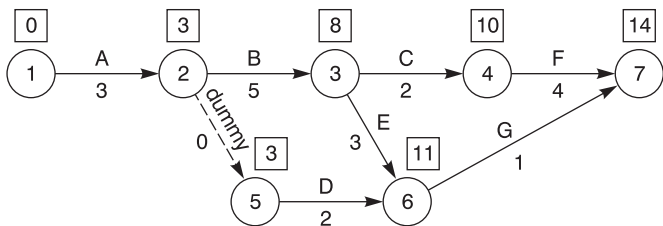


Figure 15.1 Forward pass

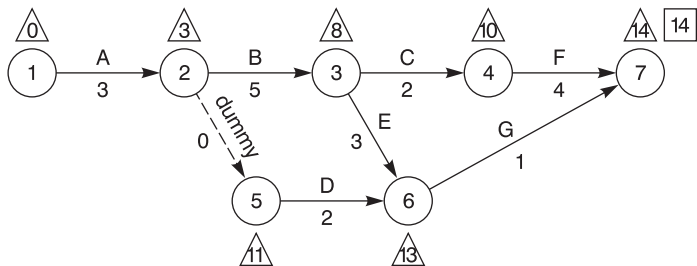


Figure 15.2 Backward pass

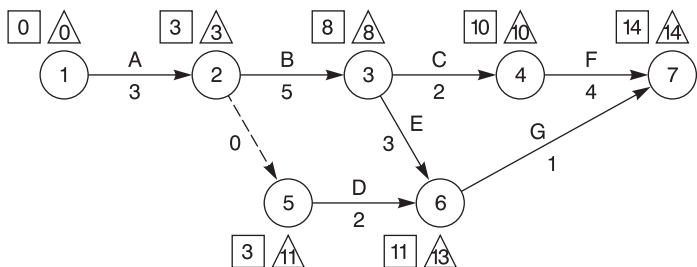


Figure 15.3

is zero (i.e. if the numbers in the squares and triangles are the same) the event is on the critical path.

The equivalent precedence (AoN) diagram is shown in Figure 15.6.

A table can now be prepared setting out the results in a concise manner (Table 15.1).

Slack

The difference between the latest and earliest times of any event is called 'slack'. Since each activity has two events, a beginning event and an end

Table 15.1

<i>a</i>	<i>b</i>	<i>c</i>	<i>d</i>	<i>e</i>	<i>f</i>	<i>g</i>	<i>h</i>
<i>Title</i>	<i>Activity</i>	<i>Duration, D</i>	<i>Latest time end event</i>	<i>Earliest time end event</i>	<i>Earliest time beginning event</i>	<i>Total float (d-f-c)</i>	<i>Free float (e-f-c)</i>
A	1–2	3	3	3	0	0	0
B	2–3	5	8	8	3	0	0
DUMMY	2–5	0	11	3	3	8	0
C	3–4	2	10	10	8	0	0
E	3–6	3	13	11	8	2	0
F	4–7	4	14	14	10	0	0
D	5–6	2	13	11	3	8	6
G	6–7	1	14	14	11	2	2

Column a: activities by the activity titles.

Column b: activities by the event numbers.

Column c: activity durations, D.

Column d: *latest time* of the activities' end event, TL_E .

Column e: *earliest time* of the activities' end event, TE_E .

Column f: *earliest time* of the activities' beginning event, TE_B .

Column g: total float of the activity.

Column h: free float of the activity.

event, it follows that there are two slacks for each activity. Thus the slack of the beginning event can be expressed as $TL_B - TE_B$ and called beginning slack and the slack of the end event, appropriately called end slack, is $TL_E - TE_E$. The concept of slack is useful when discussing the various types of float, since it simplifies the definitions.

Float

This is the name given to the spare time of an activity, and is one of the more important by-products of network analysis. The four types of float possible will now be explained.

Total float

It can be seen that activity 3–6 in Figure 15.3 *must* be completed after 13 time units, but can be started after 8 time units. Clearly, therefore, since the activity itself takes 3 time units, the activity *could* be completed in $8 + 3 = 11$ time

units. Therefore there is a leeway of $13 - 11 = 2$ time units on the activity. This leeway is called total float, and is defined as latest time of end event minus earliest time of beginning event minus duration, or $TL_E - TE_B - D$.

Figure 15.3 shows that total float is, in fact, the same as beginning slack. Also, free float is the same as total float minus end slack. The proof is given at the end of this chapter.

Free float

Some activities, e.g. 5–6, as well as having total float have an additional leeway. It will be noted that activities 3–6 and 5–6 both affect activity 6–7. However, one of these two activities will delay 6–7 by the same time unit by which it itself may be delayed. The remaining activity, on the other hand, may be delayed for a period without affecting 6–7. This leeway is called free float, and can only occur in one or more activities where several meet at one event, i.e. if x activities meet at a node, it is possible that $x-1$ of these have free float. This free float may be defined as earliest time of end event minus earliest time of beginning event minus duration, or $TE_E - TE_B - D$.

For a more detailed discussion on the use of floats, and a rapid manual method for calculating total float, see Chapter 14.

Interfering float

The difference between the total float and the free float is known as interfering float. Using the previous notation, this can be expressed as

$$\begin{aligned} & (TL_E - TE_B - D) - (TE_E - TE_B - D) \\ &= TL_E - TE_B - D - TE_E + TE_B + D \\ &= TL_E - TE_E \end{aligned}$$

i.e. as the latest time of the end event minus the earliest time of the end event. It is, therefore, the same as the end slack.

Independent float

The difference between the free float and the beginning slack is known as independent float:

$$\begin{aligned} \text{since free float} &= TE_E - TE_B - D \\ \text{and beginning slack} &= TL_B - TE_B \\ \text{independent float} &= TE_E - TE_B - D - (TL_B - TE_B) \\ &= TE_E - TE_B - D \end{aligned}$$

Thus independent float is given by the earliest time of the end event minus the latest time of beginning event minus the duration.

In practice neither the interfering float nor the independent float find much application, and for this reason they will not be referred to in later chapters. The use of computers for network analysis enables these values to be produced without difficulty or extra cost, but they only tend to confuse the user and are therefore best ignored.

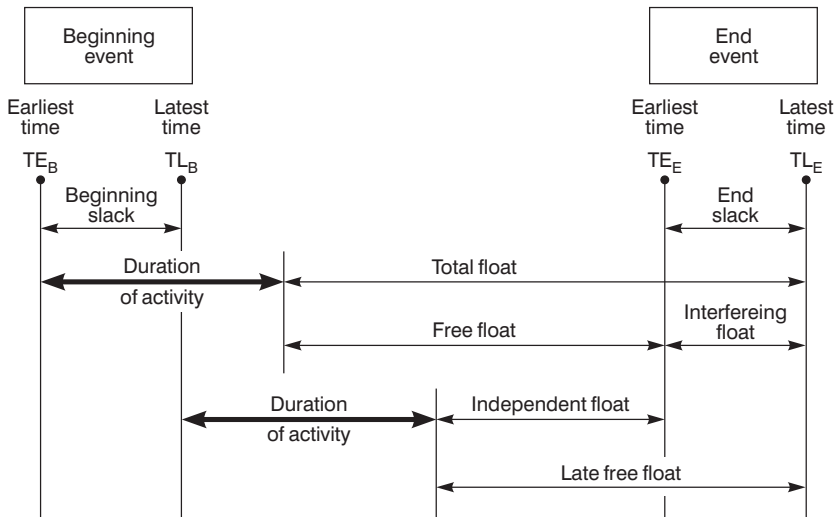


Figure 15.4

Summarizing all the above definitions, Figure 15.4 and the following expressions may be of assistance.

Notation

- D = duration of activity
- TE_B = earliest time of beginning event
- TE_E = earliest time of end event
- TL_B = latest time of beginning event
- TL_E = latest time of end event

Definitions

- beginning slack = $TL_B - TE_B$
- end slack = $TL_E - TE_E$
- total float = $TL_E - TE_B - D$

$$\begin{aligned}
 \text{free float} &= TE_E - TE_B - D \\
 \text{interfering float} &= TL_E - TE_E (= \text{end slack}) \\
 \text{independent float} &= TE_E - TL_B - D \\
 \text{late free float} &= TL_E - TL_B - D
 \end{aligned}$$

Critical path

Some activities have zero total float, i.e. no leeway is permissible for their execution, hence any delays incurred on the activities will be reflected in the overall project duration. These activities are therefore called critical activities, and every network has a chain of such critical activities running from the beginning event of the first activity to the end event of the last activity, without a break. This chain is called the critical path.

Frequently a project network has more than one critical path, i.e. two or more chains of activities all have to be carried out within the stipulated duration to avoid a delay to the completion date. In addition, a number of activity chains may have only one or two units of float, so that, for all intents and purposes, they are also critical. It can be seen, therefore, that it is important to keep an eye on all activity chains which are either critical or near-critical, since a small change in duration of one chain could quickly alter the priorities of another.

One disadvantage of the arithmetical method of analysis using the table or matrix shown in Table 15.1 is that all the floats must be calculated before the critical path can be ascertained. This drawback is eliminated when the method of analysis described in Chapter 14 is employed.

The concept of free float

Students often find it difficult to understand the concept of free float. The mathematical definitions are unhelpful, and the graphical representation on page 108 can be confusing. The easiest way to understand the difference between total float and free float is to inspect the *end* node of the activity in question. As stated earlier, free float can only occur where two or more activities enter a node. If the *earliest* end times (i.e. the forward pass) for each individual activity are placed against the node, the free float is simply the difference between the highest number of the earliest time on the node and the number of the earliest time of the activity in question.

In the example given in Figure 15.5 the earliest times are placed in squares, so following the same convention it can be seen from the figure (which is a

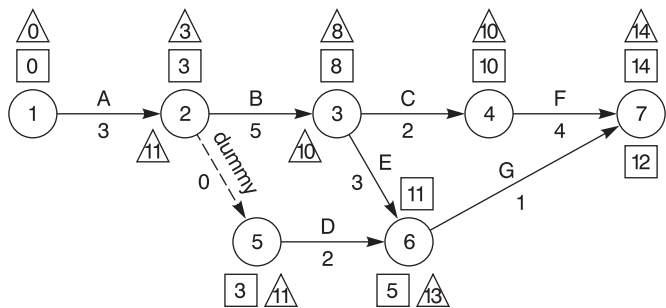


Figure 15.5

redrawing of Figure 15.1 with *all* the earliest and latest node times added) that

Figure 15.6 shows the equivalent precedence (AoN) diagram from which the free float can be easily calculated by subtracting the early *finish* time of the *preceding* node from the early *start* time of the *succeeding* node.

$$\text{Free float of activity D} = 11 - 5 = 6$$

$$\text{Free float of activity G} = 14 - 12 = 2$$

Activity E, because it is not on the critical path has total float of $13 - 11 = 2$ but has no free float.

The check of the free float by the formal definition is as follows:

$$\text{Free float} = TE_E - TE_B - D$$

$$\text{For activity D} = 11 - 3 - 2 = 6$$

$$\text{For activity G} = 14 - 11 - 1 = 2$$

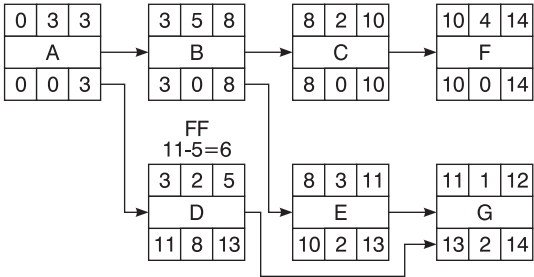


Figure 15.6

The check of the total float by the formal definitions is as follows:

$$\begin{aligned}\text{Total float} &= \text{TL}_E - \text{TE}_B - D \\ \text{For activity E} &= 13 - 8 - 3 = 2 \\ D &= 13 - 3 - 2 = 8 \\ G &= 14 - 11 - 2 = 2\end{aligned}$$

It was stated earlier that total float is the same as beginning slack. This can be shown by rewriting the definition of total float $= \text{TL}_E - \text{TE}_B - D$ as total float $= \text{TL}_E - D - \text{TE}_B$ but $\text{TL}_E - D = \text{TL}_B$. Therefore

$$\begin{aligned}\text{Total float} &= \text{TL}_B - \text{TE}_B \\ &= \text{Beginning slack}\end{aligned}$$

To show that free float = total float – end slack, consider the following definitions:

$$\text{Free float} = \text{TE}_E - \text{TE}_B - D \quad (15.1)$$

$$\text{Total float} = \text{TL}_E - \text{TE}_B - D \quad (15.2)$$

$$\text{End slack} = \text{TL}_E - \text{TE}_E \quad (15.3)$$

Subtracting equation (15.3) from equation (15.2)

$$\begin{aligned}&= \text{TL}_E - \text{TL}_B - D - (\text{TL}_E - \text{TE}_E) \\ &= \text{TL}_E - \text{TE}_B - D - \text{TL}_E + \text{TE}_E \\ &= \text{TE}_E - \text{TE}_B - D \\ &= \text{Free float}\end{aligned} \quad (15.1)$$

Therefore

$$\text{equation (15.1)} = \text{equation (15.2)} - \text{equation (15.3)}$$

or free float = total float – end slack.

16

Graphical analysis, milestones and LoB

It is often desirable to present the programme of a project in the form of a bar chart, and when the critical path and floats have been found by either the arithmetical or computer methods, the bar chart has to be drawn as an additional task. (Most computer programs can actually print a bar chart but these often run to several sheets.)

As explained in Chapter 25, bar charts, while they are not as effective as networks for the actual planning function, are still one of the best methods for allocating and smoothing resources. If resource listing and subsequent smoothing is an essential requirement, graphical analysis can give the best of both worlds. Naturally, any network, however analysed, can be converted very easily into a bar chart, but if the network is analysed graphically the bar chart can be 'had for free', as it were.

Modern computer programs will of course produce bar charts (or Gantt charts) from the inputs almost automatically. Indeed the input screen itself often generates the bar chart as the data are entered. However, when a computer is not

available or the planner is not conversant with the particular computer program the graphical method becomes a useful alternative.

The following list gives some of the advantages over other methods, but before the system is used on large jobs planners are strongly advised to test it for themselves on smaller contracts so that they can appreciate the short-cut methods and thus save even more planning time.

- 1 The analysis is extremely rapid, much quicker than the arithmetical method. This is especially the case when, after some practice, the critical path can be found by inspection.
- 2 As the network is analysed, the bar chart is generated automatically and no further labour need be expended to do this at a later stage.
- 3 The critical path is produced *before* the floats are known. (This is in contrast to the other methods, where the floats have to be calculated first before the critical path can be seen.) The advantage of this is that users can see at once whether the project time is within the specified limits, permitting them to make adjustments to the critical activities without bothering about the non-critical ones.
- 4 Since the results are shown in bar chart form, they are more readily understood by persons familiar with this form of programme. The bar chart will show more vividly than a printout the periods of heavy resource loading, and highlights periods of comparative inactivity. Smoothing is therefore much more easily accomplished.
- 5 By marking the various trades or operational types in different colours, a rapid approximate resource requirement schedule can be built up. The resources in any one time period can be ascertained by simply adding up vertically, and any smoothing can be done by utilizing the float periods shown on the chart.
- 6 The method can be employed for single or multi-start projects. For multi-project work, the two or more bar charts can (provided they are drawn to the same time and calendar scale) be superimposed on transparent paper and the amount of resource overlap can be seen very quickly.

Limitations

The limitations of the graphical method are basically the size of the bar chart paper and therefore the number of activities. Most programmes are drawn on either A1 or A0 size paper and the number of different activities must be compressed into the 840mm width of this sheet. (It may, of course, be possible to divide the network into two, but then the interlinking activities

must be carefully transferred.) Normally, the divisions between bars is about 6mm, which means that a maximum of 120 activities can be analysed. However, bearing in mind that in a normal network 30% of the activities are dummies, a network of 180 to 200 activities could be analysed graphically on one sheet.

Briefly, the mode of operation is as follows:

- 1 Draw the network in arrow diagram or precedence format and write in the activity titles (Figures 16.1 and 16.2). Although a forward pass has been carried out on both these diagrams, this is not necessary when using the graphical method of analysis.

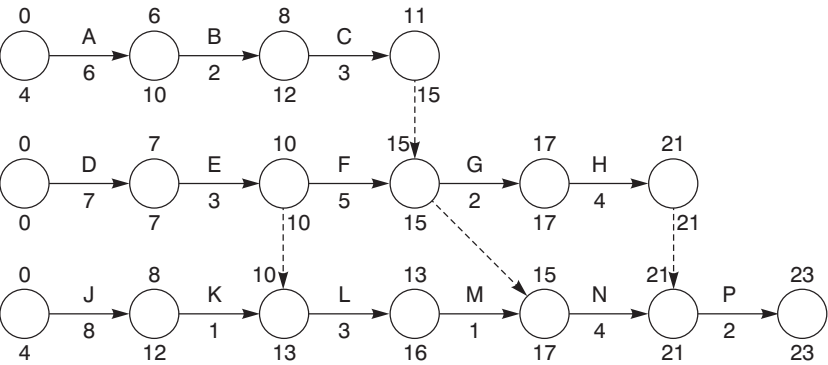


Figure 16.1

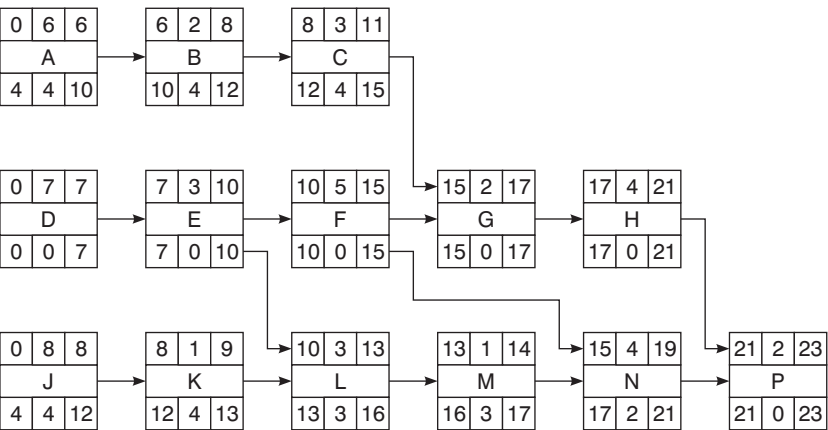


Figure 16.2

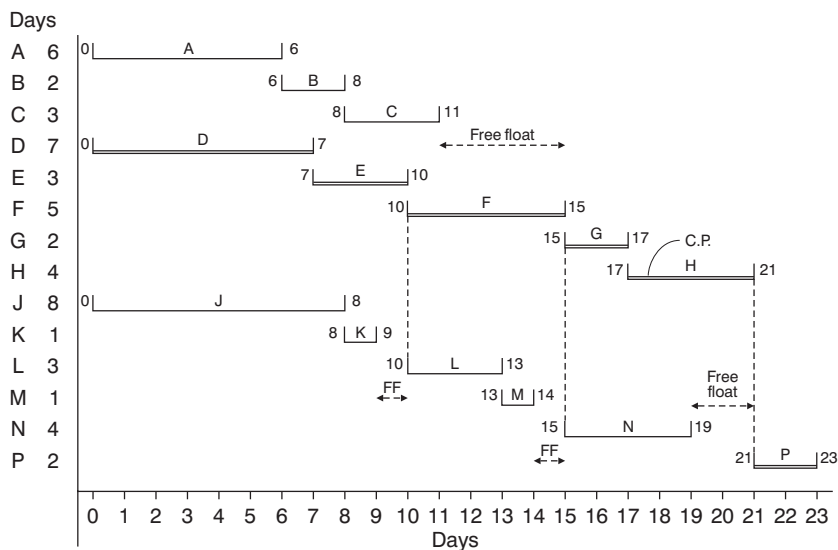


Figure 16.3

- 2 Insert the durations.
- 3 List the activities on the left hand vertical edge of a sheet of graph paper (Figure 16.3) showing:
 - (a) Activity title.
 - (b) Duration (in days, weeks, etc.).
 - (c) Node no. (only required when using these for bar chart generation).
- 4 Draw time scale along the bottom horizontal edge of the graph paper.
- 5 Draw a horizontal line from day 0 of the first activity which is proportional to the duration (using the time scale selected) e.g. 6 days would mean a line 6 divisions long (Figure 16.3). To ease identification an activity letter or no. can be written above the bar.
- 6 Repeat this operation with the next activity on the table starting on day 0.
- 7 When using arrow (AoA) networks, mark dummy activities by writing the end time of the dummy next to the start time of the dummy e.g. 4→7 would be shown as 4,7 (Figure 16.5).
- 8 All subsequent activities must be drawn with their start time (start day no.) directly below the end time (end day no.) of the previous activity having the same time value (day no.).

- 9 If more than one activity has the same end time (day no.), draw the new activity line from the activity end time (day no.) furthest to the *right*.
- 10 Proceed in this manner until the end of the network.
- 11 The critical path can now be traced back by following the line (or lines) which runs back to the start without a horizontal break.
- 12 The break between consecutive activities on the bar chart is the *Free Float* of the preceding activity.
- 13 The summation of the free floats in one string, before that string meets the critical path is the *Total Float* of the activity from which the summation starts, e.g. in Figure 16.3, the total float of activity K is $1 + 1 + 2 = 4$ days, the total float of activity M is $1 + 2 + 3$ days and the total float of activity N is 2 days.

The advantage of using the start and end times (day nos.) of the activities to generate the bar chart is that there is no need to carry out a forward pass. The correct relationship is given automatically by the disposition of the bars. This method is therefore equally suitable for arrow and precedence diagrams.

An alternative method can however be used by substituting the day numbers by the node numbers. Clearly this method, which is sometimes quicker to draw, can only be used with arrow diagrams as precedence diagrams do not have node numbers. When using this method, the node numbers are listed next to the activity titles (Figure 16.5) and the bars are drawn from the starting node of the first activity with a length equal to the duration. The next bar starts vertically below the end node with the same node number as the starting node of the activity being drawn.

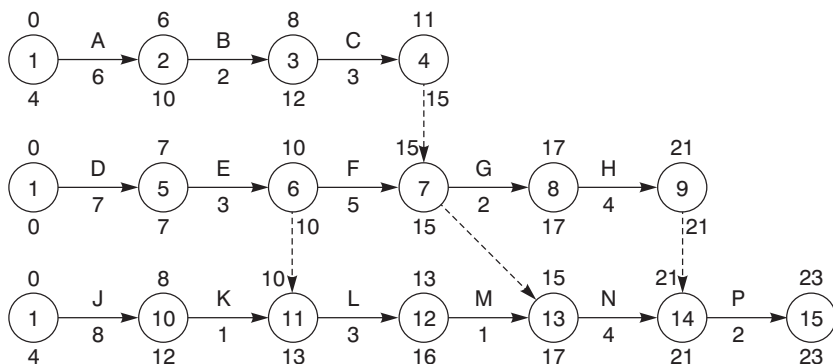


Figure 16.4

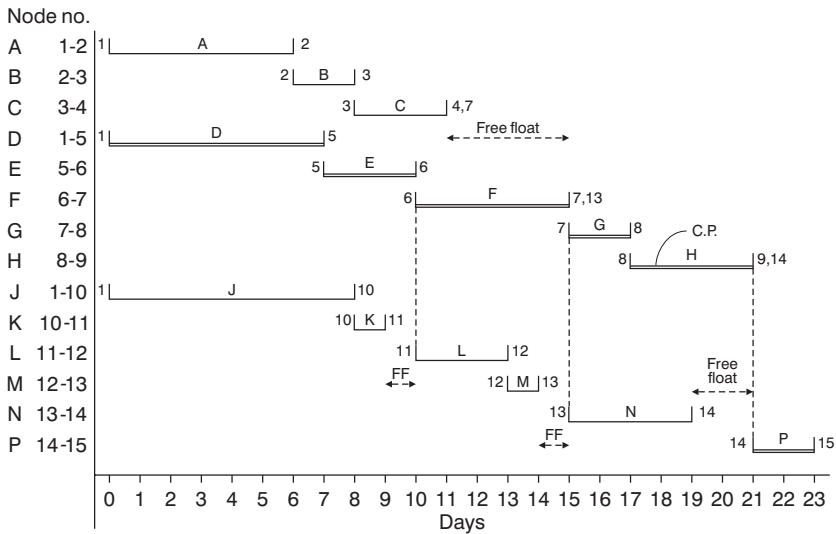


Figure 16.5

As with day no. method, if more than one activity has the same end node number, the one furthest to the right must be used as a starting time. Figure 16.4 shows the same network with the node numbers inserted and Figure 16.5 shows the bar chart generated using the node numbers.

Figure 16.6 shows a typical arrow diagram and Figure 16.7 shows a bar chart generated using the starting and finishing node numbers. Note that these node numbers have been listed on the left hand edge together with the durations to ease plotting.

Time for analysis

Probably the most time-consuming operations in bar chart preparation is the listing of the activity titles, and for this there is no short cut. The same time, in fact, must be expended typing the titles straight into the computer. However, in order to arrive at a quick answer it is only necessary at the initial stage to insert the node numbers, and once this listing has been done (together with the activity times) the analysis is very rapid. It is possible to determine the critical path for a 200-activity network (after the listing has been carried out) in less than an hour. The backward pass for ascertaining floats takes about the same time.

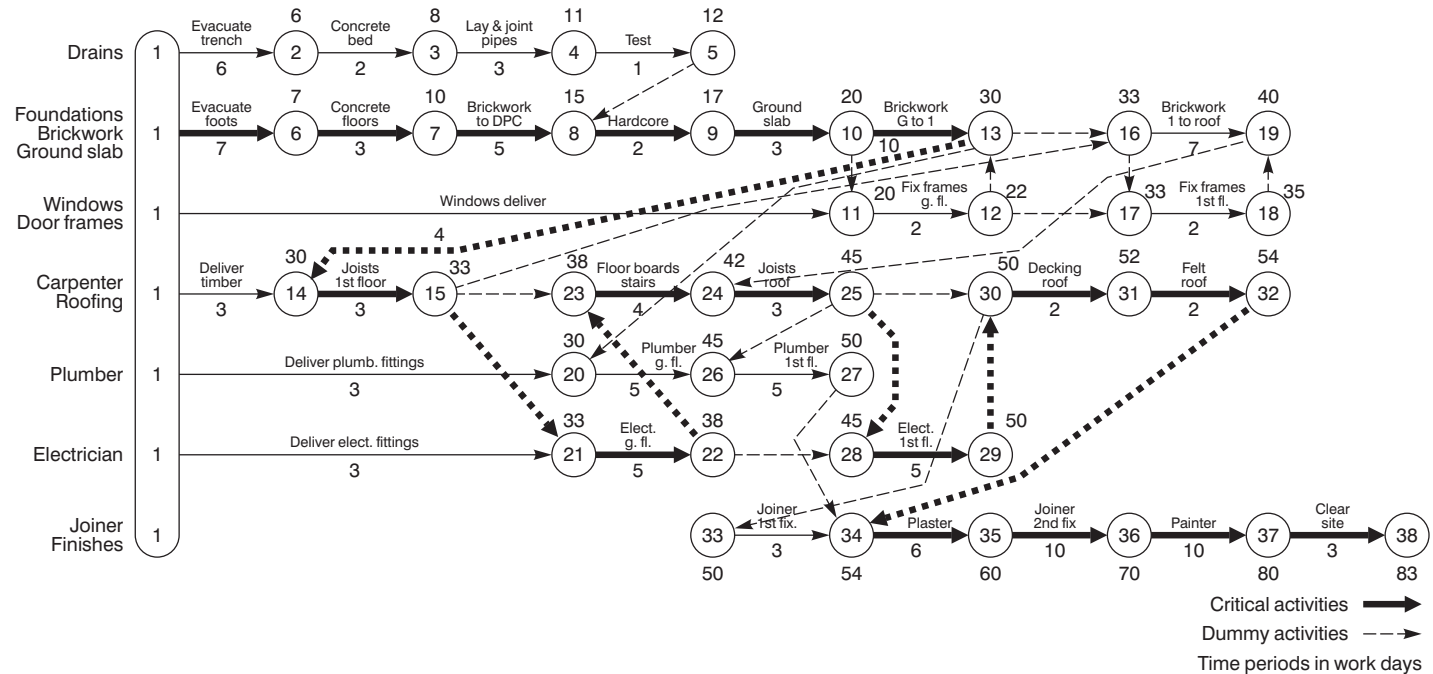


Figure 16.6

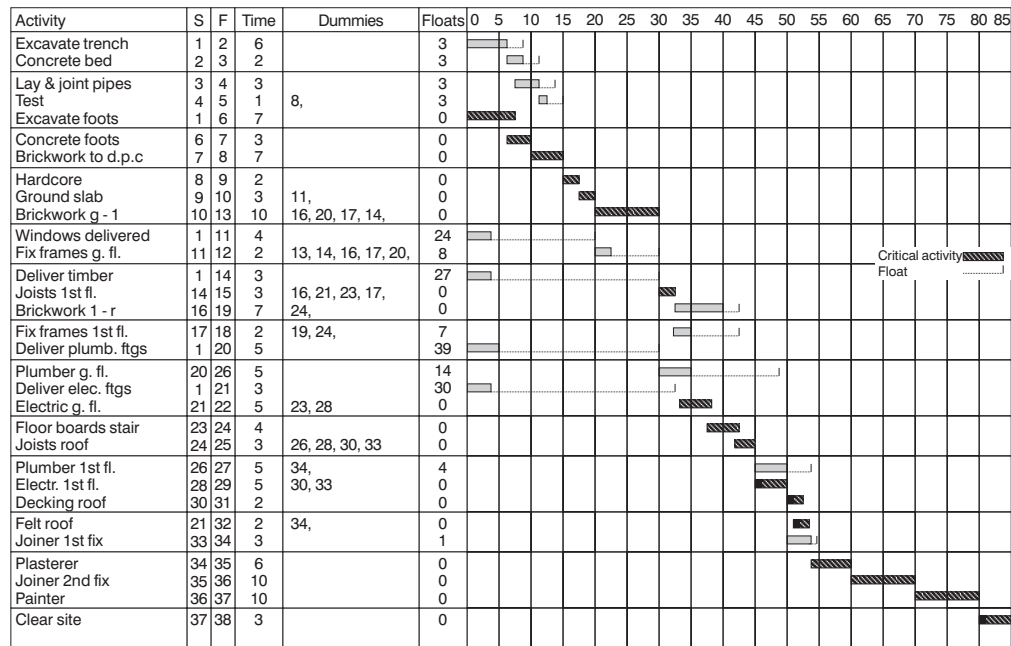


Figure 16.7

Milestones

Important deadlines in a project programme are highlighted by specific points in time called *Milestones*. These are timeless activities usually at the beginning or end of a phase or stage and are used for monitoring purposes throughout the life of the project. Needless to say, they should be SMART, which is an acronym for Specific, Measurable, Achievable, Realistic, Timebound. Often milestones are used to act as trigger points for progress payments or deadlines for receipt of vital information, permits or equipment deliveries.

Milestone reports are a succinct way of advising top management of the status of the project and should act as a spur to the project team to meet these important deadlines. This is especially important if they relate to large tranches of progress payments.

Milestones are marked on bar charts or networks by a triangle or diamond and can be turned into a monitoring system in their own right when used in milestone *slip charts*, sometimes also known as *trend charts*.

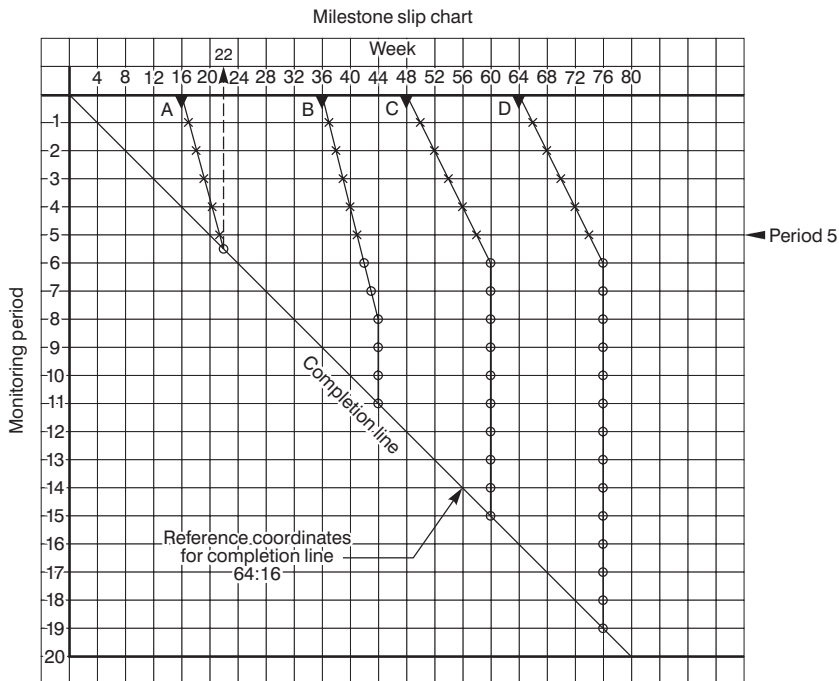


Figure 16.8

Figure 16.8 shows such a slip chart which was produced at reporting period 5 of a project. The top scale represents the project calendar and the vertical scale is the main reporting periods in terms of time. If both calendars are drawn to the same scale, a line drawn from the top left-hand corner to the bottom right-hand corner will be at 45° to the two axes.

The pre-planned milestones at the start of the project are marked on the top line with a black triangle (▼).

As the project progresses, the predicted or anticipated dates of achievement of the milestones are inserted so that the slippage (if any) can be seen graphically. This should then prompt management action to ensure that the subsequent milestones do not slip! At each reporting stage, the anticipated slippages of milestones as given by the programme are re-marked with an X while those that have not been re-programmed are marked with an O. Milestones which *have* been met will be on the diagonal and will be marked with a triangle (▽).

As the programmed slippage of each milestone is marked on the diagram, a pattern emerges which acts not only as a historical record of the slippages but can also be used to give a crude prediction of future milestone movements.

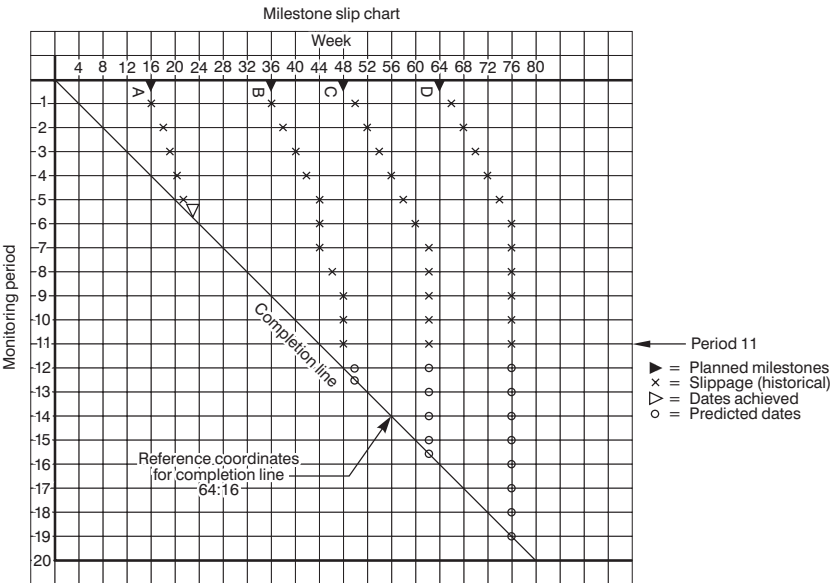


Figure 16.9

A slip chart showing the status at reporting period 11 is shown on Figure 16.9. It can be seen that milestone A was reached in week 22 instead of the original prediction of week 16. Milestones B, C and D have all slipped with the latest prediction for B being week 50, for C being week 62 and D being week 76. It will be noticed that before the reporting period 11, the programmed predictions are marked X and the future predictions, after week 11, are marked O.

If a milestone is not on the critical path, it may well slip on the slip chart without affecting the next milestone. However, if two adjacent milestones on the slip chart *are* on the critical path, any delay on the first one must cause a corresponding slippage on the second. If this is then marked on the slip chart, it will in effect become a prediction, which will then alert the project manager to take action.

Once the milestone symbol meets the diagonal line, the required deadline has been achieved.

Line of balance

Network analysis is essentially a technique for planning one-off projects, whether this is a construction site, a manufacturing operation, a computer software development, or a move to a new premises. When the overall project consists of a number of identical or batch operations, each of which may be a subproject in its own right, it may be of advantage to use a technique called *line of balance*.

The quickest way to explain how this planning method works is to follow a simple example involving the construction of four identical, small, single-storey houses of the type shown in Figure 28.1. For the sake of clarity, only the first five activities will be considered and it will be seen from Figure 28.2, that the last of the five activities, *E* – ‘*floor joists*’, will be complete in week 9.

Assuming one has sufficient resources and space between the actual building plots, it is possible to start work on every house at the same time and therefore finish laying all the floor joists by week 9. However, in real life this is not possible, so the gang laying the foundations to house No. 1 will move to house No. 2 when foundation No. 1 is finished. When foundation No. 2 is finished, the gang will start No. 3 and so on. The same procedure will be carried out by all the following trades, until all the houses are finished.

Another practical device is to allow a time buffer between the trades so as to give a measure of flexibility and introduce a margin of error. Frequently

Table 16.1

<i>Activity letter</i>	<i>Activity description</i>	<i>Adjusted duration (weeks)</i>	<i>Dependency</i>	<i>Total float (weeks)</i>	<i>Buffer (weeks)</i>
A	Clear ground	2.0	Start	0	0.0
B	Lay foundations	2.8	A	0	0.2
C	Build dwarf walls	1.9	B	0	0.1
D	Oversite concrete	0.9	B	1	0.1
E	Floor joists	1.8	C and D	0	0.2

such a buffer will occur naturally for such reasons as hardening time of concrete, setting time of adhesive, drying time of plaster or paint.

Table 28.1, can now be partially redrawn showing in addition the buffer time, which was originally included in the activity duration. The new table is now shown in Table 16.1.

Figure 16.10 shows the relationship between the trades involved. Each trade (or activity) is represented by two lines. The distance between these lines is the duration of the activity. The distance between the activities is the buffer period. As can be seen, all the work of the activities A to E is carried out at the same rate, which means that for every house, enough resources are available for every trade to start as soon as its preceding trade is finished. This is shown to be the case in Figure 16.10.

However, if only one gang is available on the site for each trade, e.g. if only one gang of concretors laying the foundations (activity B) is available, concreting on house 2 cannot start until ground clearance (activity A) has been completed. The figure would then be as shown in Figure 16.11. If the number of concretors could be increased, so that two gangs were available on site, the foundations for house 2 could be started as soon as the ground had been cleared.

Building the dwarf wall (activity C) requires only 1.9 weeks per house, which is a faster rate of work than laying foundations. To keep the bricklaying gang going smoothly from one house to the next, work can only start on house 1 in week 7.2, i.e. after the buffer of about 2.5 weeks following the completion of the foundations of house 1. In this way, by the time the dwarf walls are started on house 4, the foundations (activity B) of house 4 will just have been finished. (In practice of course there would be a further buffer to allow the concrete to harden sufficiently for the bricklaying to start.)

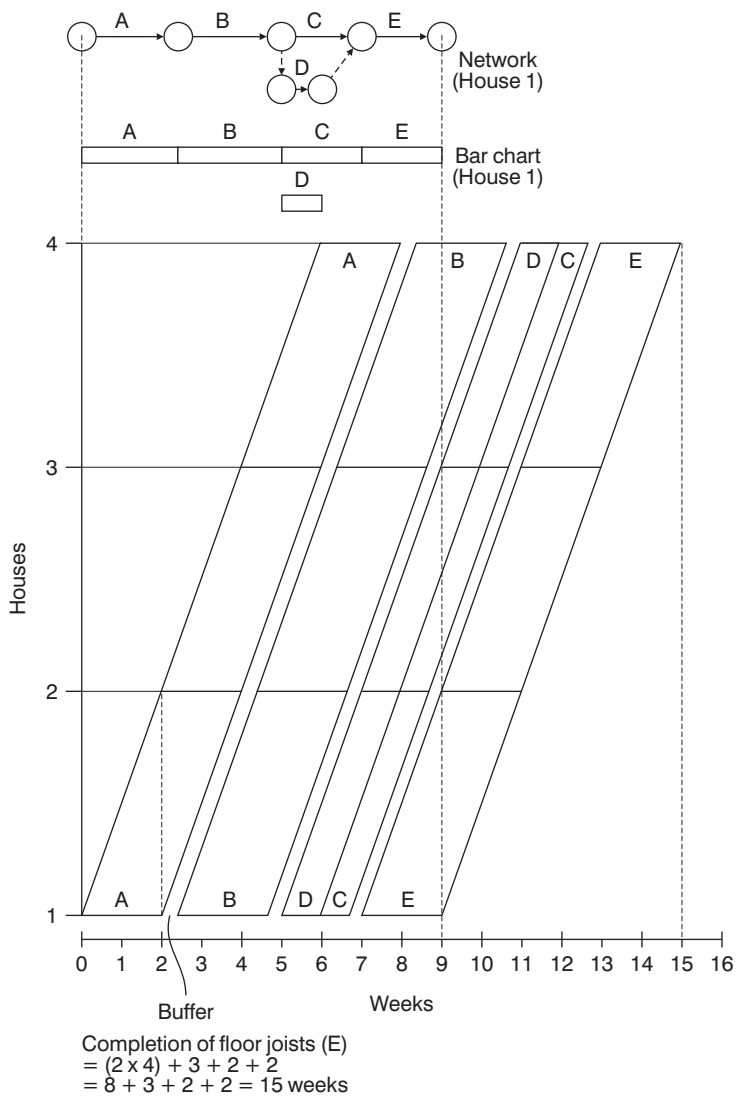


Figure 16.10

As the oversite concreting (activity D) only takes 0.9 weeks, the one gang of labourers doing this work will have every oversite completed well before the next house is ready for them. Their start date could be delayed if necessary by as much as 3.5 weeks, since apart from the buffer, this activity (D) has also 1 week float.

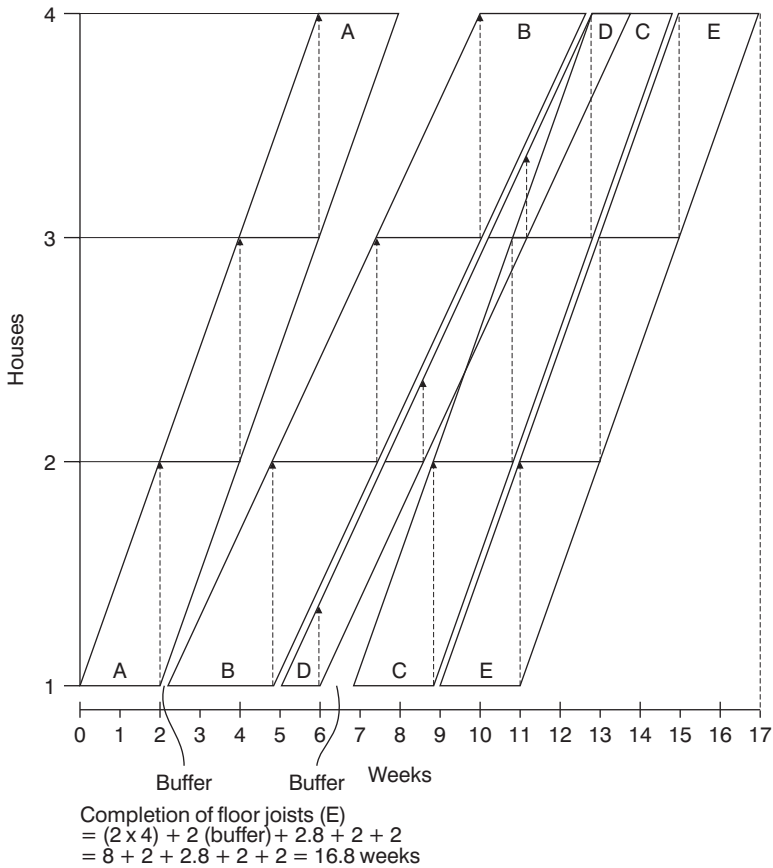


Figure 16.11

It can be seen therefore from Figure 16.11 that by plotting these operations with the time as the horizontal axis and the number of houses as the vertical axis, the following becomes apparent.

If the slope of an operation is less (i.e. flatter) than the slope of the preceding operation, the chosen buffer is shown at the *start* of the operation. If, on the other hand, the slope of a succeeding operation is *steeper*, the buffer must be inserted at the *end* of the previous operation, since otherwise there is a possibility of the trades clashing when they get to the last house.

What becomes very clear from these diagrams is the ability to delay the start of an operation (and use the resources somewhere else) and still meet the overall project programme.

When the work is carried out by trade gangs, the movement of the gangs can be shown on the LoB chart by vertical arrows as indicated in Figure 16.11.

Readers who wish to obtain more information on LoB techniques are advised to obtain the booklet issued by the National Building Agency in 1968.

Computer analysis

Most manufacturers of computer hardware, and many suppliers of computer software, have written programs for analysing critical path networks using computers. While the various commercially available programs differ in detail, they all follow a basic pattern, and give, by and large, a similar range of outputs. In certain circumstances a contractor may be obliged by his contractual commitments to provide a computerized output report for his client. Indeed, when a client organization has standardized on a particular project management system for controlling the overall project, the contractor may well be required to use the same proprietary system so that the contractor's reports can be integrated into the overall project control system on a regular basis.

History

The development of network analysis techniques more or less coincided with that of the digital computer. The early network analysis programs were, therefore, limited by the storage and processing capacity of the computer as well as the input and output facilities.

The techniques employed mainly involved producing punched cards (one card for each activity) and feeding them into the machine via a card reader. These procedures were time consuming and tedious, and, because the punching of the cards was carried out by an operator who usually understood little of the program or its purpose, mistakes occurred which only became apparent after the printout was produced.

Even then, the error was not immediately apparent – only the effect. It then often took hours to scan through the reams of printout sheets before the actual mistake could be located and rectified. To add to the frustration of the planner, the new printout may still have given ridiculous answers because a second error was made on another card. In this way it often required several runs before a satisfactory output could be issued.

In an endeavour to eliminate punching errors attempts were made to use two separate operators, who punched their own set of input cards. The cards were then automatically compared and, if not identical, were thrown out, indicating an error. Needless to say, such a practice cost twice as much in manpower.

Because these early computers were large and very expensive, usually requiring their own air-conditioning equipment and a team of operators and maintenance staff, few commercial companies could afford them. Computer bureaux were therefore set up by the computer manufacturers or special processing companies, to whom the input sheets were delivered for punching, processing and printing.

The cost of processing was usually a lump sum fee plus x pence per activity. Since the computer could not differentiate between a real activity and a dummy one, planners tended to go to considerable pains to reduce the number of dummies to save cost. The result was often a logic sequence, which may have been cheap in computing cost but was very expensive in application, since frequently important restraints were overlooked or eliminated. In other words, the tail wagged the dog – a painful phenomenon in every sense. It was not surprising, therefore, that many organizations abandoned computerized network analysis or, even worse, discarded the use of network analysis altogether as being unworkable or unreliable.

There is no doubt that manual network analysis is a perfectly feasible alternative to using computers. Indeed, one of the largest petrochemical complexes in Europe was planned entirely using a series of networks, all of which were analysed manually.

The PC

The advent of the personal computer (PC) significantly changed the whole field of computer processing. In place of the punched card or tape we now have the computer keyboard and video screen, which enable the planner to input the data direct into the computer without filling in input sheets and relying on a punch operator. The information is taken straight from the network and displayed on the video screen as it is 'typed' in. In this way, the data can be checked or modified almost instantaneously.

Provided sufficient information has been entered, trial runs and checks can be carried out at any stage to test the effects and changes envisaged. Modern planning programs (or Project Management systems, as they are often called) enable the data to be inputted in a random manner to suit the operator, provided, of course, that the relationship between the node numbers (or activity numbers) and duration remains the same.

There are some programs which enable the network to be produced graphically on the screen as the information – especially the logic sequence – is entered. This, it is claimed, eliminates the need to draw the network manually. Whether this practice is as beneficial as suggested is very doubtful.

For a start, the number of activities which can be viewed simultaneously on a standard video screen is very limited, and the scroll facility which enables larger networks to be accommodated does not enable an overall view to be obtained at a glance. The greatest drawback of this practice, however, is the removal from the network planning process of the team spirit, which is engendered when a number of specialists sit down with the planner round a conference table to 'hammer out' the basic shape of the network (see Chapter 20). Most problems have more than one solution, and the discussions and suggestions, both in terms of network logic and durations, are invaluable when drafting the first programs. These meetings are, in effect, a brainstorming session at which the ideas of the various participants are discussed, tested and committed to paper. Once this draft network has been produced, the planner can very quickly input it into the computer and call up a few test runs to see whether the overall completion date can, in fact, be achieved. If the result is unsatisfactory, logic and/or duration changes can be discussed with the project team before the new data are processed again by the machine. The speed of the new hardware makes it possible for the computer to be part of the planning conference, so that (provided the planner/operator is quick enough) the 'what if' scenarios can be tested while the meeting is in progress. A number of interim test runs

can be carried out to establish the optimum network configuration before proceeding to the next stage. Even more important, errors and omissions can be corrected and durations of any or all activities can be altered to achieve a desired interim or final completion date.

The relatively low cost of the modern PCs has enabled organizations to install planning offices at head office and sites as well as at satellite offices, associate companies and offices of vital suppliers, contractors and sub-contractors. All these PCs can be linked to give simultaneous printouts as well as supplying up-to-date information to the head office where the master network is being produced. In other words, the IT (Information Technology) revolution has made an important impact on the whole planning procedure, irrespective of the type or size of organization.

The advantages of PCs are:

- 1 The great reduction in the cost of the hardware, making it possible for small companies, or even individuals, to purchase their own computer system.
- 2 The proliferation of inexpensive, proven software of differing sophistication and complexity, enabling relatively untrained planners to operate the system.
- 3 The ability to allow the planner to input his or her own program or information via a keyboard and VDU.
- 4 The possibility to interrogate and verify the information at any stage on the video screen.
- 5 The speed with which information is processed and printed out either in numerical (tabular) or graphical form.

Programs

During the last few years a large number of proprietary programs have been produced and marketed. All these programs have the ability to analyse networks and produce the standard output of early and late start and the three main types of float, i.e. total, free and independent. Most programs can deal with either arrow diagrams or precedence diagrams, although the actual analysis is only carried out via one type of format.

The main differences between the various programs available at the time of writing are the additional facilities available and the degree of sophistication of the output. Many of the programs can be linked with 'add-on' programs to give a complete project management system covering not only planning but also cost control, material control, site organization, procurement, stock

control, etc. It is impossible to describe the many intricacies of all the available systems within the confines of this chapter, nor is it the intention to compare one system with another. Such comparison can be made in terms of cost, user friendliness, computing power, output sophistication or range of add-ons. Should such surveys be required, it is best to consult some of the specialist computer magazines or periodicals, who carry out such comparisons from time to time.

Some of the programs more commonly available to date are listed in Table 17.1, but to give a better insight into the versatility of a modern program one of the more sophisticated systems is described in some detail in Chapter 30. The particular system was chosen because of its ability to be linked with the SMAC system described in Chapter 27 of this book. Although the terms are different – e.g. ‘Value Hour’ is called ‘Earned Value’ – the result is a useful coordinated system giving the essential relationship between the planning and the cost functions.

The chosen system, Hornet Windmill, is capable of producing both AOA and AON network outputs using a plotter.

Commercial programs

At the time of going to press the network analysis programs shown in Table 17.1 are commercially available, but new ones are constantly being added to the list. The cost of these systems varies from as little as £99 to over £2000, and the reader is therefore advised to investigate each ‘offer’ in some depth to ensure value for money. A simple inexpensive system may be adequate for a small organization running small projects or wishing to become familiar with computerized network analysis. Larger companies, whose clients may demand more sophisticated outputs, may require the more expensive systems. Indeed, the choice of a particular system may well be dictated by the client, as described earlier.

The current list is clearly not claimed to be 100% complete.

Outputs

The output (or printout formats) available from modern PCs are becoming more varied and sophisticated as development and enhancement of programs

Table 17.1 Project management software (current)

<i>System</i>	<i>Marketing company</i>
Acos Compact	D & L Computer Services
Acos Plus 1	D & L Computer Services
Apache Project	Aran Ltd
Artemis Project View	Artemis
Artemis 7000	Artemis
Artemis 9000	Artemis
Cascade	Mantix Systems Ltd
CA Super Project	Computer Associates
Client	CSSP
Controller (for Oracle)	Monitor Management & Controls
Controller (for Artemis)	Monitor Management & Controls
CS Project Life	Leach Management Systems
CS Project Professional	Leach Management Systems
4C for Windows	Intersoftware UK
Hornet XK	Claremont Controls Ltd
Hornet 5000	Claremont Controls Ltd
Hornet Windmill	Claremont Controls Ltd
Interface Toolkit	Chaucer Group Ltd
Jobmaster	Jobmaster plc
LAMP	Bensasson & Chalmers
Micro Planner Expert	Micro Planner International
Micro Planner Manager	Micro Planner International
Micro Planner V6	Micro Planner International
Micro Planner Professional	Micro Planner International
Micro Planner P 1000	Micro Planner International
Micro Planner V4	Micro Planner International
MS Project	Microsoft
Open Plan	Welcom Software Technology
PACS	Herkemij & Partners
Panorama	Panorama Software
Pertmaster for Windows	People in Technology
Plantrac	Computerline
Plantrac Outlook	Computerline
Power Project	Asta Development Corporation
Primavera Project Planner (3P)	Primavera Systems Inc.
Project Gateway	Deepak Sareen Associates
Project Scheduler	Tekware Ltd
Project Workbench (PMW)	ABT International
7000 Plus	PMP Services
QEI	PCF Ltd
QEI Exec	PCF Ltd
Schedule Publisher	Advanced Management Solutions
Sure Trak Project Planner	Primavera Systems Inc.
Trackstar	Complete Project Management

continue. However, the basic outputs produced by the early mainframe machines are still the core of the output reports available. These are:

- Total float (including the critical path for which the total float is obviously 0)
- Preceding event (or preceding activity)
- Activity number
- Earliest start
- Latest start
- Earliest finish
- Latest finish.

Of the above, the first four are the most useful. The total float shows the order of criticality, starting with the critical activities. As the float increases, the criticality reduces.

The preceding event report enables a particular activity to be found rapidly, since activities are listed in ascending order of preceding event numbers. When a grid system is used, the order is by ascending number of each horizontal band. For AON methods, preceding activity numbers are given.

The activity number report is useful when the critical path program is related to a cost analysis system, such as SMAC. The time and cost position can therefore be found for any particular activity in which one may be interested. The earliest start report is used primarily to find all the activities which should be started (as early as possible) by a required date. The chronological listing of earliest starts enables this be found very rapidly.

The actual format of the reports is slightly different for every software company, and in most cases can be produced in bar chart format as well as being grouped by report code, i.e. a separate report for each discipline, department, sub-contractor, etc. These report codes can, of course, be edited to contain only such information as is required (or considered to be necessary) by the individual departments.

It is recommended that the decision to produce any but the most basic printouts, as well as any printouts in report code, be delayed until the usefulness of a report has been studied and discussed with department managers. There is always a danger with computer outputs that recipients request more reports than they can digest, merely because they know they are available at the press of a button. Too much paper becomes self-defeating, since the very bulk frightens the reader to the extent of it not being read at all.

With the proliferation of the personal computer (PC) and the expansion of IT, especially the Internet, many of the projects management techniques can now be carried out on-line. The use of e-mail and the Intranet allows information to be distributed to the many stakeholders of a project almost instantaneously. Where time is important – and it nearly always is – such a fast distribution of data or instructions can be of enormous benefit to the project manager. It does, however, require all information to be carefully checked before dissemination precisely because so many people receive it at the same time. It is an unfortunate fact that computer errors are more serious for just this reason as well as the naive belief that computers are infallible.

18

Simple examples

To illustrate the principles set out in the previous chapter let us now examine two simple examples.

Example 1

For the first example let us consider the rather mundane operation of getting up in the morning, and let us look at the constituent activities between the alarm going off and boarding our train to the office.

The list of activities – not necessarily in their correct sequence – is roughly as follows:

	<i>Time (min)</i>
A switch off alarm clock	0.05
B lie back and collect your thoughts	2.0
C get out of bed	0.05
D go to the bathroom	0.10
E wash or shower	6.0
F brush teeth	3.0
G brush hair	3.0
H shave (if you are a man)	4.0
J boil water for tea	2.0
K pour tea	0.10
L make toast	3.0
M fry eggs	4.0
N serve breakfast	1.0
P eat breakfast	8.0
Q clean shoes	2.0
R kiss wife goodbye	0.10
S don coat	0.05
T walk to station	8.0
U queue and buy ticket	3.0
V board train	1.0
	<u>50.45</u>

The operations listed above can be represented diagrammatically in a network. This would look something like that shown in Figure 18.1.

It will be seen that the activities are all joined in one long string, starting with A (switch off alarm) and ending with V (board train). If we give each activity a time duration, we can easily calculate the total time taken to perform the complete operation by simply adding up the individual durations. In the example given, this total time – or project duration – is 50.45 minutes. In theory, therefore, if any operation takes a fraction of a minute longer, we will miss our train. Consequently, each activity becomes critical and the whole sequence can be seen to be on the critical path.

In practice, however, we will obviously try to make up the time lost on an activity by speeding up a subsequent one. Thus, if we burn the toast and have to make a new piece, we can make up the time by running to the station instead of walking. We know that we can do this because we have a built-in

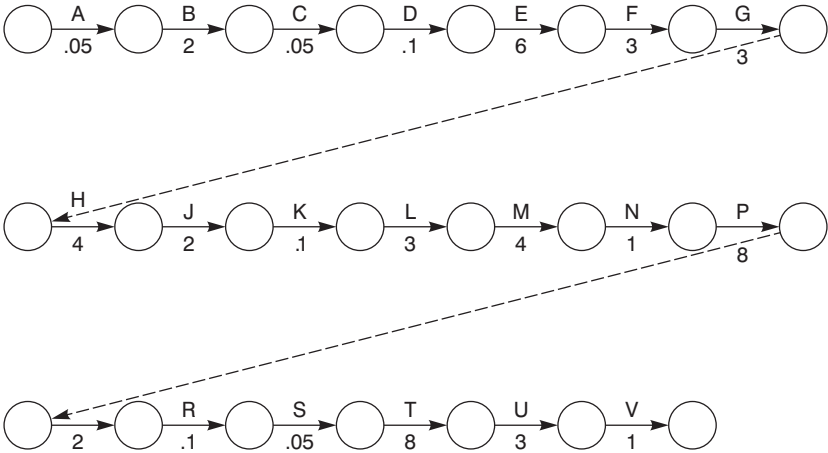


Figure 18.1

margin or float in the journey to the station. This float is, of course, the difference between the time taken to walk and run to the station. In other words, the path is not as critical as it might appear, i.e. we have not in our original sequence – or network – pared each activity down to its minimum duration. We had something up our sleeve.

However, let us suppose that we cannot run to the station because we have a bad knee; how then can we make up lost time? This is where network analysis comes in. Let us look at the activities succeeding the making of toast (L) and see how we can make up the lost time of, say, two minutes. The remaining activities are:

	<i>Times (min)</i>
M fry eggs	4.0
N serve breakfast	1.0
P eat breakfast	8.0
Q clean shoes	2.0
R kiss wife goodbye	0.10
S don coat	0.05
T walk to station	8.0
U queue and buy ticket	3.0
V board train	1.0
	<u>27.15</u>

The total time taken to perform these activities is 27.15 minutes.

The first question therefore is, have we any activity which is unnecessary? Yes. We need not kiss the wife goodbye. But this only saves us 0.1 minute and the saving is of little benefit. Besides, it could have serious repercussions. The second question must therefore be, are there any activities which we can perform simultaneously? Yes. We can clean our shoes while the eggs fry. The network shown in Figure 18.2 can thus be redrawn as demonstrated in Figure 18.3. The total now from M to V adds up to 25.15 minutes. We have, therefore, made up our lost two minutes without apparent extra effort. All we have to do is to move the shoe-cleaning box to a position in the kitchen where we can keep a sharp eye on the eggs while they fry.




Figure 18.2

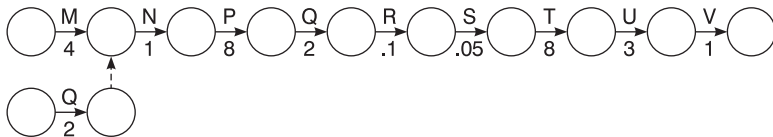


Figure 18.3

Encouraged by this success, let us now re-examine the whole operation to see how else we can save a few minutes, since a few moments extra in bed are well worth saving. Let us therefore see what other activities can be performed simultaneously:

- 1 We could brush our teeth under the shower;
- 2 We could put the kettle on before we shaved so that it boils while we shave;
- 3 We could make the toast while the kettle boils or while we fry the eggs;
- 4 We could forget about the ticket and pay the ticket collector at the other end;
- 5 We can clean our shoes while the eggs fry as previously discussed.

Having considered the above list, we eliminate (1) since it is not nice to spit into the bath tub, and (4) is not possible because we have an officious guard on our barrier. So we are left with (2), (3) and (5). Let us see what our network looks like now (Figure 18.4). The total duration of the operation or

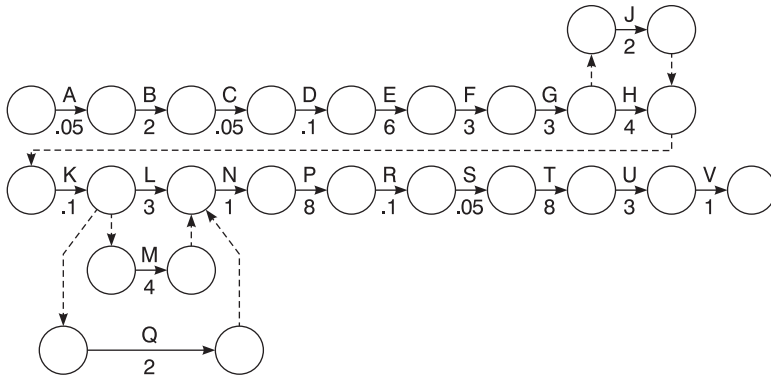


Figure 18.4

programme is now 43.45 minutes, a saving of seven minutes or over 13% for no additional effort. All we did was to resequence the activities. If we moved the wash basin near the shower and adopted the ‘brush your teeth while you shower’ routine, we could save another three minutes, and if we bought a season ticket we would cut another three minutes off our time. It can be seen, therefore, that by a little careful planning we could well spend an extra 13 minutes in bed – all at no extra cost or effort.

If a saving of over 25% can be made on such a simple operation as getting up, it is easy to see what tremendous savings can be made when planning complex manufacturing or construction operations.

Let us now look at our latest network again. From A to G the activities are in the same sequence as on our original network. H and J (shave and boil water) are in parallel. H takes four minutes and J takes two. We therefore have two minutes float on activity J in relation to H. To get the total project duration we must, therefore, use the four minutes of H in our adding-up process, i.e. the *longest* duration of the parallel activities.

Similarly, activities L, M and Q are being carried out in parallel and we must, therefore, use M (fry eggs) with its duration of four minutes in our calculation. Activity L will, therefore, have one minute float while activity Q has two minutes float. It can be seen, therefore, that activities H, L and Q could all be delayed by their respective floats without affecting the overall programme. In practice, such a float is absorbed by extending the duration to match the parallel critical duration or left as a contingency for disasters. In our example it may well be prudent to increase the toast-making operation from three minutes to four by reducing the flame on the grill in order to minimize the risk of burning the bread!

Example 2

Let us now look at another example. Supposing we decide to build a new room into the loft space of our house. We decide to coordinate the work ourselves because the actual building work will be carried out by a small jobbing builder, who has little idea of planning, while the drawings will be prepared by a freelance architect who is not concerned with the meaning of time. If the start of the programme is the brief to the architect and the end is the fitting of carpets, let us draw up a list of activities which we wish to monitor to ensure a speedy completion of the project. The list would be as follows:

	<i>Days</i>
A brief architect	1
B architect produces plans for planning permission	7
C obtain planning permission	60
D finalize drawings	10
E obtain tenders	30
F adjudicate bids	2
G builder delivers materials	15
H strip roof	2
J construct dormer	2
K lay floor	2
L tile dormer walls	3
M felt dormer roof	1
N fit window	1
P move CW tank	1
Q fit doors	1
R fit shelves and cupboards	4
S fit internal lining and insulation	4
T Lay electric cables	2
U cut hole in existing ceiling	1
V fit stairs	2
W plaster walls	2
X paint	2
Y fit carpets	1
	<u>156</u>

Rather than draw out all these activities in a single long string, let us make a preliminary analysis on which activities can be carried out in parallel. The following immediately spring to mind.

- 1 Final drawings can be prepared while planning permission is obtained.
- 2 It may even be possible to obtain tenders during the planning permission period, which is often extended.
- 3 The floor can be laid while the dormer is being tiled.

The preliminary network would, therefore, be as shown in Figure 18.5.

If all the activities were carried out in series, the project would take 156 days. As drawn in Figure 18.5, the duration of the project is 114 days. This shows already a considerable saving by utilizing the planning permission period for finalizing drawings and obtaining tenders.

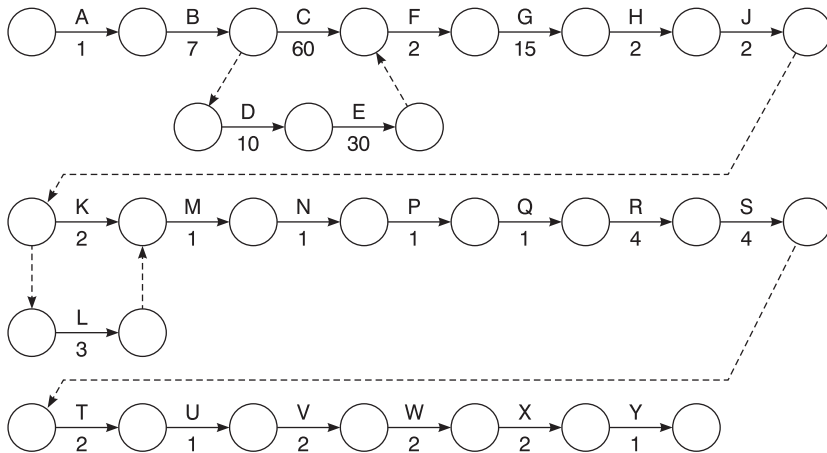


Figure 18.5

However, we wish to reduce the overall time even further, so we call the builder in before we start work and go through the job with him. The first question we ask is how many men will he employ. He says between two and four. We then make the following suggestions:

- 1 Let the electrician lay the cables while the joiners fit the stairs.
- 2 Let the plumber move the tank while the roof of the dormer is being constructed.
- 3 Let the glazier fit the windows while the joiner fits the shelves.
- 4 Let the roofer felt the dormer while the walls are being tiled.
- 5 Fit the doors while the cupboards are being built.

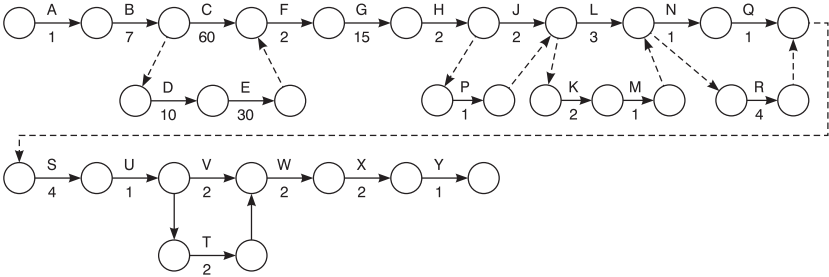


Figure 18.6

The builder may object that this requires too many men, but you tell him that his overall time will be reduced and he will probably gain in the end. The revized network is, therefore, shown in Figure 18.6. The total project duration is now reduced to 108 days. The same network in precedence format (AoN) is shown in Figure 18.7

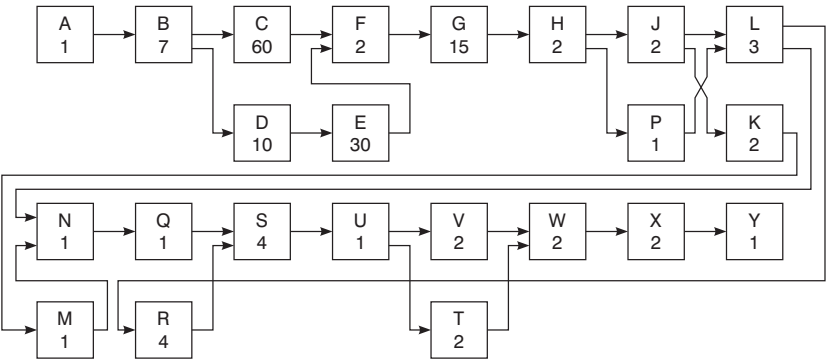


Figure 18.7 Precedence network

If we now wish to reduce the period even further we may have to pay the builder a little extra. However, let us assume that time is of the essence since our rich old uncle will be coming to stay and an uncomfortable night on the sofa in the sitting room might prejudice our chances in his will. It is financially viable, therefore, to ensure that the room will be complete.

Supposing we have to cut the whole job to take no longer than 96 days. Somehow we have to save another 12 days. First, let us look at those activities which have float. N and Q together take two days while R takes four. N and Q have, therefore, two days float. We can utilize this by splitting the operation

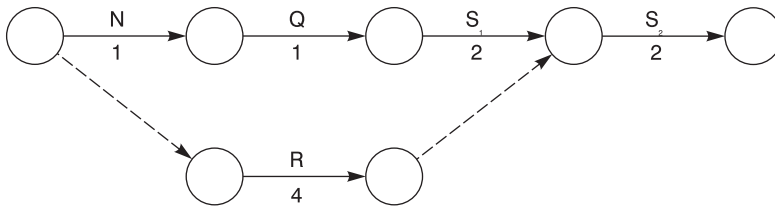


Figure 18.8

S (fit internal lining) and doing two days' work while the shelves and cupboards are being built. The network of this section would, therefore, appear as in Figure 18.8. We have saved two days provided that labour can be made available to start insulating the rafters.

If we adjudicate the bids (F) before waiting for planning permission, we can save another two days. This section of the network will, therefore, appear as in Figure 18.9.

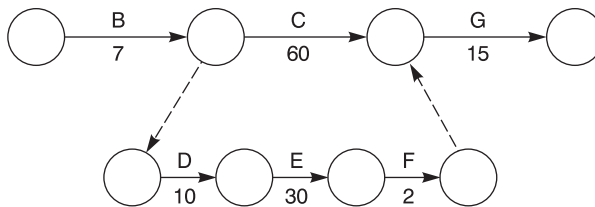


Figure 18.9

Total saving to this stage is $2 + 2 = 4$ days. We have to find another eight days, so let us look at the activities which take longest: C (obtaining planning permission) cannot be reduced since it is outside our control. It is very difficult to hurry a local authority. G (builder delivers materials) is difficult to reduce since the builders will require a reasonable mobilization period to buy materials and allocate resources. However, if we select the builder before planning permission has been received, and we do, after all, have 18 days float in loop D-E-F, we may be able to get him to place preliminary orders for the materials required first, and thus enable work to be started a little earlier. We may have to guarantee to pay the cost for this material if planning permission is not granted, but as time is of the essence we are prepared to take the risk. The saving could well be anything from one to 15 days.

Let us assume we can realistically save five days. We have now reduced the programme by $2 + 2 + 5 = 9$ days. The remaining days can now only be saved by reducing the actual durations of some of the activities. This means more

resources and hence more money. However, the rich uncle cannot be put off, so we offer to increase the contract sum if the builder can manage to reduce V, T, W and X by one day each, thus saving three days altogether. It should be noted that we only save three days although we have reduced the time of four activities by one day each. This is, of course, because V and T are carried out in parallel, but our overall period – for very little extra cost – is now 96 days, a saving of 60 days or 38%.

Example 3

This example from the IT industry, uses the AoN (precedence) method of network drafting. This is now the standard method for this industry, probably because of the influence of MS Project and because networks in IT are relatively small, when compared to the very large networks in construction which can have between two hundred and several thousand activities. The principles are of course identical.

A supermarket requires a new stock control system linked to a new check-out facility. This involves removing the existing check-out, designing and manufacturing new hardware and writing new software for the existing computer, which will be retained.

The main activities and durations (all in days) for this project are as follows:

	Days
A Obtain brief from client (the supermarket owner)	1
B Discuss the brief	2
C Conceptual design	7
D Feasibility study	3
E Evaluation	2
F Authorization	1
G System design	12
H Software development	20
J Hardware design	40
K Hardware manufacture	90
L Hardware delivery (transport)	2
M Removal of existing check-out	7
N Installation of new equipment	6
P Testing on site	4
Q Hand over	1
R Trial operation	7
S Close out	1

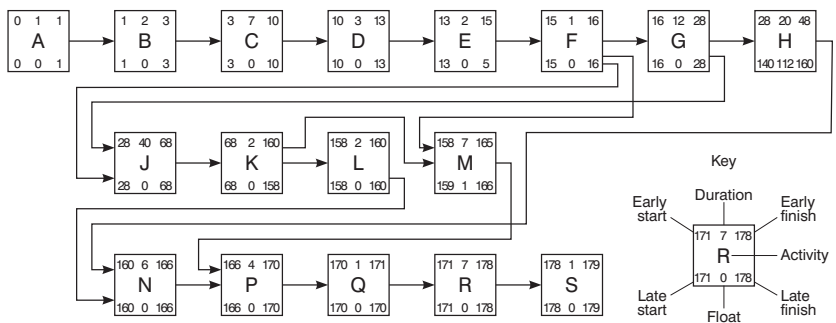


Figure 18.10 (Duration in days)

The network for this project is shown in Figure 18.10, from which it can be seen that there are virtually no parallel activities, so that only two activities, M (Removal of existing check-out) and H (Software development) have any float. However, the float of M is only 1 day, so that for all intents and purposes it is also critical. It may be possible, however, to start J (Hardware design) earlier, after G (System design) is 50% complete. This change is shown on the network in Figure 18.11. As a result of this change, the overall project period has been reduced from 179 days to 173 days. It could be argued that the existing check-out (M) could be removed earlier, but the client quite rightly wants to make sure that the new equipment is ready for dispatch before removing the old one. As the software developed under H is only required in time for the start of the installation (N), there is still plenty of float (106 days), even after the earlier start of hardware design (J) to make sure everything is ready for the installation of the new equipment (N).

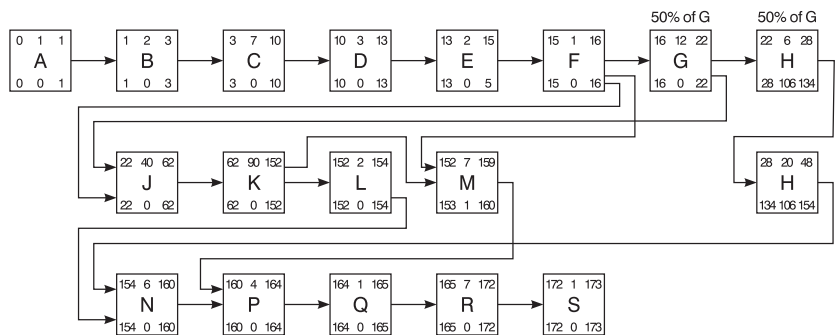


Figure 18.11 (Duration in days)

In practice, this means that the start of software development (H) could be delayed if the resources allocated to H are more urgently required by another project.

Summary of operation

The three examples given are, of course, very small simple programmes, but they do show the steps that have to be taken to get the best out of network analysis. These are:

- 1 Draw up a list of activities and anticipated durations;
- 2 Make as many activities as possible run in parallel;
- 3 Examine new sequences after the initial network has been drawn;
- 4 Start a string of activities as early as possible and terminate as late as possible;
- 5 Split activities into two or more steps if necessary;
- 6 If time is vital, reduce durations by paying more for extra resources;
- 7 Always look for new techniques in the construction or operation being programmed.

It is really amazing what savings can be found after a few minutes' examination, especially after a good night's sleep.

19

Progress reporting

Having drawn the network programme, it is now necessary to develop a simple but effective system of recording and reporting progress. The conventional method of recording progress on a bar chart is to thicken up or hatch in the bars, which are purposely drawn 'hollow' to allow this to be done. When drafting the network, activities are normally represented by single solid lines (Figure 19.1 (a)), but the principle of thickening up can still be applied. When the network is drawn on transparent paper for subsequent dye-line reproduction, the simplest way is to thicken up the activity line and black in the actual node point (Figure 19.1 (b)). If the node point has a number in it, one will have to thicken the outline of the node (Figure 19.1 (c)).

If an activity is only partially complete (say, 50%) this can be easily represented by only blacking in 50% of the activity (Figure 19.2). It can be seen, therefore, that in the case of the string of activities shown in Figure 19.2 the first activity is complete while the second one is half complete. By rights, therefore, the week number at that stage should be $4 + 50\% \text{ of } 6 = 7$. However, this presupposes that the first activity has not been delayed and finished on week 4 as programmed.

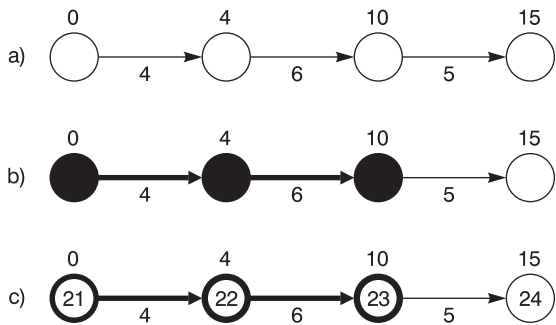


Figure 19.1 Weeks

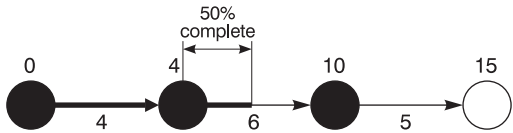


Figure 19.2

How, then, can one represent the case of the first activity finishing, say, two weeks late (week 6)? The simple answer is to cross out the original week number (4) and write the revised week number next to it, as shown in Figure 19.3. If the duration of the second activity cannot be reduced, i.e. if it still requires six weeks as programmed, it will be necessary to amend all the subsequent week numbers as well (Figure 19.4).

This operation will, of course, have to be carried out every time there is a slippage, and it is prudent, therefore, to leave sufficient space over the node point to enable this to be done. Alternatively, it may be more desirable to erase the previous week numbers and insert the new ones, provided, of course, the




Figure 19.3




Figure 19.4

numbers are written in pencil and not ink. This emphasizes the recommendation that networks should always be drawn in pencil. There is something paradoxical in drawing a fluid or dynamic programme in a static or permanent medium. An ink-drawn network is, therefore, the most damning indictment of the planner.

At first sight, the job of erasing some 200 node numbers on a network may appear to be a tedious and time-consuming exercise. However, in practice, such an updating function poses no problems. A reasonably experienced planner can update a complete network consisting of about 200 activities in less than one hour. When one remembers that in most situations only a proportion of the activities on a network require updating, the speed of the operation can be appreciated.

Naturally, only the earliest dates are calculated, since this answers the most important questions, i.e.

- 1 When can a particular activity start?
- 2 When will the whole project be completed?

There is no need at this stage to calculate floats since these can be ascertained rapidly as and when required, as explained in Chapter 14.

Precedence (AoN) networks can be updated as shown in Figures 12.2 and 12.3 in Chapter 12.

Feedback

Apart from reporting progress, it is also necessary to update the network to reflect logic changes and delays. This updating, which has to be on a regular basis, must reflect two main types of information:

- 1 What progress, if any, has been achieved since the last update or reporting stage,
- 2 What logic changes have to be incorporated to meet the technical or programme requirements.

To enable planners to incorporate this information on a revised or updated network they must be supplied with data in an organized and regular manner. Many schemes – some very complex and some very simple – have been devised to enable this to happen. Naturally, the simpler the scheme, the better, and the less paper, the more will the information on the paper be used.

The ideal situation is, therefore, one where no additional forms whatsoever are used, and this ideal can indeed be reached provided that:

- 1 The networks have been drawn on small sheets, i.e. A3 or A4, or have been photographically reduced to these sizes.
- 2 A photocopier is available.
- 3 Both the issuer and recipient of the networks use them as real management tools.

With these three conditions fulfilled, updating the network is merely a question of thickening the completed or partially completed activities, amending any durations where necessary, and taking a photostat copy. This copy is then returned to the planner. When a logic change is necessary, the amendment is made on a copy of the last network and this too is returned to the planner. If all the disciplines or departments do this, and return their feedback regularly to the planner, a master network incorporating all these changes can be produced and the effects on other disciplines calculated and studied.

There may be instances where a department manager may want to change a sequence of activities or add new items to his or her particular part of the network. Such logic changes are most easily transmitted to the planner by placing an overlay over that portion of the network which has to be changed and sketching in the new logic freehand.

Where logic changes have been proposed – for this is all a department can do in isolation at this stage – the effect on other departments only becomes apparent when a new draft network has been produced by the planner. Before accepting the situation, the planner must either inform the project manager or call a meeting of all the interested departments to discuss the implications of the proposed logic changes. In other words, the network becomes what it should always be – a focal point for discussion, a means by which the job can be seen graphically and can be adjusted to suit any new restraints or requirements.

There are instances where great volumes of do-lists, report sheets, feedback sheets or other documents are issued each month or fortnight to the various disciplines. These forms require the recipient to submit new data in tabular form for subsequent incorporation into the network. However, all this paperwork, which is usually demanded by the planner to update the computer input, can generally be replaced by a more meaningful updated network diagram.

In many instances it will be possible for the planner to visit the various departments and update the programme by asking a few pertinent questions. This reduces the amount of paper even more and has, of course, the advantage

that logic changes can be discussed and provisionally agreed right away. On a site, where the contract has been divided into a number of operational areas, this method is particularly useful since area managers are notorious for shunning paperwork – especially reports. Even very large projects can be controlled in this manner, and the personal contact again helps to generate the close relationship and involvement so necessary for good morale.

Where an efficient cost reporting system is in operation, and provided that this is geared to the network, the feedback for the programme can be combined with the weekly cost report information issued in the field or shop.

A good example of this is given in Chapter 27, which describes the SMAC Cost Control System. In this system, the cost control and cost reporting procedures are based on the network so that the percentage complete of an operation can be taken from the site returns and entered straight onto the network. The application of SMAC is particularly interesting, since the network can be manually analysed while the cost report is produced by a computer, both using the same database.

One of the greatest problems found by main contractors is the submission of updated programmes from subvendors or subcontractors. Despite clauses in the purchase order or subcontract documents, requiring the vendor to return a programme within a certain number of weeks of order date and update it monthly, many vendors just do not comply. Even if programmes are submitted as requested, they vary in size and format from a reduced computer printout to a crude bar chart, which shows activities possibly useful to the vendor but quite useless to the main contractor or client.

One reason for this production of unsatisfactory information is that the main contractor (or consultant) was not specific enough in the contract documents setting out exactly what information is required and when it is needed. To overcome this difficulty, the simplest way is to give the vendor a pre-printed bar chart form as part of the contract documents, together with a list of suggested activities which *must* appear on the programme.

A pre-printed table, as drawn in Figure 19.5, shows by the letter X which activities are important for monitoring purposes, for typical items of equipment or materials. The list can be modified by the vendor and obviously each main contractor can draw up his own requirements depending on the type of industry he is engaged in, but the basic requirements from setting out drawings to final test certificates are included. The dates by which some of the key documents are required should, of course, be given in the purchase order or contract document, since they may be linked to stage payments and/or penalties.

The advantage of the main contractor requesting the programme to be produced to his own format, a copy of which is shown in Figure 19.6, is that:

- 1 All the returned programmes are of the same size and type and can be more easily interpreted and filed by the main contractor's staff.
- 2 Where the vendor is unsophisticated, the main contractor's programme is of educational value to the vendor.
- 3 Since the format is ready-made, the vendor's work is reduced and will be returned by him earlier.
- 4 Since all the programmes are on A4 size paper, they can be reproduced and distributed more easily and speedily.

To ensure that the vendor understood the principles and used the correct method for populating the completed bar chart, an instruction sheet as shown in Figure 19.7 was attached to the blank bar chart.

	Pumps	Heat exchanger	Air fins	Compress and turbines	Vessels towers	Valves	Struct. steel	Instr. panels	Large motors	Switchgear MCC invertors	Transformers	Fans	Pipe work
Drawings A – Setting plans	X	X	X	X	X	X	X	X	X	X	X	X	X
Drawings B – As specified	X	X	X	X	X	X	X	X	X	X	X	X	X
Drawings C – (Final)	X	X	X	X	X	X	X	X	X	X	X	X	X
Foster Wheeler Eng. cut-off	X	X	X	X	X	X	X	X	X	X	X	X	X
Place sub-orders	X	X	X	X	X	X	X	X	X	X	X	X	X
Receive forgings		X	X	X	X	X	X						X
Receive plate		X			X								
Receive seals	X			X		X	X		X				
Receive couplings	X		X	X								X	
Receive gauges/instrum.				X	X			X		X	X		
Receive tubes/fittings		X	X		X						X		X
Receive bearings	X		X	X		X			X			X	
Receive motor/actuator	X		X			X							
Casting of casing	X			X		X			X			X	
Casting impeller	X			X								X	
Casting bedplate	X			X					X			X	
Machine casting	X			X								X	
Machine impeller	X		X	X								X	
Machine flanges	X	X	X	X	X	X						X	
Machine gears				X					X			X	
Machine shaft	X		X	X		X			X			X	
Assemble rotor	X		X	X					X			X	
Assemble equipment	X	X	X	X	X	X	X	X	X	X	X	X	
Weld frame/supports		X	X	X			X	X	X	X	X	X	
Roll and weld shell		X			X	X							
Drill tube plate		X											
Form dished ends		X			X								
Weld/roll tubes		X	X										X
Weld nozzles	X	X	X	X	X	X							
Fit internals					X						X		
Access platforms		X	X		X		X						
Light presswork/guards	X							X		X		X	
Heat treatment					X								
Wiring								X	X	X	X		
Windings									X		X		
Lube-oil system	X		X	X					X			X	
Control system				X				X					
Galvanizing/plating	X				X	X	X	X	X	X	X		X
Painting/priming	X	X	X	X	X	X	X	X	X	X	X	X	X
Testing pressure/mech.	X	X	X	X	X	X		X	X	X	X	X	X
Testing witness/perform.	X	X	X	X	X			X	X	X	X	X	X
Prepare despatch	X	X	X	X	X	X	X		X	X	X	X	X
Data books/oper. instructions	X	X	X	X	X	X		X	X	X	X	X	
Weld procedures		X	X		X								X
Spares schedules	X	X	X	X	X	X		X	X	X	X	X	
Test certs	X	X	X	X	X	X		X	X	X	X	X	X

Figure 19.5 Suggested activities for a manufacturer's bar chart

FWPP Equipment No.

Vendor's Order No.

[illegible]

FWPP Disclaim all liability arising from errors or other statements made on this form by the sub-contractor

To be returned to FWPP Ltd
Greater London House
Hampstead Rd, London NW1

DRG. NO.
REVISION.....
DATE OF REVISION

Figure 19.6 Manufacturer's bar chart

Foster Wheeler Power Products Ltd
Instructions to vendors for completing
FWPP's standard programme format

- 1 Vendors are required to complete a Manufacturing Programme using the FWPP Standard Bar Chart form enclosed herewith.
- 2 The block on the top at the page given the FWPP Order Number, FWPP Equipment Number, Vendor's Name and Vendor's Order Number will be filled in by FWPP Purchasing Department at time of order issue.
- 3 Where a starting date is not known, Vendors must give the programme in week numbers with Week 1 as the date of the order. Subsequently, after order has been placed, the correct FWPP Week Number must be substituted together with the corresponding calendar date.
- 4 The left-hand column headed 'Activity' must be filled in by the Vendor showing the various stages of the manufacturing process. This should start with production of the necessary drawings requested in the Purchase Order document and continue through various stages of materials arriving at the Vendor's works, manufacturing stages, assembly stages, testing stages and ending with actual delivery date.
- 5 For the benefit of vendors the attached Table shows some typical stages which FWPP Expeditors will be monitoring but it must be emphasized that these are for guidance only and must be amended or augmented by the Vendor to suit his method of production.

The Table consists of eleven (11) common items of equipment normally associated with Petrochemical Plants and where an item of equipment does not fall into one of these categories, vendors are required to build up their own detailed lists.

- 6 Activities with a duration of one (1) week or more should be represented by a thick line

thus: 

while shorter activities or specific events such as cut-off dates or despatch dates should be shown by a triangle

despatch
 thus: 

- 7 This programme must be returned to FWPP within three (3) weeks of receiving the Purchase Order.
-

Figure 19.7

The case for manual analysis

Although network analysis is applicable to almost every type of organization as shown by the examples in Chapter 23, most of the planning functions described in this book have been confined to those related to engineering construction projects. The activities described cover the full spectrum of operations from the initial design stage, through detailing of drawings and manufacture, up to and including construction. In other words, from conception to handover.

In this age of specialization there is a trend to create specialist groups to do the work previously carried out by the members of more conventional disciplines. One example is teaching where teaching methods, previously devised and perfected by practising teachers, are now developed by a new group of people called educationalists.

Another example of specialization is planning. In the days of bar charts, planning was carried out by engineers or production staff using well-known techniques to record their ideas on paper and transmit them to other members of the team. Nowadays, however, the specialist planner or scheduler has come to the fore, leaving the engineer time to get on with his engineering.

The planner

Planning in its own right does not exist. It is always associated with another activity or operation, i.e. design planning, construction planning, production planning, etc. It is logical, therefore, that a design planner should be or should have been a designer, a construction planner should be familiar with construction methods and techniques, and a production planner should be knowledgeable in the process and manufacturing operations of production – whether it be steelwork, motors cars or magazines.

As long as the specialist planner has graduated from one of the accepted engineering disciplines and is familiar with the problems of a particular project, a realistic network will probably be produced. By calling in specialists to advise him in the fields with which he is not completely conversant, he can ensure that the network will be received with confidence by all the interested parties.

The real problem arises when the planner has not the right background, i.e. when he has not spent a period on a drawing board or has not experienced the hold-ups and frustrations of a construction site. Strangely enough, the less familiar a planner is with the job he is planning, the less he is inclined to seek help. This may well be due to his inability to ask the right questions, or he may be reluctant to discuss technical matters for fear of revealing his own lack of knowledge. One thing is certain, a network which is not based on sound technical knowledge is not realistic, and an unrealistic network is dangerous and costly, since decisions may well be made for the wrong reasons.

All that has been said so far is a truism which can be applied not only to planning but to any human activity where experts are necessary in order to achieve acceptable results. However, in most disciplines it does not take long for the effects of an inexperienced assistant to be discovered, mainly because the results of his work can be monitored and assessed within a relatively short time period. In planning, however, the effects of a programme decision may not be felt for months, so that it may be very difficult to ascertain the cause of the subsequent problem or failure.

The role of the computer

Unfortunately, the use of computers – especially the large mainframe machines – has enabled inexperienced planners to produce impressive outputs which are frequently utterly useless. Precisely because the computing industry has created an aura of awe and admiration around itself, anyone who

familiarizes himself with the right jargon can give an impression of considerable knowledge – for a time at least.

There is a great danger in shifting the emphasis from the creation of the network to the analysis by machine, so that many people believe that to carry out an analysis of a network one must have a computer. In fact, of course, the very opposite is true. The kernel of network analysis is the drafting, checking, refining and redrafting of the network itself, an operation which must be carried out by a team of experienced participants of the job being planned. To understand this statement, it is necessary to go through the stages of network preparation and subsequent updating.

Preparation of the network

The first function of the planner in conjunction with the project manager is to divide the project into manageable blocks. The name is appropriate since, like building blocks, they can be handled by themselves, shaped to suit the job, but are still only a part of the whole structure to be built.

The number and size of each block is extremely important since, if correctly chosen, a block can be regarded as an entity which suits both the design and the construction phases of a project. Ideally, the complexity of each block should be about the same, but this is rarely possible in practice since other criteria such as systems and geographical location have to be considered. If a block is very complex, it can be broken down further, but a more convenient solution may be to produce more than one network for such a block. The aim should be to keep the number of activities down to 200–300 so that they can be analysed manually if necessary.

As the planner sketches his logic roughly, and in pencil on the back of an old drawing, the construction specialists are asked to comment on the type and sequence of the activities. In practice, these sessions – if properly run – generate an enthusiasm that is a delight to experience. Often consecutive activities can be combined to simplify the network, thus easing the subsequent analysis. Gradually the job is ‘built’, difficulties are encountered and overcome, and even specialists who have never been involved in network planning before are carried away by this visual unfolding of the programme.

The next stage is to ask each specialist to suggest the duration of the activities in his discipline. These are entered onto the network without question. Now comes the moment of truth. Can the job be built on time? With all the participants present, the planner adds up the durations and produces his

forward pass. Almost invariably the total time is longer than the deadlines permit. This is when the real value of network analysis emerges. Logics are re-examined, durations are reduced and new construction methods are evolved to reduce the overall time. When the final network – rough though it may be – is complete, a sense of achievement can be felt pervading the atmosphere.

This procedure, which is vital to the production of a realistic programme, can, of course, only be carried out if the ‘blocks’ are not too large. If the network has more than 300 activities it may well pay the planner or project manager to re-examine that section of the programme with a view to dividing it into two smaller networks. If necessary, it is always possible to draw a master network, usually quite small, to link the blocks together.

One of the differences between the original PERT program and the normal CPM programs was the facility to enter three time estimates for every activity. The purpose of the three estimates is to enable the computer to calculate and subsequently use the most probable time, on the assumption that the planner is unwilling or unable to commit himself to one time estimate. The actual duration used is calculated from the expression known as the β distribution:

$$t_e = \frac{a + 4m + b}{6}$$

where t_e is the expected time, a the optimistic time, b the pessimistic time and m the most likely time.

However, this degree of sophistication is not really necessary, since the planner himself can insert what he considers to be the most probable time. For example, a foreman, upon being pressed, estimated the times for a particular operation to be

Optimistic = 5 days
Pessimistic = 10 days
Probable = 7 days

The planner will probably insert 7 days or 8 days. The computer, using the above distribution, would calculate

$$\begin{aligned} t_e &= \frac{5 + (4 \times 7) + 10}{6} \\ &= 7.16 \text{ days} \end{aligned}$$

With the much larger variables found in real-life projects such finesse is a waste of time, and a single entry is all that is required.

Typical site problems

Once construction starts, problems begin to arise. Drawings arrive late on-site, materials are delayed, equipment is held up, labour becomes scarce or goes on strike, underground obstructions are found, etc.

Each new problem must be examined in the light of the overall project programme. It will be necessary to repeat the initial planning meeting to revize the network, to reflect on these problems and possibly here to reduce their effect. It is at these meetings that ingenious innovations are suggested and tested.

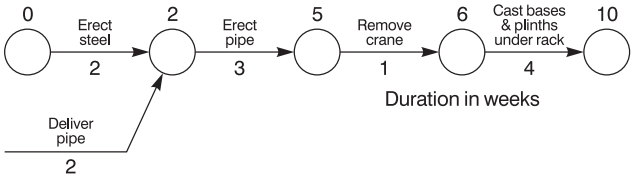


Figure 20.1

For example, Figure 20.1 shows the sequence of a section of a pipe rack. Supposing the delivery of pipe will be delayed by four weeks. Completion now looks like becoming week 14. However, someone suggests that the pump bases can be cast early with starter bars bent down to bond the plinths at a later date. The new sequence appears in Figure 20.2. Completion time is now only week 11, a saving of three weeks.

This type of approach is the very heart of successful networking and keeps the whole programme alive. It is also very rapid. The very act of discussing problems in the company of interested colleagues generates an enthusiasm

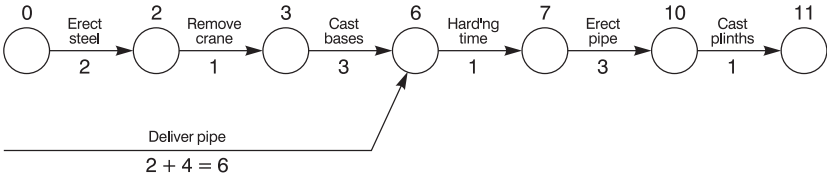


Figure 20.2

that carries the project forward. With good management this momentum is passed right down the line to the people who are actually doing the work.

The NEDO report

Perhaps the best evidence that networks are most effective when kept simple is given by the NEDO report referred to in the Preface to the first edition of this book. The relevant paragraphs are reproduced below by permission of HM Stationery Office.

- 1 Even if it is true that UK clients build more complex plants, it should still be possible to plan for and accommodate the extra time and resources this would entail. By and large the UK projects were more generously planned but, nonetheless, the important finding of the case studies is that, besides taking longer, the UK projects tended also to encounter more overrun against planned time. There was no correlation across the case studies between the sophistication with which programming was done and the end result in terms of successful completion on time. On the German power station the construction load represented by the size and height of the power station was considerable, but the estimated construction time was short and was achieved. This contrasts with the UK power stations, where a great deal of effort and sophistication went into programming, but schedules were overrun. On most of the case studies, the plans made at the beginning of the project were thought realistic at that stage, but they varied in their degree of sophistication and in the importance attached to them.
- 2 One of the British refineries provided the one UK example where the plan was recognized from the start by both client and contractor to be unrealistic. Nonetheless, the contractor claimed that he believed planning to be very important, particularly in the circumstances of the UK, and the project was accompanied by a wealth of data collection. This contrasts with the Dutch refinery project where planning was clearly effective but where there was no evidence of very sophisticated techniques. There is some evidence in the case studies to suggest that UK clients and contractors put more effort into planning, but there is no doubt that the discipline of the plan was more easily maintained on the foreign projects. Complicated networks are useful in developing an initial programme, but subsequently, though they may show how badly one has done, they do not indicate how to recover the situation. Networks need, therefore, to be developed to permit simple rapid updates, pointing where action must be taken. Meanwhile the evidence from the foreign case studies suggests that simple techniques, such as bar charts, can be successful.

3 The attitudes to planning on UK1 and the Dutch plant were very different, and this may have contributed to the delay of UK1 although it is impossible to quantify the effect. The Dutch contractor considered planning to be very important, and had two site planning engineers attached to the home office during the design stage. The programme for UK1 on the other hand was considered quite unrealistic by both the client and the contractor, not only after the event but while the project was underway, but neither of them considered this important in itself.

On UK 1 it was not until the original completion date arrived that construction was rescheduled to take a further five months. At this point construction was only 80% complete and in the event there was another eight month's work to do. Engineering had been three months behind schedule for some time. A wealth of progress information was being collected but no new schedule appears to have been made earlier.

Progress control and planning was clearly a great deal more effective on the Dutch project; the contractor did not believe in particularly sophisticated control techniques, however.

Using manual techniques

An example of how the duration of a small project can be reduced quite significantly using manual techniques is shown by following the stages of Figure 20.4. The project involves the installation of a pump, a tank and the interconnecting piping which has to be insulated. Figure 20.3 shows the diagrammatic representation of the scheme which does not include the erection of the pipe bridge over which the line has to run. All the networks in Figure 20.4 are presented in activity on arrow (AoA), activity on node (AoN), and bar chart format, which clearly show the effect of overlapping activities. Figure 20.4(a) illustrates all the five operations in sequence. This is quite a realistic procedure but it takes the maximum amount of time – 16 days. By erecting the tank and pump at the same time (Figure 20.4(b)) the overall

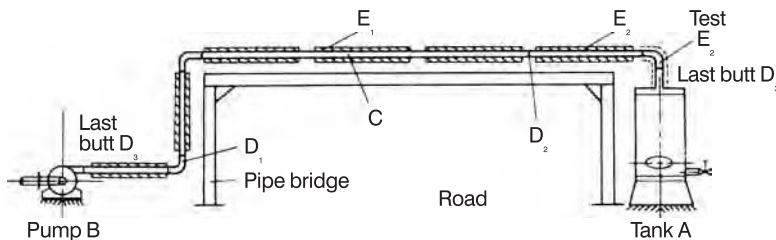


Figure 20.3

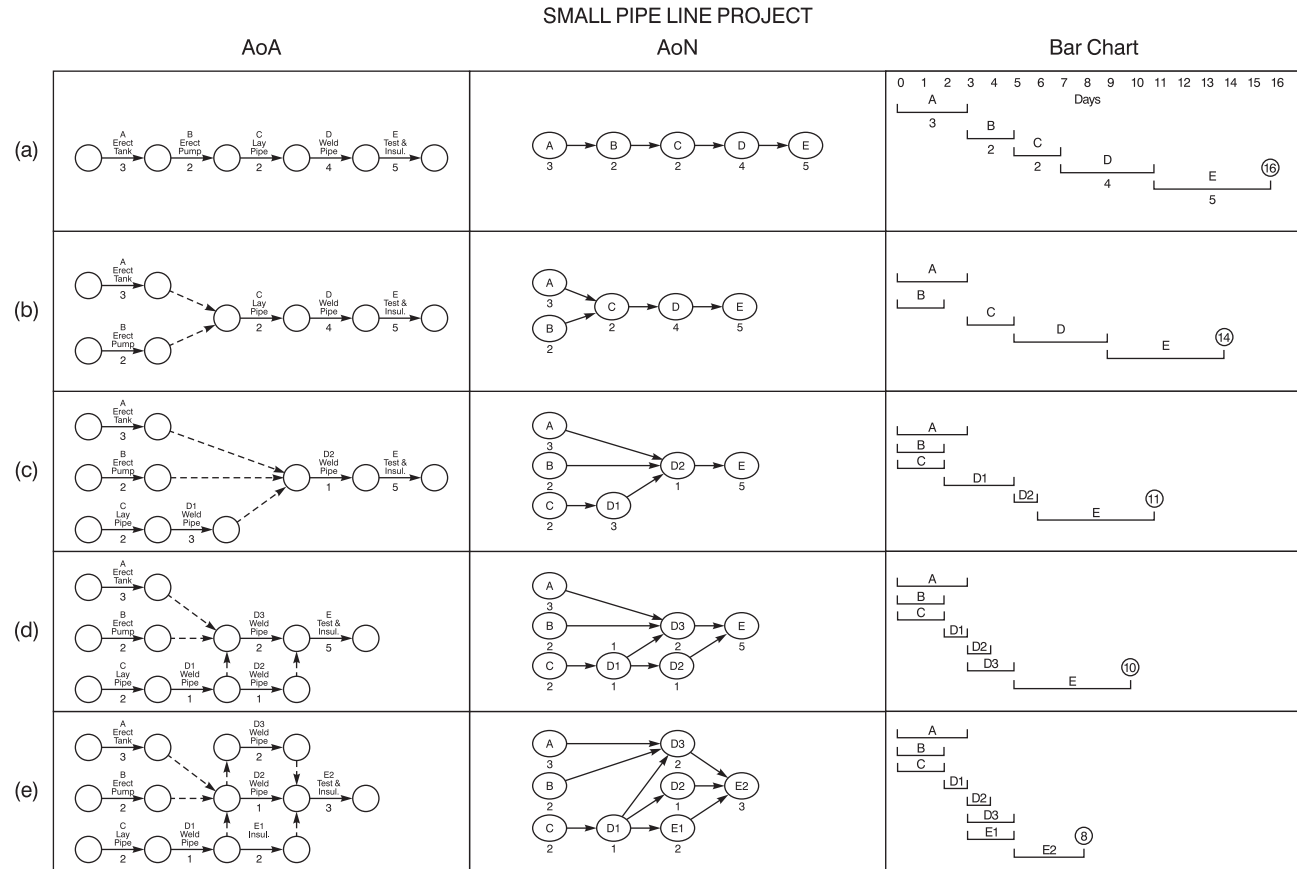


Figure 20.4

duration has been reduced to 14 days. Figure 20.4(c) shows a further saving of 3 days by erecting the pipe over the bridge while also erecting the pump and tank, giving an overall time of 11 days. When the pipe laying is divided into three sections (D_1 , D_2 and D_3) it is possible to weld the last two sections at the same time, thus reducing the overall time to 10 days (Figure 20.4(d)). Further investigation shows that while the last two sections of pipe are being welded it is possible to insulate the already completed section. This reduces the overall duration to 8 days (Figure 20.4(e)).

It can be argued, of course, that an experienced planner can foresee all the possibilities right from the start and produce the network and bar chart shown in Figure 20.4(e) without going through all the previous stages. However, most mortals tend to find the optimum solution to a problem by stages, using the logical thought processes as outlined above. A sketch pad and pocket calculator are all that is required to run through these steps. A computer at this stage would certainly not be necessary.

It must be pointed out that although the example shown is only a very small project, such problems occur almost daily, and valuable time can be saved by just running through a number of options before the work actually starts. In many cases the five activities will be represented by only one activity, e.g. 'Install lift pump system' on a larger construction network, and while this master network may be computerized, the small 'problem networks' are far more easily analysed manually.

21

Subdivision of blocks

One major point which requires stressing covers the composition of a string of activities. It has already been mentioned that the site should be divided into blocks which are compatible with the design networks. However, each block could in itself be a very large area and a complex operational unit. It is necessary, therefore, to subdivide each block into logical units. There are various ways of doing this. The subdivision could be by:

- 1 Similar items of equipment;
- 2 Trades and disciplines;
- 3 Geographical proximity;
- 4 Operational systems;
- 5 Stages of completion.

Each subdivision has its own merits and justifies further examination.

1 Similar items of equipment

Here the network shows a series of strings which collect together similar items of equipment, such as pumps, tanks, vessels, boilers, and roads. This is shown in Figure 21.1.

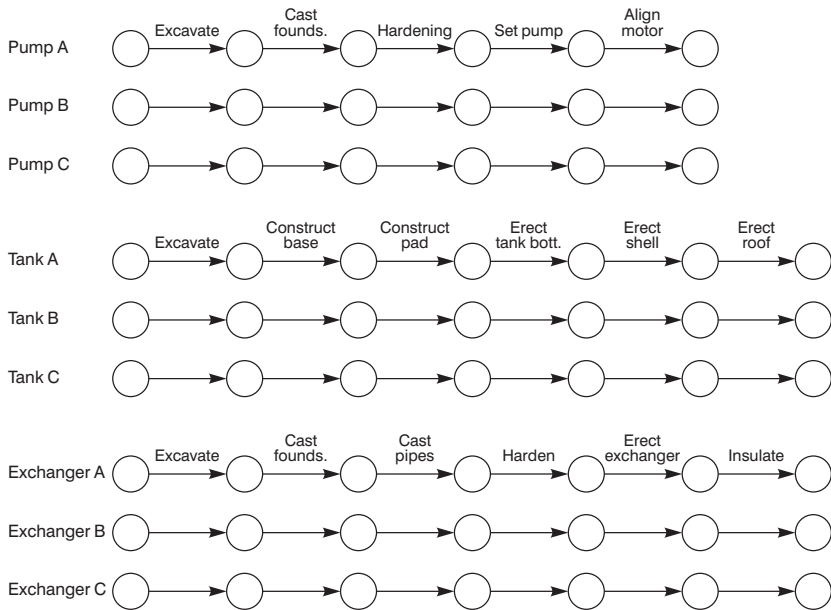


Figure 21.1 Similar items of equipment

Advantages:

- (a) Equipment items are quickly found;
- (b) Interface with design network is easily established.

2 Trades and disciplines

This network groups the work according to type. It is shown in Figure 21.2.

Advantages:

- (a) Suitable when it is desirable to clear a trade off the site as soon as completed;
- (b) Eases resource loading of individual trades.

3 Geographical proximity

It may be considered useful to group together activities which are geographically close to each other without further segregation into types or trades. This is shown in Figure 21.3.

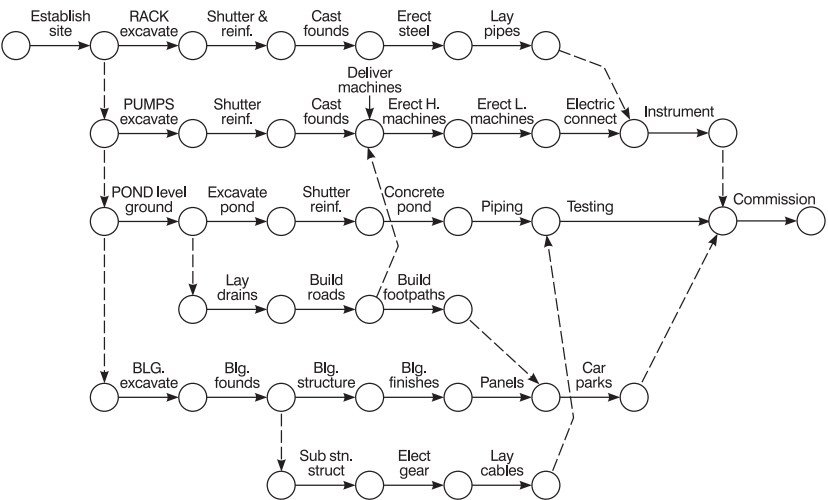


Figure 21.2 Trades and disciplines

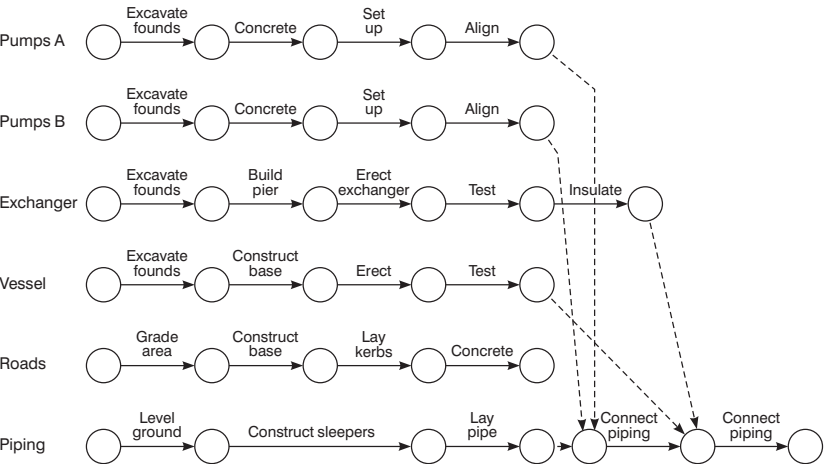


Figure 21.3 Geographical proximity

Advantages:

- (a) Makes a specific area self-contained and eases control;
- (b) Coincides frequently with natural subdivision on site for construction management.

4 Operational systems

Here the network consists of all the activities associated with a particular system such as the boiler plant, the crude oil loading and the quarry crushing and screening. A typical system network is shown in Figure 21.4.

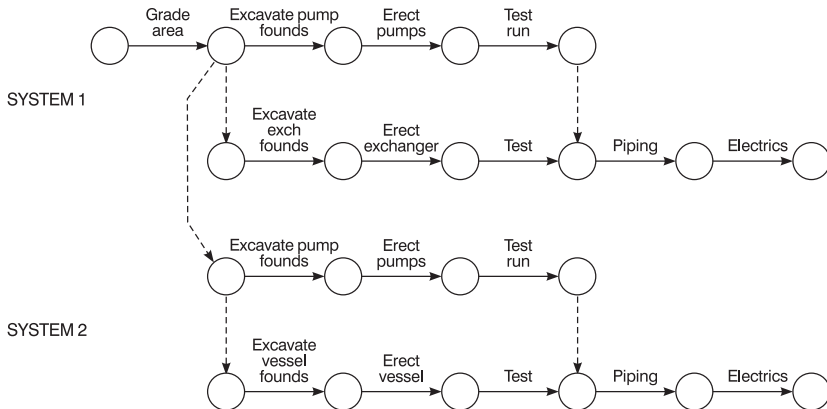


Figure 21.4 Operational system

Advantages:

- (a) Easy to establish and monitor the essential interrelationships of a particular system;
- (b) Particularly useful when commissioning is carried out by system since a complete 'package' can be programmed very easily;
- (c) Ideal where stage completion is required.

5 Stages of completion

If particular parts of the site have to be completed earlier than others (i.e. if the work has to be handed over to the client in well-defined stages), it is essential that each stage is programmed separately. There will, of course, be interfaces and links with preceding and succeeding stages, but within these boundaries the network should be self-contained.

Advantages:

- (a) Attention is drawn to activities requiring early completion;
- (b) Predictions for completion of each stage are made more quickly;
- (c) Resources can be deployed more efficiently;
- (d) Temporary shut-off and blanking-off operations can be highlighted.

In most cases a site network is in fact a combination of a number of the above subdivisions. For example, if the boiler plant and water treatment plant are

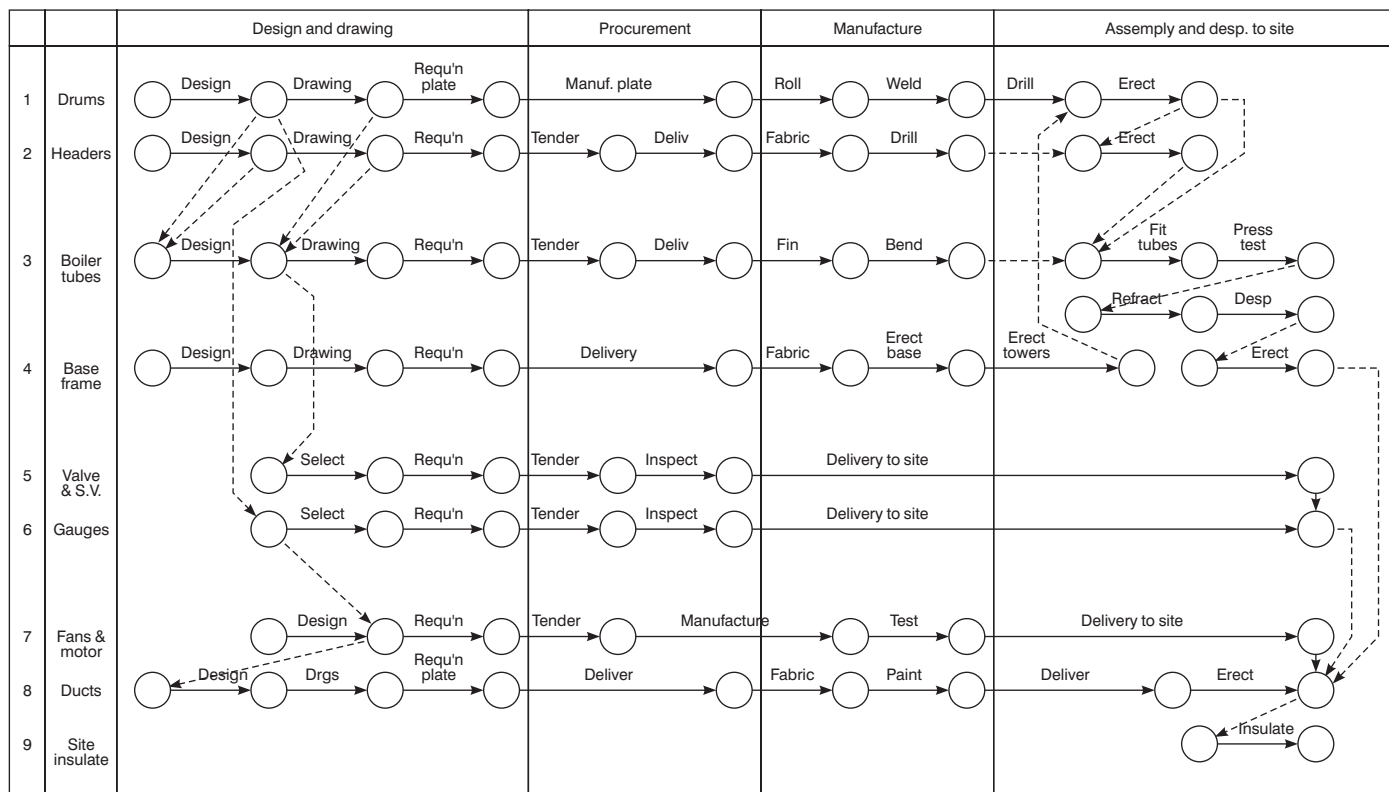


Figure 21.5 Simplified boiler network

required first to service an existing operational unit, it would be prudent to draw a network which is based on (4) (operational systems) but incorporating also (5) (stages of completion). In practice, (3) (geographical proximity) would almost certainly be equally relevant since the water treatment plant and boiler plant would be adjacent.

It must be emphasized that the networks shown in Figures 21.1 to 21.4 are representative only and do not show the necessary inter-relationships or degree of detail normally shown on a practical construction network. The oversimplification on these diagrams may in fact contradict some of the essential requirements discussed in other sections of this book, but it is hoped that the main point, i.e. the differences between the various types of construction network formats, has been highlighted.

Banding

If we study Figure 21.1 we note that it is very easy to find a particular activity on the network. For example, if we wanted to know how long it would take to excavate the foundations of exchanger B, we would look down the column EXCAVATE until we found the line EXCHANGER B, and the intersection of this column and line shows the required excavation activity. This simple identification process was made possible because the diagram in Figure 21.1 was drawn using very crude subdivisions or bands to separate the various operations.

For certain types of work this splitting of the network into sections can be of immense assistance in finding required activities. By listing the various types of equipment or materials vertically on the drawing paper and writing the operations to be performed horizontally, one produces a grid of activities which almost defines the activity. In some instances the line of operations may be replaced by a line of departments involved. For example, the electrical department involvement in the design of a piece of equipment can be found by reading across the equipment line until one comes to the electrical department column.

The principle is shown clearly in Figure 21.5, and it can be seen that the idea can be applied to numerous types of networks. A few examples of banding networks are given below, but these are for guidance only since the actual selection of bands depends on the type of work to be performed and the degree of similarity of operation between the different equipment items.

<i>Vertical listing (Horizontal line)</i>	<i>Horizontal listing (Vertical column)</i>
Equipment	Operations
Equipment	Departments
Material	Operations
Design stages	Departments
Construction stages	Subcontracts
Decision stages	Departments
Approvals	Authorities (clients)
Operations	Department responsibilities
Operations	Broad time periods

It may, of course, be advantageous to reverse the vertical and horizontal bands; when considering, for example, the fifth item on the list, the subcontracts could be listed vertically and the construction stages horizontally. This would most likely be the case when the subcontractors perform similar operations since the actual work stages would then follow logically across the page in the form of normally timed activities. It may indeed be beneficial to draw a small trial network of a few (say, 20–30) activities to establish the best banding configuration.

It can be seen that banding can be combined with the coordinate method of numbering by simply allocating a group of letters of the horizontal coordinates to a particular band.

Banding is particularly beneficial on master networks which cover, by definition, a number of distinct operations or areas, such as design, manufacture, construction and commissioning. Figure 21.5 is an example of such a network.

22

Project management and planning

Responsibilities of the project managers

It is not easy to define the responsibilities of a project manager, mainly because the scope covered by such a position varies not only from industry to industry but also from one company to another. Three areas of responsibility, however, are nearly always part of the project manager's brief:

- 1 He must build the job to specification and to satisfy the operational requirements.
- 2 He must complete the project on time.
- 3 He must build the job within previously established budgetary constraints.

The last two are, of course, connected: generally, it can be stated that if the job is on schedule, either the cost has not exceeded the budget or good grounds exist for claiming any extra costs from the client. It is far more difficult to obtain extra cash if the programme has been exceeded and the client has also suffered loss due to the delay.

Time, therefore, is vitally important, and the control of time, whether at the design stage or the construction stage, should be a matter of top priority with the project manager. It is surprising, therefore, that so few project managers are fully conversant with the mechanics of network analysis and its advantages over other systems. Even if it had no other function but to act as a polarizing communication document, it would justify its use in preference to other methods.

Information from network

A correctly drawn network, regularly updated, can be used to give vital information and has the following beneficial effects on the project.

- 1 It enables the interaction of the various activities to be shown graphically and clearly.
- 2 It enables spare time or float to be found where it exists so that advantage can be taken to reduce resources if necessary.
- 3 It can pinpoint potential bottlenecks and trouble spots.
- 4 It enables conflicting priorities to be resolved in the most economical manner.
- 5 It gives an up-to-date picture of progress.
- 6 It acts as a communication document between all disciplines and parties.
- 7 It shows all parties the intent of the method of construction.
- 8 It acts as a focus for discussion at project meetings.
- 9 It can be expanded into subnets showing greater detail or contracted to show the chief overall milestones.
- 10 If updated in coloured pencil, it can act as a spur between rival gangs of workers.
- 11 It is very rapid and cheap to operate and is a base for EVA.
- 12 It is quickly modified if circumstances warrant it.
- 13 It can be used when formulating claims, as evidence of disruption due to late decisions or delayed drawings and equipment.
- 14 Networks of past jobs can be used to draft proposal networks for future jobs.
- 15 Networks stimulate discussion provided everyone concerned is familiar with them.
- 16 It can assist in formulating a cash-flow chart to minimize additional funding.

To get the maximum benefit from networks, a project manager should be able to read them as a musician reads music. He should feel the slow

movements and the crescendos of activities and combine these into a harmonious flow until the grand finale is reached.

To facilitate the use of networks at discussions, the sheets should be reduced photographically to A3 (approximately 42 cm × 30 cm). In this way, a network can be folded once and kept in a standard A4 file, which tends to increase its usage. Small networks can, of course, be drawn on A3 or A4 size sheets in the first place, thus saving the cost of subsequent reduction in size.

It is often stated that networks are not easily understood by the man in the field, the area manager or the site foreman. This argument is usually supported by statements that the field men were brought up on bar charts and can, therefore, understand them fully, or that they are confused by all the computer printouts, which take too long to digest. Both statements are true. A bar chart is easy to understand and can easily be updated by hatching or colouring in the bars. It is also true that computer output sheets are overwhelming by their sheer bulk and complexity, and the man on the site just cannot afford the time leafing through reams of paper. Even if the output is restricted to a discipline report, only applicable to the person in question, confusion is often caused by the mass of data on earliest and latest starting and finishing times and on the various types of float. As is so often the case, network analysis and computerization are regarded as being synonymous, and the drawbacks of the latter are then invoked (often quite unwittingly) to discredit the former.

The writer's experience, however, contradicts the argument that site people cannot or will not use networks. On the contrary, once the foreman understands and appreciates what a network can do, he will prefer it to a bar chart. This is illustrated by the following example, which describes an actual situation on a contract.

Site-preparation contract

The job described was a civil engineering contract comprising the construction of oversite base slabs, roads, footpaths and foul and stormwater sewers for a large municipal housing scheme consisting of approximately 250 units. The main contractor, who confined his site activities to the actual house building, was anxious to start work as soon as possible to get as much done before the winter months. It was necessary, therefore, to provide him with good roads and a fully drained site.

Contract award was June and the main contractor was programmed to start building operations at the end of November the same year. To enable this quite

short civil-engineering stage to be completed on time, it was decided to split the site into four main areas which could be started at about the same time. The size and location of these areas was dictated by such considerations as access points, site clearance (including a considerable area of woodland), natural drainage and house-building sequence.

Once this principle was established by management, the general site foreman was called in to assist in the preparation of the network, although it was known that he had never even heard of, let alone worked to, a critical path programme.

After explaining the basic principles of network techniques, the foreman was asked where he would start work, what machines he would use, which methods of excavation and construction he intended to follow, etc. As he explained his methods, the steps were recorded on the back of an old drawing print by the familiar method of lines and node points (arrow diagram). Gradually a network was evolved which grew before his eyes and his previous fears and scepticism began to melt away.

When the network of one area was complete, the foreman was asked for the anticipated duration of each activity. Each answer was religiously entered on the network without query, but when the forward pass was made, the overall period exceeded the contract period by several weeks. The foreman looked worried, but he was now involved. He asked to be allowed to review some of his durations and reassess some of the construction methods. Without being pressurized, the man, who had never used network analysis before, began the process that makes network analysis so valuable, i.e. he reviewed and refined the plan until it complied with the contractual requirements. The exercise was repeated with the three other areas, and the following day the whole operation was explained to the four chargehands who were to be responsible for those areas.

Four separate networks were then drawn, together with four corresponding bar charts. These were pinned on the wall of the site hut with the instruction that one of the programmes, either networks or bar chart, be updated daily. Great stress was laid on the need to update regularly, since it is the monitoring of the programme that is so often neglected once the plan has been drawn. The decision on which of the programmes was used for recording progress was left to the foreman, and it is interesting to note that the network proved to be the format he preferred.

Since each chargehand could compare the progress in his area with that of the others, a competitive spirit developed quite spontaneously to the delight of

management. The result was that the job was completed four weeks ahead of schedule without additional cost. These extra weeks in October were naturally extremely valuable to the main contractor, who could get more units weatherproof before the cold period of January to March. The network was also used to predict cash flow, which proved to be remarkably accurate. (The principles of this are explained in Chapter 26.)

It can be seen, therefore, that in this instance a manual network enabled the project manager to control both the programme (time) and the cost of the job with minimum paperwork. This was primarily because the men who actually carried out the work in the field were involved and were convinced of the usefulness of the network programme.

Confidence in plan

It is vitally important that no one, but no one, associated with a project must lose faith in the programme or the overall plan. It is one of the prime duties of a project manager to ensure that this faith exists. Where small cracks do appear in this vital bridge of understanding between the planning department and the operational departments, the project manager must do everything in his power to close them before they become chasms of suspicion and despondency. It may be necessary to re-examine the plan, or change the planner, or hold a meeting explaining the situation to all parties, but a plan in which the participants have no faith is not worth the paper it is drawn on.

Having convinced all parties that the network is a useful control tool, the project manager must now ensure that it is kept up to date and the new information transmitted to all the interested parties as quickly as possible. This requires exerting a constant pressure on the planning department, or planning engineer, to keep to the 'issue deadlines', and equally leaning on the operational departments to return the feedback documents regularly. To do this, the project manager must use a combination of education, indoctrination, charm and rank pulling, but the feedback *must* be returned as regularly as the issue of the company's pay cheque.

The returned document might only say 'no change', but if this vital link is neglected, the network ceases to be a live document. The problem of feedback for the network is automatically solved when using the SMAC cost control system (explained in Chapter 27), since the manhour returns are directly

related to activities, thus giving a very accurate percentage completion of each activity.

It would be an interesting and revealing experience to carry out a survey among project managers of large projects to obtain their unbiased opinion on the effectiveness of networks. Most of the managers with whom this problem was discussed felt that there was some merit in network techniques, but, equally, most of them complained that too much paper was being generated by the planning department.

Network and method statements

More and more clients and consultants require contractors to produce method statements as part of their construction documentation. Indeed, a method statement for certain complex operations may be a requirement of ISO 9000 Part I. A method statement is basically an explanation of the sequence of operations augmented by a description of the resources (i.e. cranes and other tackle) required for the job. It must be immediately apparent that a network can be of great benefit, not only in explaining the sequence of operations to the client but also for concentrating the writer's mind when the sequence is committed to paper. In the same way as the designer produces a freehand sketch of his ideas, so a construction engineer will be able to draw a freehand network to crystallize his thoughts.

The degree of detail will vary with the complexity of the operation and the requirements of the client or consultant, but it will always be a clear graphical representation of the sequences, which can replace pages of narrative. Any number of activities can be 'extracted' from the network for further explanation or in-depth discussion in the accompanying written statement.

The network, which can be produced manually or by computer, will mainly follow conventional lines and can, of course, be in arrow diagram or precedence format. For certain operations, however, such as structural steelwork erection, it may be advantageous to draw the network in the form of a table, where the operations (erect column, erect beam, plumb and level, etc.) are in horizontal rows. In this way, a highly organized, easy-to-read network can be produced. Examples of such a procedure are shown in Figures 22.1 and 22.2. There are doubtless other situations where this system can be adopted, but the prime objective must always be clarity and ease of understanding. Complex networks only confuse clients, and reflect a lack of appreciation of the advantages of method statements.

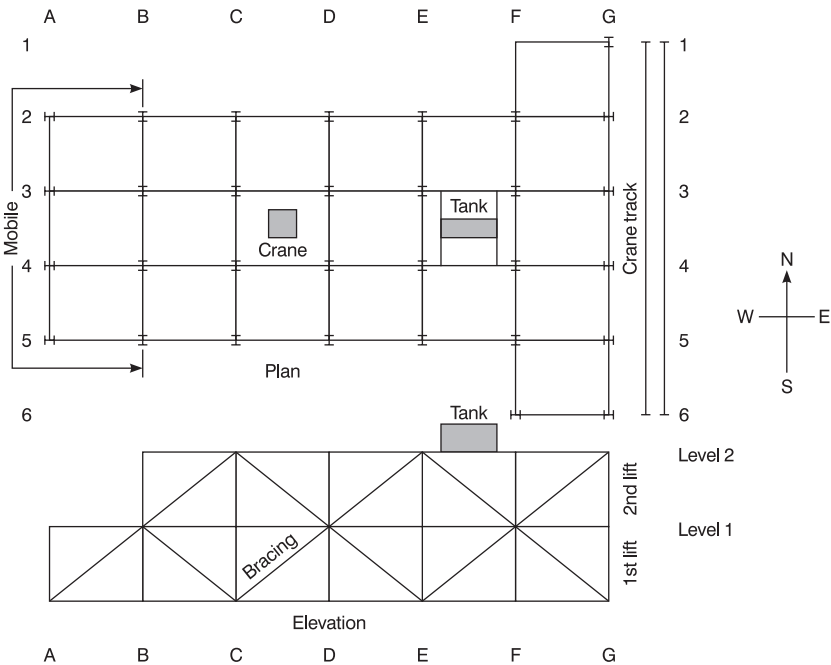



Figure 22.1 Structural framing plan

Integrated systems

The trend is to produce and operate integrated project management systems. By using the various regular inputs generated by the different operating departments, these systems can, on demand, give the project manager an up-to-date status report of the job in terms of time, cost and resources. This facility is particularly valuable once the project has reached the construction stage. The high cost of mainframe machines and the unreliability of regular feedback – even with the use of terminals – has held back the full utilization of computing facilities in the field, especially in remote sites. The PCs, with their low cost, mobility and ease of operation, have changed all this so that effective project control information can be generated on the spot.

The following list shows the type of management functions which can be successfully carried out either in the office, workshop or on a site by a single computer installation:

- cost accounting
- material control
- plant movement

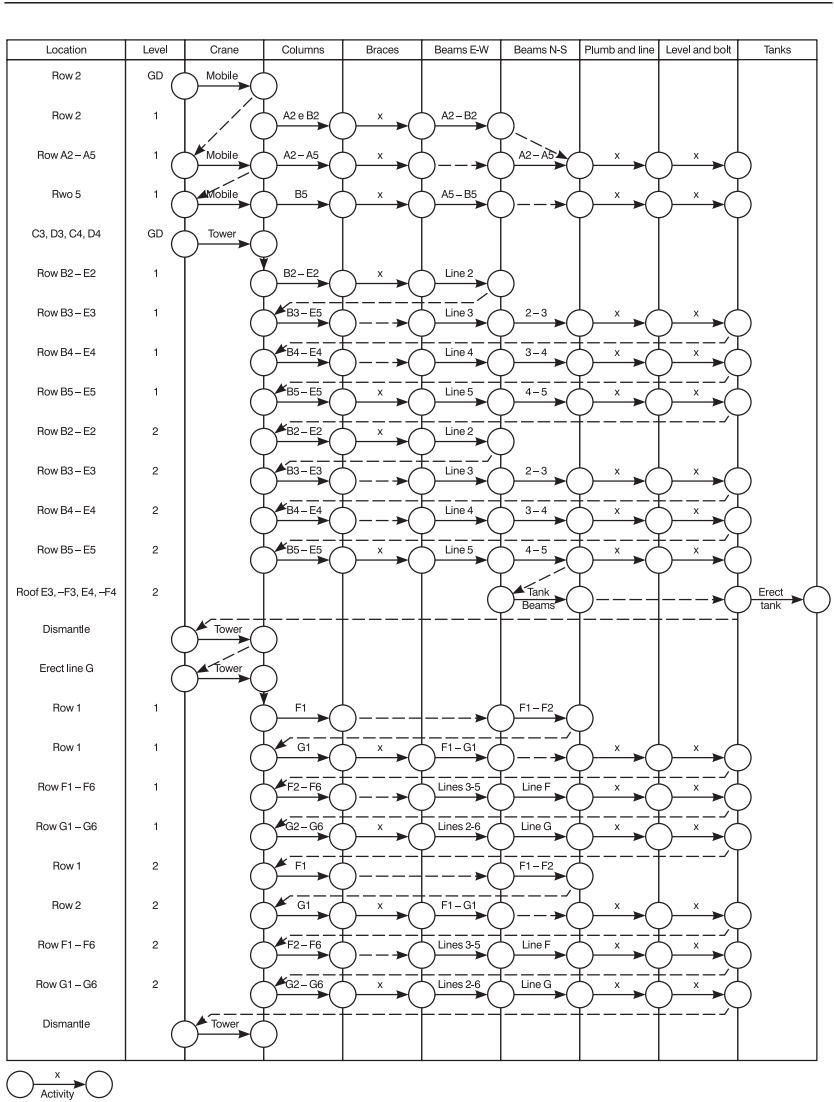

Additional equipment is available to provide presentation in graphic form such as bar charts, histograms, S-curves and other plots. If required, these can be in a number of colours to aid in identification.

The basis of all these systems is, however, still a good planning method based on well-defined and realistic networks and budgets. If this base is deficient, all comparisons and controls will be fallacious. The procedures described in Chapters 11 to 15 therefore still apply. In fact the more sophisticated the analysis and data processing the more accurate and meaningful the base information has to be. This is because the errors tend to be multiplied by further manipulation and the wider dissemination of the output will, if incorrect, give more people the wrong data on which to base management decisions.

23

Network applications outside the construction industry

Most of the examples of network analysis in this book are taken from the construction industry, mainly because network techniques are particularly suitable for planning and progressing the type of operations found in either the design office or on a site. However, many operations outside the construction industry that comprise a series of sequential and parallel activities can benefit from network analysis – indeed, the Polaris project is an example of such an application.

The following examples are included, therefore, to show how other industries can make use of network analysis, but as can be seen from Chapter 18, even the humble task of getting up in the morning can be networked. When network analysis first became known, one men's magazine even published a critical path network of a seduction!

1 Bringing a new product onto the market

The operations involved in launching a new product require careful planning and coordination. This example shows how network techniques were used to plan the development, manufacture and marketing of a new type of water meter for use in countries where these are installed on every premises.

The list of operations are first grouped into five main functions:

- A Management;
- B Design and development;
- C Production;
- D Purchasing and supply;
- E Sales and marketing.

Each main function is then divided into activities which have to be carried out in defined sequences and by specific times. The management function would therefore include the following activities:

- A-1 Definition of product
 - size, range, finish, production rate, etc.
- 2 Costing
 - selling price, manufacturing costs.
- 3 Approvals for expenditure
 - plant materials, tools and jigs, storage, advertising, training, etc.
- 4 Periodic reviews
- 5 Instruction to proceed with stages

The design and development function would consist of:

- B-1 Product design brief
- 2 Specification and parts list
- 3 Prototype drawings
- 4 Prototype manufacture
- 5 Testing and reports
- 6 Preliminary costing

Once the decision has been made to proceed with the meter, the production department will carry out the following activities:

- C-1 Production planning
- 2 Jig tool manufacture
- 3 Plant and machinery requisition

- 4 Production schedules
- 5 Materials requisitions
- 6 Assembly-line installation
- 7 Automatic testing
- 8 Packing bay
- 9 Inspection procedures
- 10 Labour recruitment and training
- 11 Spares schedules

The purchasing and supply function involves the procurement of all the necessary raw materials and bought-out items and includes the following activities:

- D-1 Material enquiries
- 2 Bought-out items enquiries
 - 3 Tender documents
 - 4 Evaluation of bids
 - 5 Long delivery orders
 - 6 Short delivery orders
 - 7 Carton and packaging
 - 8 Instruction leaflets, etc.
 - 9 Outside inspection

The sales and marketing function will obviously interlink with the management function and consists of the following activities:

- E-1 Sales advice and feedback
- 2 Sales literature – photographs, copying, printing, films, displays, packaging.
 - 3 Recruitment of sales staff
 - 4 Sales campaign and public relations
 - 5 Technical literature – scope and production.
 - 6 Market research

Obviously, the above breakdowns are only indicative and the network shown in Figure 23.1 gives only the main items to be programmed. The actual programme for such a product would be far more detailed and would probably contain about 120 activities.

The final presentation could then be in bar chart form covering a time span of approximately 18 months from conception to main production run.

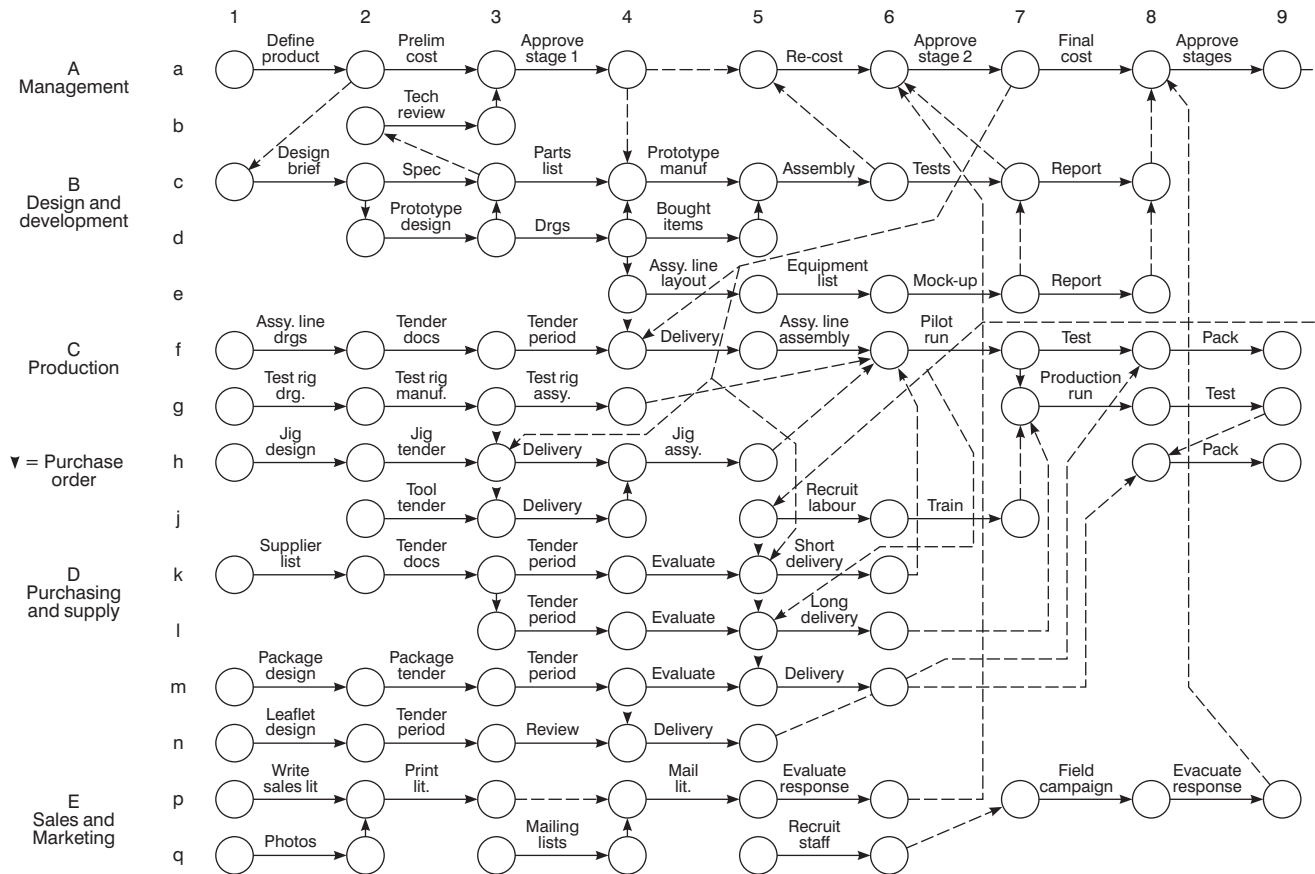


Figure 23.1 New product

2 Moving a factory

One of the main considerations in moving the equipment and machinery of a manufacturing unit from one site to another is to carry out the operation with the minimum loss of production. Obviously, at some stage manufacturing must be halted unless certain key equipment is duplicated, but if the final move is carried out during the annual works' holiday period the loss of output is minimized.

Consideration must therefore be given to the following points:

- 1 Equipment or machines which can be temporarily dispensed with;
- 2 Essential equipment and machines;
- 3 Dismantling problems of each machine;
- 4 Re-erection;
- 5 Service connections;
- 6 Transport problems – weight, size, fragility;
- 7 Orders in pipeline;
- 8 Movement of stocks;
- 9 Holiday periods;
- 10 Readiness of new premises;
- 11 Manpower availability;
- 12 Overall cost;
- 13 Announcement of move to customers and suppliers;
- 14 Communication equipment (telephone, e-mail, fax);
- 15 Staff accommodation during move;
- 16 Trial runs;
- 17 Staff training.

By collecting these activities into main functions, a network can be produced which will facilitate the organization and integration of the main requirements. The main functions would therefore be:

- A Existing premises and transport;
- B New premises – commissioning;
- C Services and communications;
- D Production and sales;
- E Manpower, staffing.

The network for the complete operation is shown in Figure 23.2. It will be noticed that, as with the previous example, horizontal banding (as described in Chapter 21) is of considerable help in keeping the network disciplined.

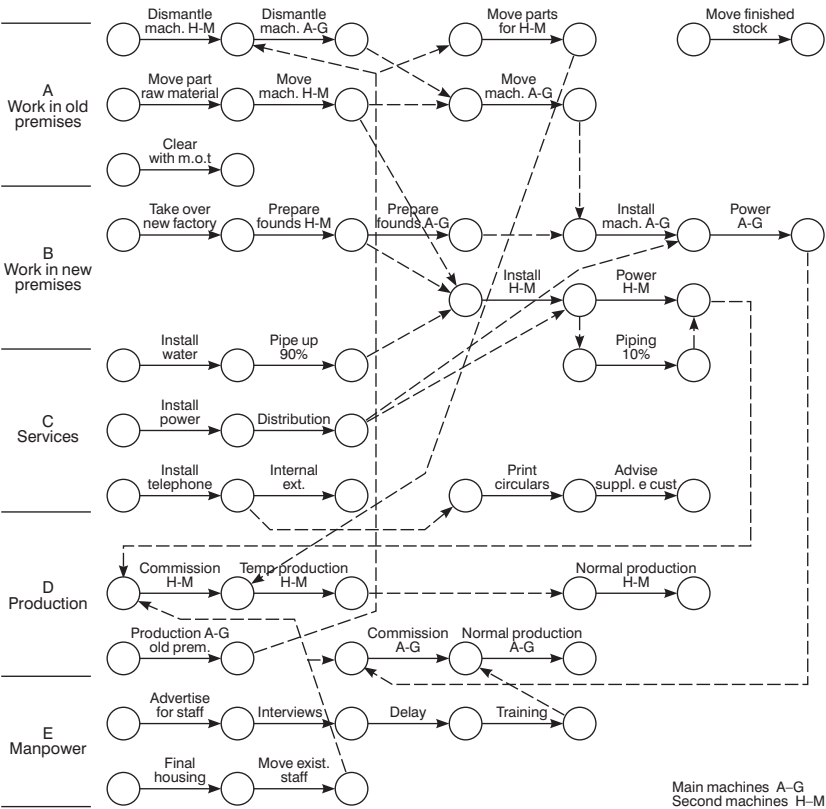


Figure 23.2 Moving a factory

By transferring the network onto a bar chart it will be possible to arrange for certain activities to be carried out at weekends or holidays. This may require a rearrangement of the logic which, though not giving the most economical answer in a physical sense, is still the best overall financial solution when production and marketing considerations are taken into account.

3 Centrifugal pump manufacture

The following network shows the stages required for manufacturing centrifugal pumps for the process industry. The company providing these pumps has no foundry, so the unmachined castings have to be bought in.

Assuming that the drawings for the pump are complete and the assembly line set up, a large order for a certain range of pumps requires the following main operations:

- 1 Order castings – bodies, impellers;
- 2 Order raw materials for shafts, seal plates, etc.;
- 3 Order seals, bearings, keys, bolts;
- 4 Machine castings, impellers;
- 5 Assemble;
- 6 Test;
- 7 Paint and stamp;
- 8 Crate and dispatch;
- 9 Issue maintenance instructions and spares list.

Figure 23.3 shows the network of the various operations complete with coordinate node numbers, durations and earliest start times. The critical path is shown by a double line and total float can be seen by inspection. For example, the float of all the activities on line C is $120 - 48 = 72$ days. Similarly, the float of all activities on line D is $120 - 48 = 72$ days.

Figure 23.4 is the network redrawn in bar-chart form, on which the floats have been indicated by dotted lines. It is apparent that the preparation of documents such as maintenance manuals, spares lists and quotes can be delayed without ill effect for a considerable time, thus releasing these technical resources for more urgent work such as tendering for new enquiries.

4 Planning a mail order campaign

When a mail order house decides to promote a specific product a properly coordinated sequence of steps have to be followed to ensure that the campaign will have the maximum impact and success. The following example shows the activities required for promoting a new set of records and involves both the test campaign and the main sales drive.

The two stages are shown separately on the network (Figure 23.5) since they obviously occur at different times, but in practice intermediate results could affect management decisions on packaging and text on the advertising leaflet. At the end of the test shot management will have to decide on the percentage of records to be ordered to meet the initial demand.

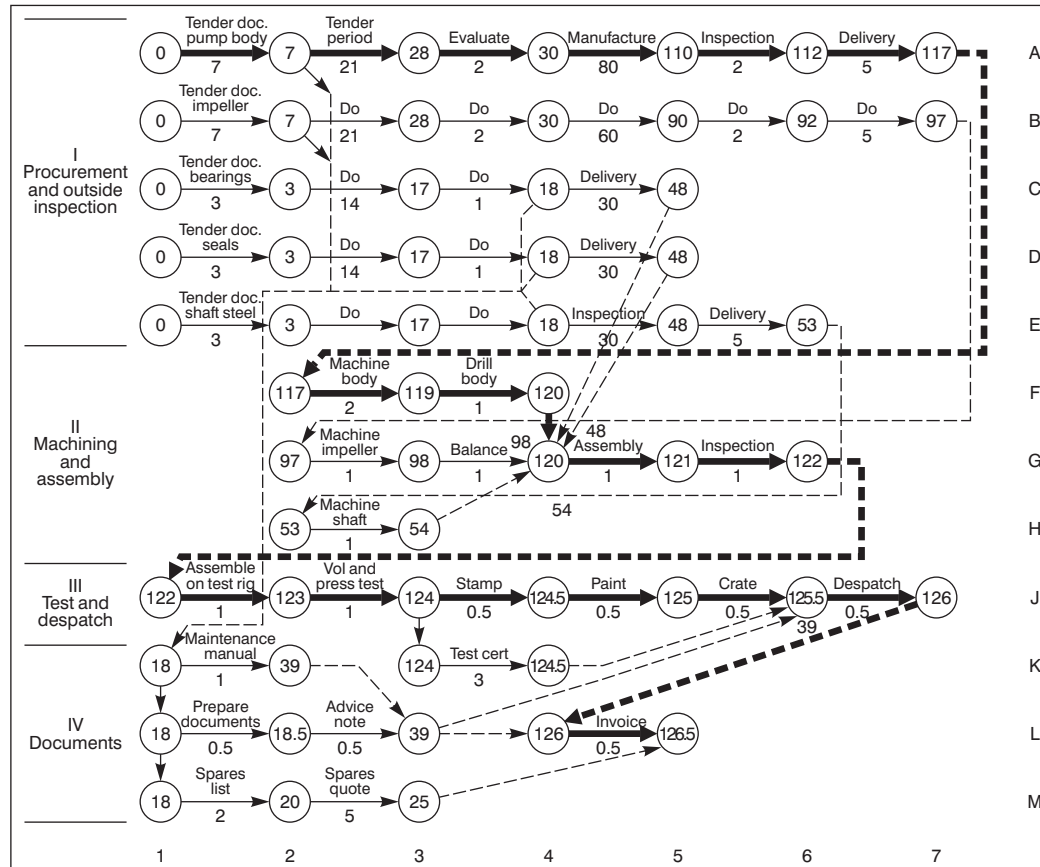


Figure 23.3 Pump manufacture (duration in days)

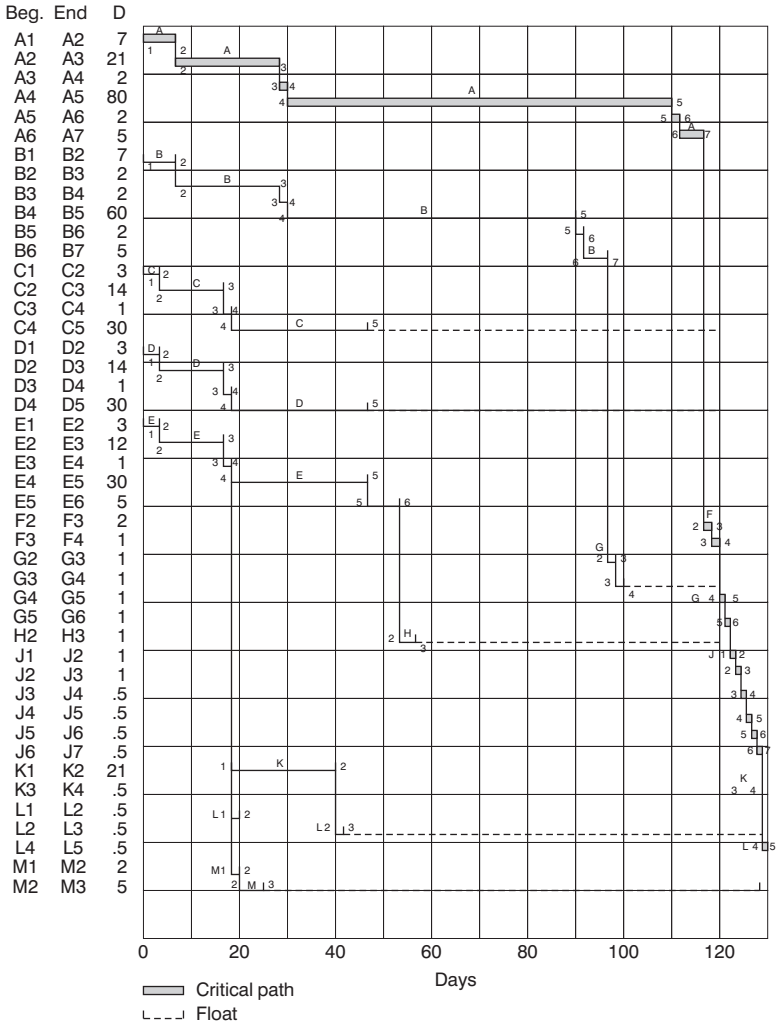


Figure 23.4 Pump manufacture – critical path analysis

In practice, the test shot will consist of three or more types of advertising leaflet and record packaging, and the result of each type will have to be assessed before the final main campaign leaflets are printed.

Depending on the rate of return of orders, two or more record ordering and dispatch stages will have to be allowed for. These are shown on the network as B1 and B2.

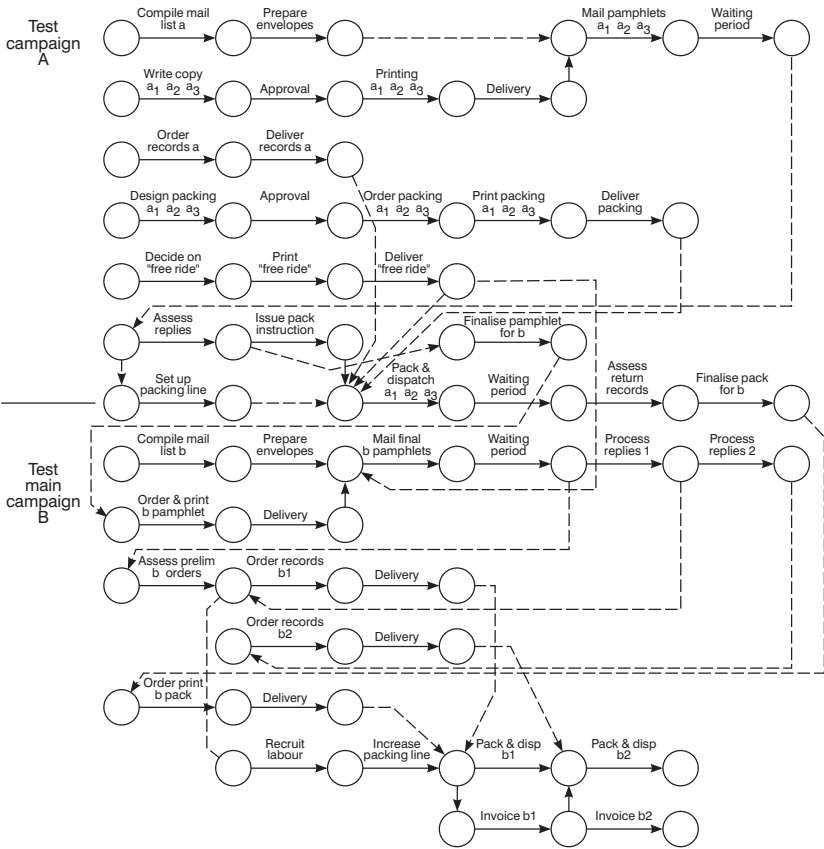


Figure 23.5 Mail order campaign

5 Manufacture of a package boiler

The programme in this example covers the fabrication and assembly of a large package boiler of about 75 000 kg of superheated steam per hour at 30 bar g and a temperature of 300°C. The separate economizer is not included.

The drum shells, drum ends, tubes, headers, doors and nozzles are bought out, leaving the following manufacturing operations:

- 1 Weld drums (longitudinal and circumferential seams);
- 2 Weld on drum ends;
- 3 Weld on nozzles and internal supports;
- 4 Drill drums for tube;

- 5 Stress relieve top and bottom drums;
- 6 Bend convection bank tubes;
- 7 Fit and expand tubes in drums – set up erection frame;
- 8 Weld fins to furnace tubes; pressure test;
- 9 Produce waterwall panels;
- 10 Gang bend panels;
- 11 Erect wall panels;
- 12 Weld and drill headers; stress relieve;
- 13 Weld panels to headers;
- 14 Weld on casing plates;
- 15 Attach peepholes, access doors, etc.;
- 16 Pressure test;
- 17 Seal-weld furnace walls;
- 18 Fit burners and seals;
- 19 Air test – inspection;
- 20 Insulate;
- 21 Prepare for transport;
- 22 Dispatch.

There are four main bands in the manufacturing programme:

- A Drum manufacture;
- B Panel and tube manufacture;
- C Assembly;
- D Insulation and preparation for dispatch.

The programme assumes that all materials have been ordered and will be available at the right time. Furthermore, in practice, subprogrammes would be necessary for panel fabrication, which includes blast cleaning the tubes and fin bar, automatic welding, interstage inspection, radiography, and stress relieving. Figure 23.6 shows the main production stages covering a period of approximately seven months.

6 Manufacture of a cast machined part

The casting, machining and finishing of a steel product can be represented in network form as shown in Figure 23.7. It can be seen that the total duration of the originally planned operation is 38 hours. By incorporating the principle that if the component has to be moved between workstations (efficiency can be increased if some of the operations are performed while the part is on the move) it is obviously possible to reduce the overall manufacturing time. The

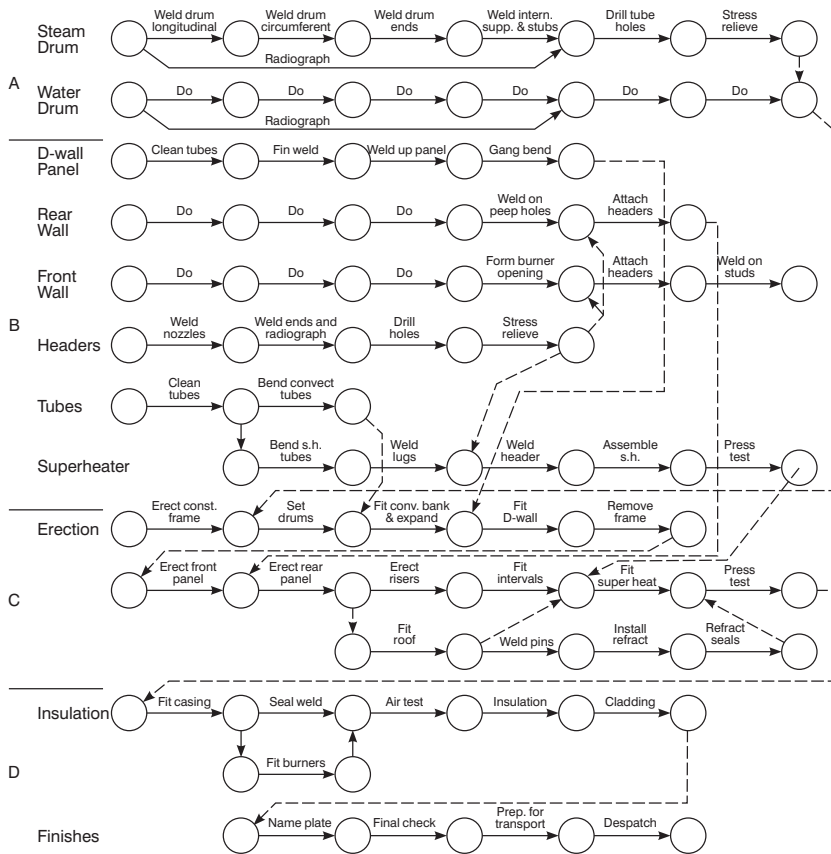


Figure 23.6 Boiler manufacture

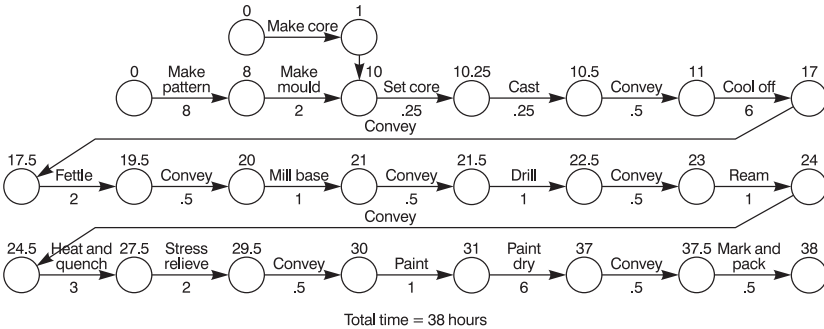


Figure 23.7 (Original)

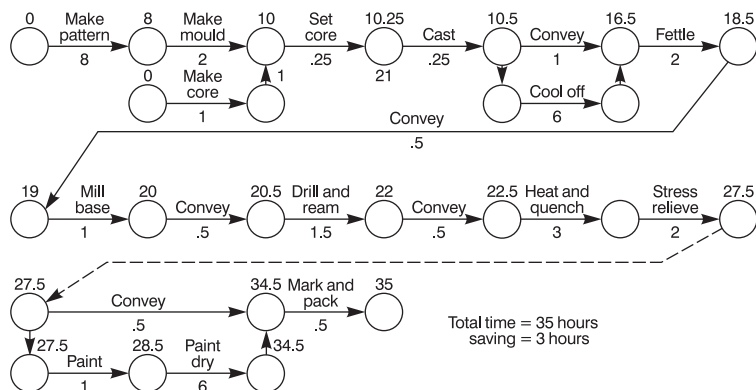


Figure 23.8 (Revised)



obvious activities which can be carried out while the component is actually being transported (usually on a conveyor system) is cooling off, painting and paint drying. As can be seen from Figure 23.8, such a change in the manufacturing procedure saves 3 hours.

Any further time savings now require a reduction in duration of some of the individual activities. The first choice must obviously be those with the longest durations, i.e.

- 1 Make pattern (8 hours);
- 2 Cool off (6 hours);
- 3 Dry paint (8 hours).

These operations require new engineering solutions. For example, in (1), the pattern may have to be split, with each component being made by a separate pattern maker. It may also be possible to subcontract the pattern to a firm with more resources. Activity (2) can be reduced in time by using forced-draught air to cool the casting before fettling. Care must, of course, be taken not to cool it at such a rate that it causes cracking or other metallurgical changes. Conversely to (2), the paint drying in (3) can be speeded up by blowing warm air over the finished component. If the geographical layout permits it, it may be possible to take the heated air from the cooling process, pass it through a filter and use it to dry the paint!

Further time reductions are possible by increasing the machining time of the milling and drilling operations. This may mean investing in cutters or drills which can withstand higher cutting speeds. It may also be possible to



increase the speed of the different conveyors which, even on the revised network, make up one hour of the cycle time.

For those planners who are familiar with manufacturing flow charts it may be an advantage to draw the network in precedence format (see Chapter 12). Such a representation of the initial and revised networks is shown in Figures 23.9 and 23.10, respectively.

It is important to remember that the network itself does not reduce the overall durations. Its first function is to show in a graphic way the logical interrelationship of the production processes and the conveying requirement between the manufacturing stages. It is then up to the production engineer or controller to examine the network to see where savings can be made. This is, in fact, the second function of the network – to act as a catalyst for the thought processes of the user to give him the inspiration to test a whole series of alternatives until the most economical production sequence has been achieved.

The use of a PC at this stage will, of course, enable the various trial runs to be carried out quite rapidly, but, as can be seen, even a manual series of tests takes no longer than a few minutes. As explained in Chapter 14, the first operation is to calculate the shortest forward pass – a relatively simple operation – leaving the more complex calculations of float to the computer when the final selection has been made.

Networks and claims

From the contractor's point of view, one of the most useful (and lucrative) applications of network presentation arises when it is necessary to formulate claims for extension of time, disruption to anticipated sequences or delays of equipment deliveries. There is no more convincing system than a network to show a professional consultant how his late supply of design information has adversely affected progress on-site, or how a late delivery has disrupted the previously stated method of construction.

It is, of course, self-evident that to make the fullest use of the network for claim purposes, the method of construction *must* have been previously stated, preferably also in network form. The wise contractor will include a network showing the anticipated sequences with his tender, and indicate clearly the deadlines by which drawings, details and equipment are required.

In most cases the network will be accepted as a fair representation of the construction programme, but it is possible that the client or consultant will try to indemnify himself by such statements that he (the consultant) does not necessarily accept the network as the only logical

sequence of operations, etc. Therefore it is up to the contractor to use his skills and experience to construct the works in the light of circumstances prevailing at the time.

Such vague attempts to forestall genuine claims for disruption carry little weight in a serious discussion among reasonable people, and count even less should the claim be taken to arbitration. The contractor is entitled to receive his access, drawings and free issue equipment in accordance with his stated method of construction, as set out in his tender, and all the excuses or disclaimers by the client or consultant cannot alter this right. Those contractors who have appreciated this facility have undoubtedly profited handsomely by making full use of network techniques, but these must, of course, be prepared accurately.

To obtain the maximum benefit from the network, the contractor must show that:

- 1 The programme was reasonable and technically feasible;
- 2 It represented the most economical construction method;
- 3 Any delays in client's drawings or materials will either lengthen the overall programme or increase costs, or both;
- 4 Any acceleration carried out by him to reduce the delay caused by others resulted in increased costs;
- 5 Any absorption of float caused by the delay increased the risk of completion on time and had to be countered by acceleration in other areas or by additional costs.

The last point is an important one, since 'float' belongs to the contractor. It is the contractor who builds it into his programme. It is the contractor who assesses the risks and decides which activities require priority action. The mere fact that a delayed component only reduced the float of an activity, without affecting the overall programme, is not a reason for withholding compensation if the contractor can show increased costs were incurred.

Examples of claims for delays

The following examples show how a contractor could incur (and probably re-claim) costs by late delivery of drawings or materials by the employer.

Example 1

To excavate a foundation the network in Figure 24.1 was prepared by the contractor. The critical path obviously runs through the excavation, giving the

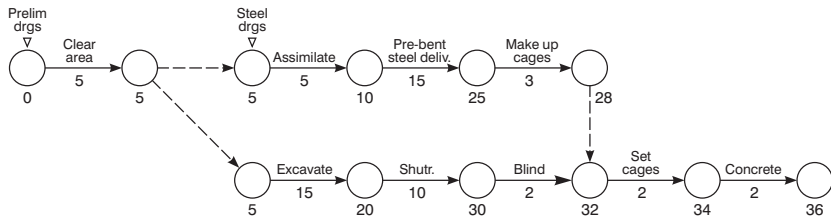


Figure 24.1

path through the reinforcing steel supply and fabrication a float of 4 days. If the drawings are delayed by 4 days, both paths become critical and, in theory, no delays occur. However, in practice, the contractor may now find that the delay in the order for reinforcing steel has lost him his place in the queue of the steel supplier, since he had previously advised the supplier that information would be available by day 10. Now that the information was only given to the supplier on day 14, labour for the cages was diverted to another contract and, to meet the new delivery of day 29, overtime will have to be worked. These overtime costs are claimable.

In any case, the 4-day float which the contractor built in as an insurance period has now disappeared, so that even if the steel had arrived by day 29 and the cage fabrication took longer than 3 days, a claim would have been justified.

Example 2

The network in Figure 24.2 shows a sequence for erecting and connecting a set of pumps. The first pump was promised to be delivered by the client on a 'free issue' basis in Week 0. The second pump was scheduled for delivery in week 4. In the event, both pumps were delivered together in week 4. The client argued that since there was a float of 4 days on pump 1, there was no delay to the programme since handover could still be effected by week 16.

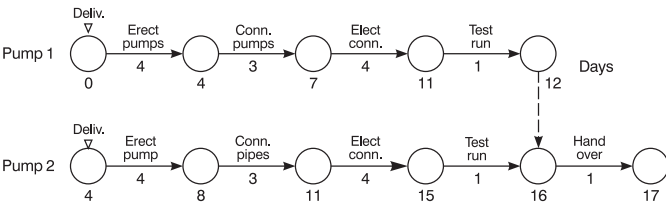


Figure 24.2

What the programme does *not* show, and what it *need not show*, are the resource restraints imposed by the contractor to give him economical working. A network submitted as a contractual document need only show the logic from an *operational* point of view. Resource restraints are *not* logic restraints since they can be overcome by merely supplying additional resources.

The contractor rightly pointed out that he always intended to utilize the float on the first set of pumps to transfer the pipe fitters and electricians to the second pump as soon as the first pump was piped up and electrically connected. The *implied* network, utilizing the float economically was therefore as shown in Figure 24.3.

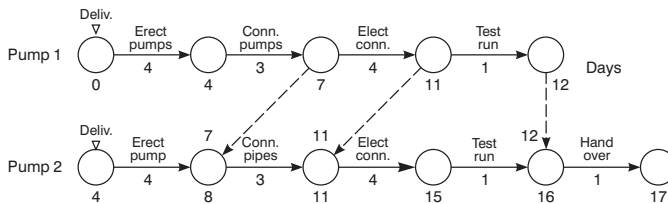


Figure 24.3

Now, to meet the programme, the contractor has to employ two teams of pipe fitters and electricians which may have to be obtained at additional cost from another site and certainly requiring additional supervision if the two pumps are geographically far apart. Needless to say, if the contractor shows the *resource* restraints in his contract network, his case for a reimbursement of costs will be that much easier to prove.

Examples of force majeure claims

The causes giving rise to force majeure claims are usually specified in the contract, and there is generally no difficulty in claiming extension of time for the period of a strike or (where permitted) the duration of extraordinary bad weather. What is more difficult to prove is the loss of time caused by the *effect* of a force majeure situation. It is here where a network can help the contractor to state his case.

Example 1

A boiler manufacturer has received two orders from different clients and has programmed the two contracts through his shops in such a way that as one

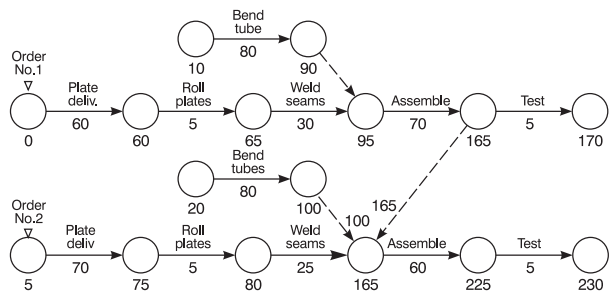


Figure 24.4

boiler leaves the assembly area, the parts of the second boiler can be placed into position ready for assembly. The simplified network is shown in Figure 24.4. Because the factory had only one assembly bay, Boiler No. 2 assembly had to await completion of Boiler No. 1, and the delivery promises of Boiler No. 2 reflected this.

Unfortunately the plate for the drum of Boiler No. 1, which was ordered from abroad, was delayed by a national dock strike which lasted 15 days. The result was that both boilers were delayed by this period although the plate for Boiler No. 2 arrived as programmed.

The client of Boiler No. 2 could not understand why his boiler should be delayed because of the late delivery of plate for another boiler, but when shown the network, he appreciated the position and granted an extension. Had the assembly of Boiler No. 2 started first, Boiler No. 1 would have been delayed 70 days instead of only 15, while Boiler No. 2 would have incurred storage costs for 60 days. Clearly, such a situation was seen to be unrealistic by all parties. The revised network is shown in Figure 24.5.

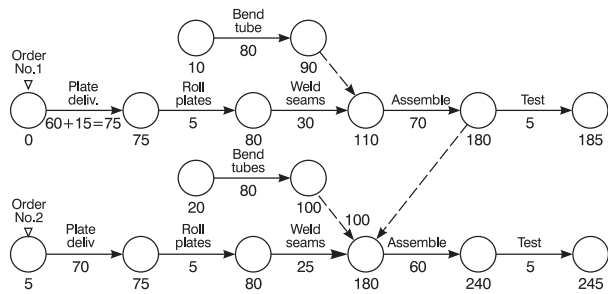


Figure 24.5

Example 2

The contract for large storage tanks covered supply erection and painting. Bad weather was a permissible force majeure claim. During the erection stage, high winds slowed down the work because the cranes would not handle the large plates safely. The winds delayed the erection by four weeks, but by the time the painting stage started, the November mists set in and the inspector could not allow painting to start on the damp plate. The contractor submitted a network with the contract to show that the painting would be finished *before* November. Because of the high winds, the final coat of paint was, in fact, delayed until March, when the weather permitted painting to proceed.

Figure 24.6 illustrates the network submitted which, fortunately, clearly showed the non-painting month, so that the client was aware of the position before contract award. The same point could obviously have been made on a bar chart, but the network showed that no acceleration was possible after the winds delayed the erection of the side plates. To assist in relating the week numbers to actual dates, a week number/calendar date table should be provided on the network.

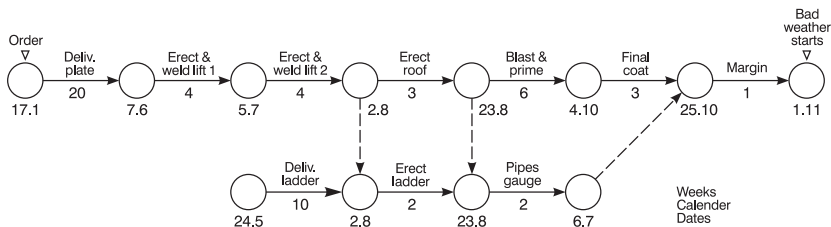


Figure 24.6

The above examples may appear to be rather negative, i.e. it looks as if network analysis is advocated purely as a device with which the contractor can extract the maximum compensation from the client or his advisers. No doubt, in a dispute both sides will attempt to field whatever weapons are at their disposal, but a more positive interpretation is surely that network techniques put *all* parties on their mettle. Everyone can see graphically the effects of delays on other members of the construction team and the cost or time implications that can develop. The result is, therefore, that all parties will make sure that they will not be responsible for the delay, so that in the end everyone – client, consultant and contractor – will benefit: the client, because he gets his job on time; the consultant, because his reputation is enhanced; and the contractor, because he can make a fair profit.

Fortunately the trend is for claims to be reduced due to the introduction of partnering. In these types of contract, which are usually a mixture of firm price and reimbursable costs, an open book policy by the contractor allows the employer to see how and where his money is being expended, so that there are no hidden surprises at the end of the contract ending up as a claim.

Frequently any cost savings are shared by a predetermined ratio so that all parties are encouraged to minimize delays and disruptions as much as possible. In such types of contracts network analysis can play an important part, in that, provided the network is kept up to date and reflects the true and latest position of the contract, all parties can jointly see graphically where the problem lies and can together hammer out the most economical solution.

Resource loading

Most modern computer programs incorporate facilities for resource loading or resource allocation. Indeed, the Hornet program mentioned in Chapter 17 features such a capability, and its method of operation is shown in Chapter 30.

In principle, the computer aggregates a particular resource in any time period and compares this with a previously entered availability level for that resource. If the availability is less than the required level, the program will either.

- 1 Show the excess requirement in tabular form, often in a different colour to highlight the problem; or
- 2 Increase the duration of the activity requiring that resource to spread the available resources over a longer period, thus eliminating the unattainable peak loading.

The more preferable action by the computer is (1), the simple report showing the overrun. It is then up to management to make the necessary adjustments by either extending the time period – if the contractual commitments permit – or mobilizing additional resources. In practice, of course, the problem is complicated by such issues

as available access or working space as well as financial, contractual or even political restraints. Often it may be possible to make technical changes which alter the resource mix. For example, a shortage of carpenters used for formwork erection may make it necessary to increase the use of pre-cast components with a possible increase in cost but a decrease in time. Project management is more than just writing and monitoring programs. The so-called project management systems are really only there to present to the project manager on a regular basis the position of the project to date and the possible consequences unless some form of remedial action is taken. The type of action and the timing of it rests fairly and squarely on the shoulders of management.

The options by management are usually quite wide, provided sufficient time is taken to think them out. It is in such situations that the 'what if' scenarios are a useful facility on a computer. However, the real implication can only be seen by 'plugging' the various alternatives into the network on paper and examining the down-stream effects in company with the various specialists, who, after all, have to do the actual work. There is no effective substitute for good teamwork!

The alternative approach

Resource smoothing can, of course, be done very effectively without a computer – especially if the program is not very large. Once a network has been prepared it is very easy to convert it into a bar chart, since all the 'thinking' has already been completed. Using the earliest starting and finishing times, the bars can be added to the gridded paper in minutes. Indeed, the longest operation in drawing a bar chart (once a network has been completed) is writing down the activity descriptions on the left-hand side of the paper. By leaving sufficient vertical space between the bars and dividing the grid into week (or day) columns, the resource levels for each activity can be added. Generally, there is no need to examine more than two types of resources per chart, since only the potentially restrictive or quantitatively limited ones are of concern. When all the activity bars have been marked with the resource value, each time period is added up vertically and the total entered in the appropriate space. The next step is to draw a histogram to show the graphical distribution of the resources. This will immediately highlight the peaks and troughs and trigger off the next step – resource smoothing.

Manual resource smoothing is probably the most practical method, since such unprogrammable factors as access, working space, hard-standing for

cranes, personality traits of foremen, etc. can only be considered by a human when the smoothing is carried out. Nevertheless, the smoothing operation must still follow the logical pattern given below:

- 1 Advantage should be taken of float. In theory, activities with free float should be the first to be extended, so that a limited resource can be spread over a longer time period. In practice, however, such opportunities are comparatively rare, and for all normal operations, all activities with total float can be used for the purpose of smoothing. The floats can be indicated on the bars by dotted line extensions, again read straight off the network by subtracting the earliest from the latest times of the beginning node of the activity.
- 2 When the floats have been absorbed and the resources are distributed over the longer activity durations, another vertical addition is carried out from which a new histogram can be drawn. A typical network, bar chart and histogram is shown in Figure 25.1.

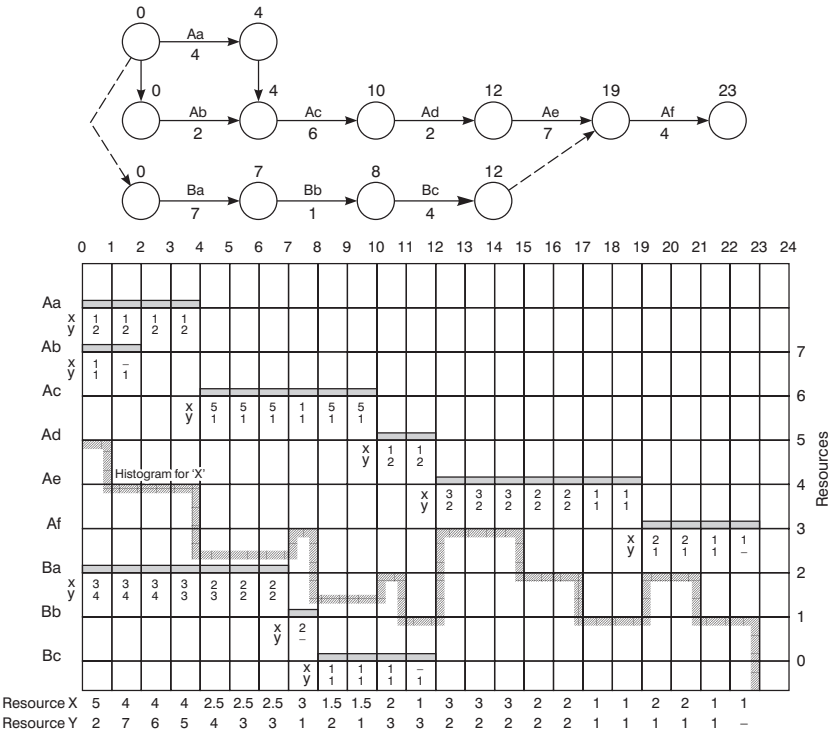


Figure 25.1

- 3 If the peaks still exceed the available resources for any time period, logic changes will be required. These changes are usually carried out on the network, but it may be possible to make some of them by 'sliding' the bars on the bar chart. For example, a common problem when commissioning a process or steam-raising plant is a shortage of suitably qualified commissioning engineers. If the bars of the bar chart are cut out and pasted onto cardboard with the resources written against each time period on the activity bar, the various operations can be moved on the time-scaled bar chart until an acceptable resource level is obtained. The reason it is not always necessary to use the network is that in a commissioning operation there is often considerable flexibility as to which machine is commissioned first. Whether pump A is commissioned before or after compressor B is often a matter of personal choice rather than logical necessity. When an acceptable solution has been found, the strips of bar can be held on to the backing sheet with an adhesive putty (Blu-Tack) and (provided the format is of the necessary size) photocopied for distribution to interested parties.
- 4 If the weekly (or daily) aggregates are totalled cumulatively it is sometimes desirable to draw the cumulative curve (usually known as the S-curve, because it frequently takes the shape of an elongated letter S), which gives a picture of the build-up (and run-down) of the resources over the period of the project. This curve is also useful for showing the cumulative cash flow, which, after all, is only another resource. An example of such a cash flow curve is given in Chapter 28.

The following example shows the above steps in relation to a small construction project where there is a resource limitation. Figure 25.2 shows the AoA configuration and Figure 25.3 shows the same network in AoN

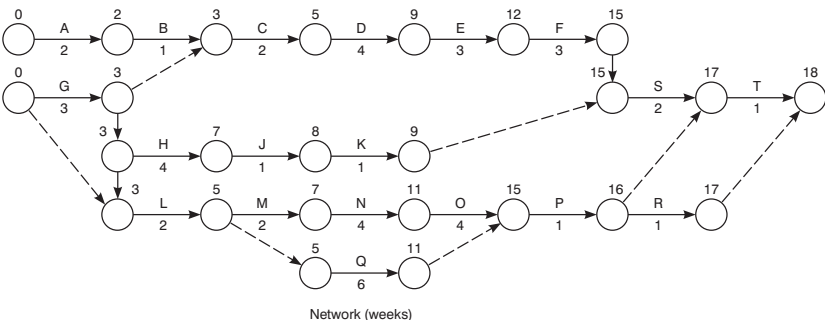


Figure 25.2

configuration. Figure 25.4 shows their translation into a bar (or Gantt) chart where the bars are in fact a string of resource numbers. For simplicity, all the resources shown are of the same type (e.g. welders). By adding up the resources of each week a totals table can be drawn, from which it can be seen that in week 9 the resource requirement is 14. This amount exceeds the availability, which is only 11 welders, and an adjustment is therefore necessary. Closer examination of the bar chart reveals a low resource requirement of only 6 in week 12. A check on the network (Figure 25.2)

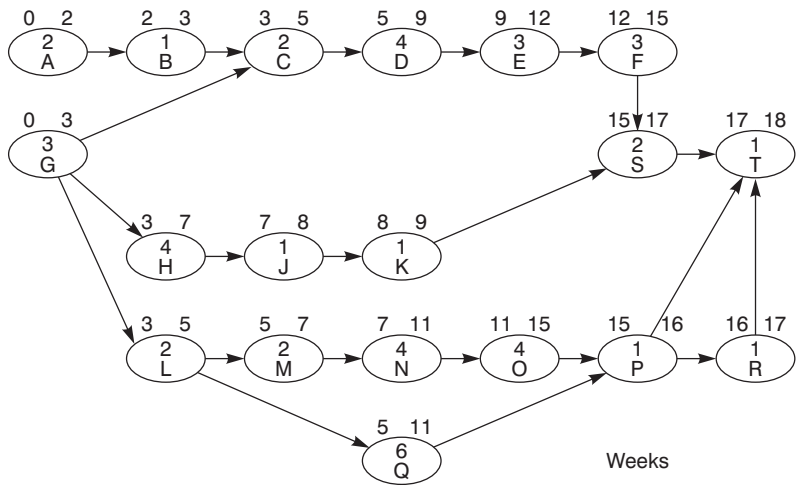


Figure 25.3

shows that there is $15 - 9 = 6$ weeks float on activity K. This activity can therefore be used to smooth the resources. By delaying activity K by 3 weeks, the resource requirement is now

Week 9, -10
Week 12, -10

From the revised totals table a histogram has been drawn as well as a cumulative resource curve. The latter can also be used as a planned performance curve since the resources (if men) are directly proportional to manhours. It is interesting to note that any 'dip' or 'peak' in the cumulative resource curve indicates a change of resource requirement which should be investigated. A well-planned project should have a smooth resource curve following approximately the shape of a letter S.

The method described may appear to be lengthy and time consuming, but the example given by Figures 25.2 (or 25.3) and 25.4, including the

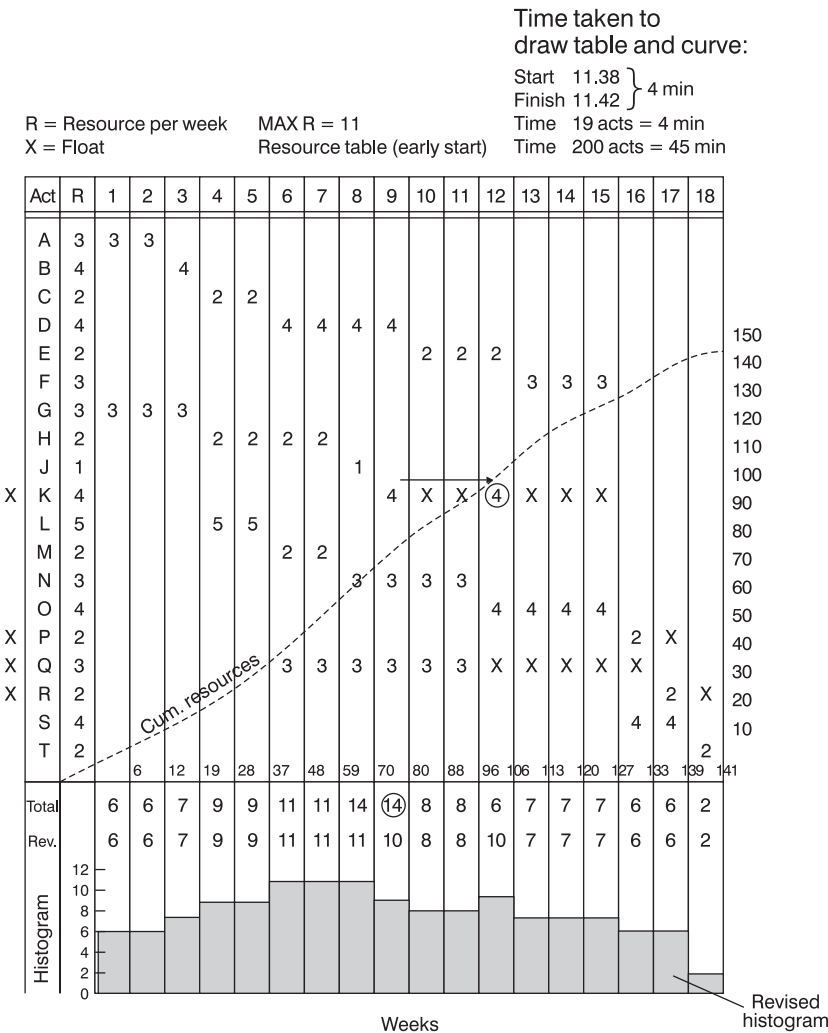


Figure 25.4

resource smoothing and curve plotting, took exactly 6 minutes. Once the activities and resources have been listed on graph paper, the bar chart draughting and resource smoothing of a practical network of approximately 200 activities can usually be carried out in about one hour.

Most modern computers' project management programs have resource smoothing facilities which enable the base to be re-positioned on the screen to give the required resource total for any time period.

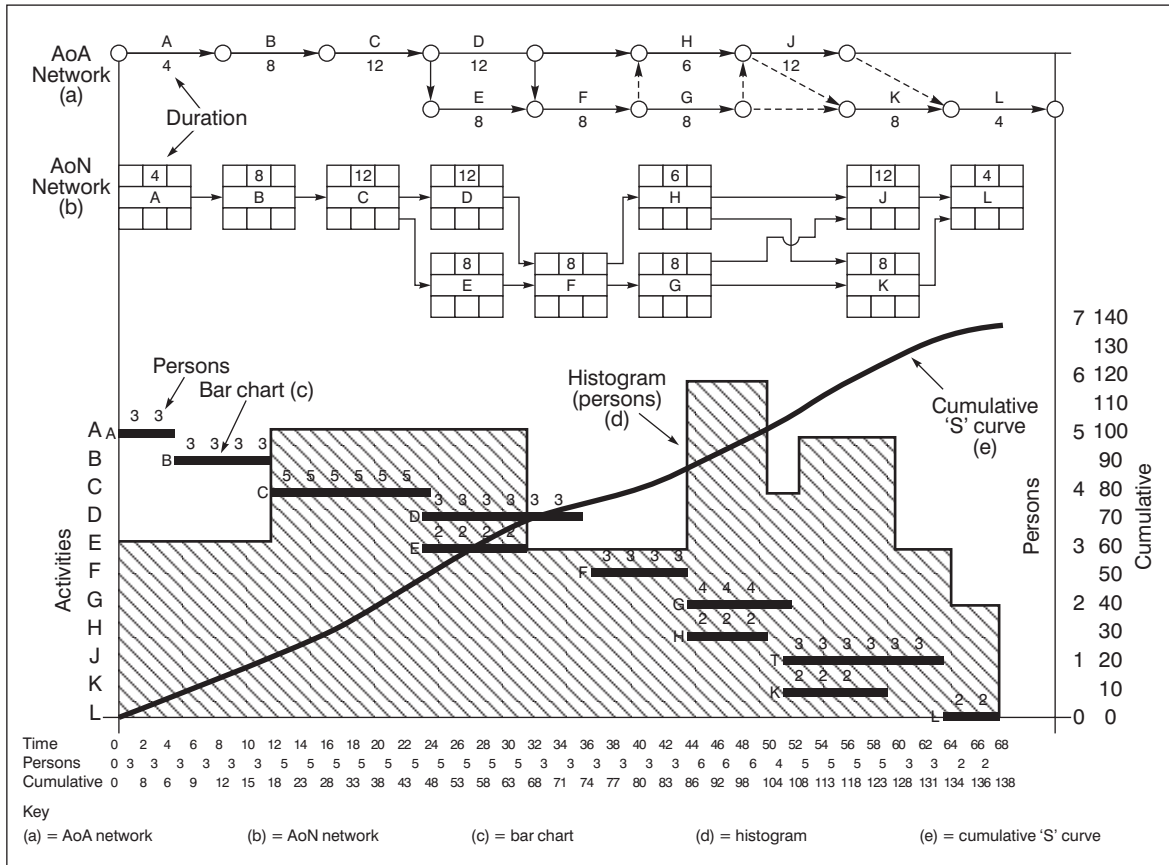


Figure 25.5

However it is advisable not to do this automatically as the machine cannot make allowances for congestion of work area, special skills of operators, clients' preferences and other factors only apparent to the people on the job.

Figure 25.5, included from BS 6079-1-2002, shows the relationship between the networks, bar chart, histogram and cumulative 'S' curve.

26

Cash flow forecasting

It has been stated in Chapter 25 that it is very easy to convert a network into a bar chart, especially if the durations and week (or day) numbers have been inserted. Indeed, the graphical method of analysis actually generates the bar chart as it is developed.

If we now divide this bar chart into a number of time periods (say, weeks or months) it is possible to see, by adding up vertically, what work has to be carried out in any time period. For example, if the time period is in months, then in any particular month we can see that one section is being excavated, another is being concreted and another is being scaffolded and shuttered, etc.

From the description we can identify the work and can then find the appropriate rate (or total cost) from the bills of quantities. If the total period of that work takes six weeks and we have used up four weeks in the time period under consideration, then approximately two-thirds of the value of that operation has been performed and could be certificated.

By this process it is possible to build up a fairly accurate picture of anticipated expenditure at the

beginning of the job, which in itself might well affect the whole tendering policy. Provided the job is on programme, the cash flow can be calculated, but, naturally, due allowance must be made for the different methods and periods of retentions, billing and reimbursement. The cost of the operation must therefore be broken down into six main constituents:



- Labour;
- Plant;
- Materials and equipment;
- Subcontracts;
- Site establishment;
- Overheads and profit.

By drawing up a table of the main operations as shown on the network, and splitting up the cost of these operations (or activities) into the six constituents, it is possible to calculate the average percentage that each constituent contains in relation to the value. It is very important, however, to deduct the values of the subcontracts from any operation and treat these subcontracts separately. The reason for this is, of course, that a subcontract is self-contained and is often of a specialized nature. To break up a subcontract into labour, plant, materials, etc. would not only be very difficult (since this is the prerogative of the subcontractor) but would also seriously distort the true distribution of the remainder of the project.

Example of cash flow forecasting

The simplest way to explain the method is to work through the example described in Figures 26.1 to 26.6. This is a hypothetical construction project of three identical simple unheated warehouses with a steel framework on independent foundation blocks, profiled steel roof and side cladding, and a reinforced-concrete ground slab. It has been assumed that as an area of site has been cleared, excavation work can start, and the sequences of each warehouse are identical. The layout is shown in Figure 26.1 and the network for the three warehouses is shown in Figure 26.2.

Figure 26.3 shows the graphical analysis of the network separated for each building. The floats can be easily seen by inspection, e.g. there is a two-week float in the first paint activity (58–59) since there is a gap between the

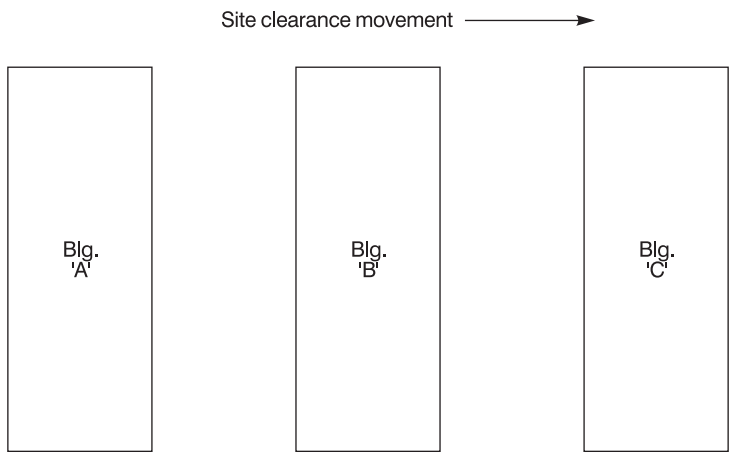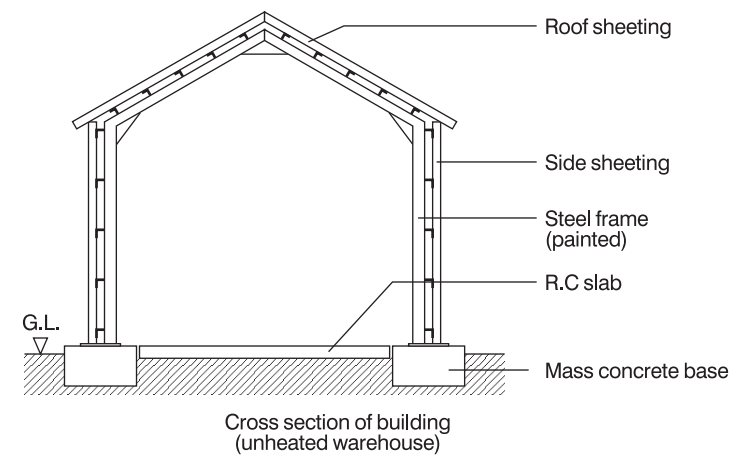

Contract value £488 400
Programme period 40 weeks = 10 payment periods
Retentions 10%
Payment delays:-

In period = 0	+ 1 month	+ 2 months
Labour oh & p (direct & s/c)	Sub contract Site establ	Paint Materials

Figure 26.1

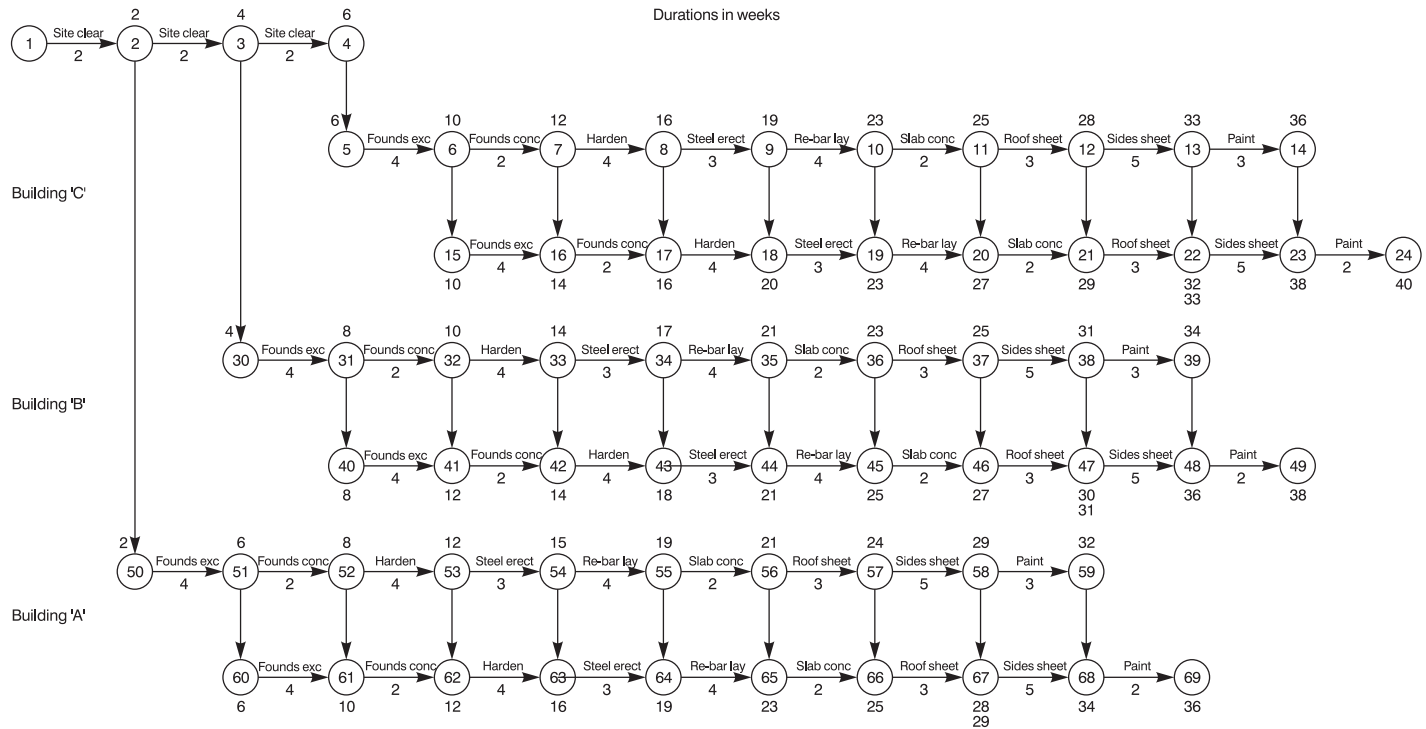


Figure 26.2 Construction network

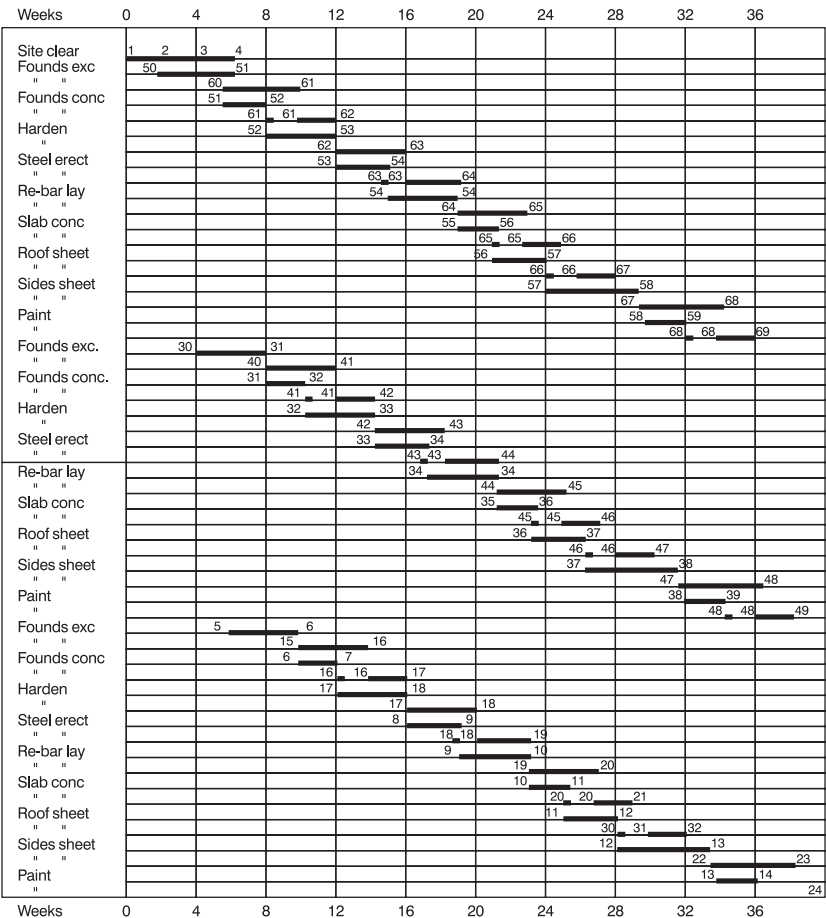


Figure 26.3

following dummy 59–68 and activity 68–69. The speed and ease of this method soon becomes apparent after a little practice.

The bar chart in Figure 26.5 has been drawn straight from the network (Figure 26.2) and the costs in £100 units added from Figure 26.4. For example, in Figure 26.4 the value of foundation excavation for any one building is £9400 per four-week activity. Since there are two four-week activities, the total is £18 800. To enable the activity to be costed in the corresponding measurement period, it is convenient to split this up into

One building

Units in £ x 100

Activity	Duration weeks	Total value	Labour		Plant		Materials		Sub Contr		Site Estb.		OH & P	
			Value	%	Value	%	Value	%	Value	%	Value	%	Value	%
Clear site	2	62	30	48	20	32	–		3	5	4	7	5	8
Founds exc.	4	94	40	43	40	43	–		–		6	6	8	8
" "	4	94	40	43	40	43	–		–		6	6	8	8
Founds conc.	2	71	20	28	10	14	30	42	–		5	8	6	8
" "	2	71	20	28	10	14	30	42	–		5	8	6	8
Steel erect	3	220	–		–		–		200	91	–		20	9
" "	3	220	–		–		–		200	91	–		20	9
Re-bar lay	4	106	30	28	–		60	56	–		7	7	9	9
" "	4	106	30	28	–		60	56	–		7	7	9	9
Slab conc.	2	71	20	28	10	14	30	42	–		5	8	6	8
" "	2	71	20	28	10	14	30	42	–		5	8	6	8
Roof sheet	3	66	–		–		–		60	91	–		6	9
" "	3	66	–		–		–		60	91	–		6	9
Sides sheet	5	100	–		–		–		90	90	–		10	10
" "	5	100	–		–		–		90	90	–		10	10
Paint	3	66	–		–		–		60	91	–		6	9
" "	2	44	–		–		–		40	91	–		4	9
Total direct		743	250	34	140	19	240	32			50	7	63	8
Total sub-contr.		885							803	91			82	9
Grand total		1628												
For 3 blgs		4884												

Figure 26.4

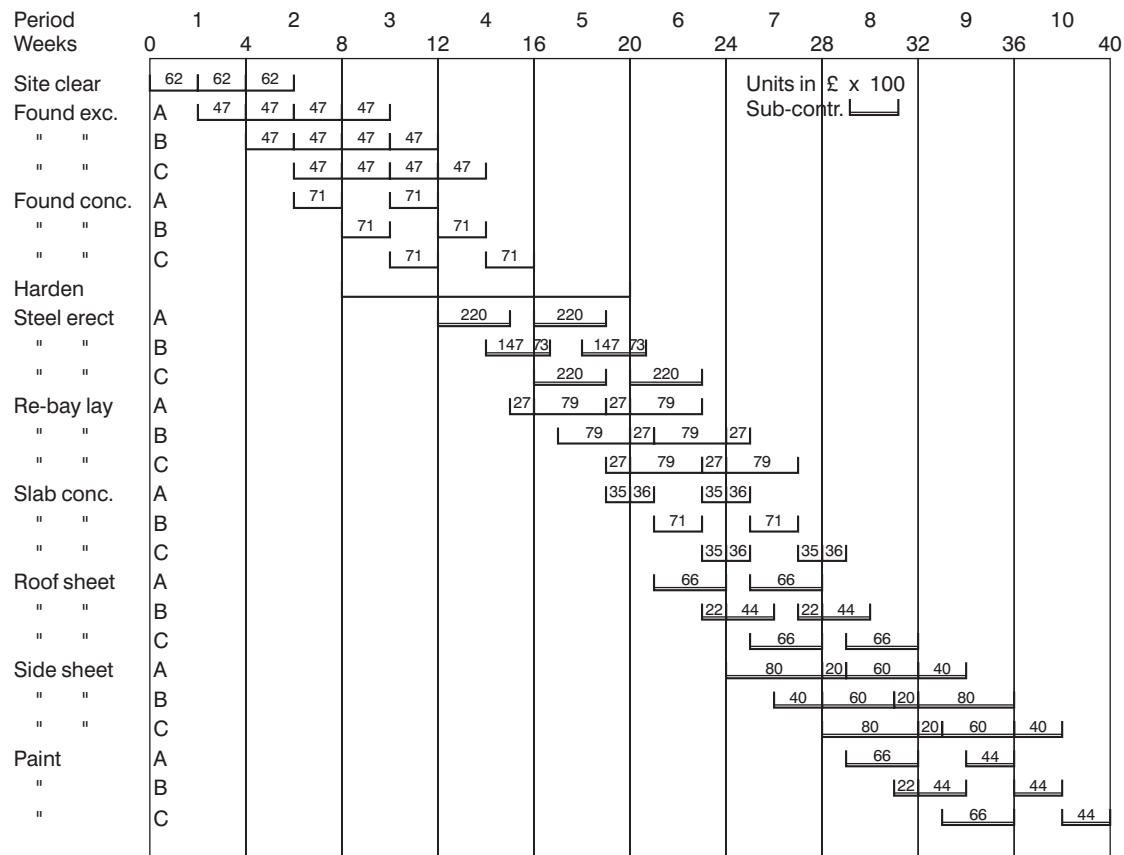


Figure 26.5

Period	Week	0	1	2	3	4	5	6	7	8	9	10	11
		4	8	12	16	20	24	28	32	36	40	44	
Total S/C	%	—	—	—	367	660	381	318	438	354	128		
S/C	91				334	600	347	289	399	322	116		
OH & P	9				33	60	34	29	39	32	12		
Direct	%	171	368	448	216	247	368	284	36				
Labour	34	58	125	153	74	84	159	97	12				
Plant	19	33	70	85	41	47	89	54	7				
Material	32	55	118	143	69	79	150	91	11				
Site est.	7	12	26	31	15	17	33	20	3				
OH & P	8	13	29	36	17	20	37	22	3				
Total value		171	368	448	583	907	849	602	474	354	128		
Outflow	Delay												
Labour	0	58	125	153	74	84	159	97	12				
Plant	2			33	70	85	41	47	89	54	7		
Material	2			55	118	143	69	79	150	91	11		
S/C	1					334	600	347	289	399	322	116	
Site est.	1		12	26	31	15	17	33	20	3			
OH & P	0	13	29	36	17	20	37	22	3				
S/C OH&P	0				33	60	34	29	39	32	12		
Out		71	166	303	343	741	957	654	602	579	352	116	
In 90% Net flow	1	(71)	154 (12)	331 28	403 60	525 (216)	816 (141)	764 110	542 (60)	427 (152)	319 (33)	115 (1)	

Figure 26.6

two-weekly periods of £4700. Hence in Figure 26.5, foundation excavation for building A is shown as

$$\begin{array}{l} 47 \text{ in period 1} \\ 47 + 47 = 94 \text{ in period 2} \\ 47 \text{ in period 3} \end{array}$$

The summation of all the costs in any period is shown in Figure 26.6.

The table in Figure 26.6 clearly shows the effect of the anticipated delays in payment of certificates and settlement of contractor's accounts. For example, material valued at 118 in period 2 is paid to the contractor after one month in period 3 (part of the 331, which is 90% of 368, the total value of period 2), and is paid to the supplier by the contractor in period 4 after the two-month delay period.

From Figure 26.6 it can be seen that it has been decided to extract overhead and profit monthly as the job proceeds, but this is a policy that is not followed by every company. Similarly, the payment delays may differ in practice, but the principle would be the same.

It will be noted that there is a positive cash flow in only three of the eleven measurement periods, and suitable finance charges must, therefore, be added to the contract value. Another method, of course, would be to ask for a mobilization fee at the beginning of the contract.

Cost control and EVA

Apart from ensuring that their project is completed on time, all managers, whether in the office, workshop, factory or on-site, are concerned with cost. There is little consolation in finishing on time, when, from a cost point of view, one wished the job had never started!

Cost control has been a vital function of management since the days of the pyramids, but only too frequently is the term confused with mere cost reporting. The cost report is usually part of every manager's monthly report to his superiors, but an account of the past month's expenditure is only stating historical facts. What the manager needs is a regular and up-to-date monitoring system which enables him to identify the expenditure with specific operations or stages, determine whether the expenditure was cost-effective, plot or calculate the trend, and then take immediate action if the trend is unacceptable.

Network analysis forms an excellent base for any cost-control system, since the activities can each be identified and costed, so that the percentage completion of an activity can also give the proportion of expenditure, if that expenditure is time related. The system is ideal, therefore, for construction sites, drawing offices or factories where the basic unit of control is the man hour.

SMAC – Manhour control

Site Manhour and Cost (SMAC)* is a cost control system developed specifically on a network base for either manual or computerized cost monitoring, which enables performance to be measured and trends to be evaluated, thus providing the manager with an effective instrument for further action. The system can be used for all operations where man hours have to be controlled, and since most functions in an industrial environment are based on manhours and can be planned with networks, the utilization of the system is almost limitless.

The following operations or activities could benefit from the system:

- 1 Construction-sites
- 2 Fabrication shops
- 3 Manufacturing (batch production)
- 4 Drawing offices
- 5 Removal services
- 6 Machinery commissioning
- 7 Repetitive clerical functions
- 8 Road maintenance

The criteria laid down when the system was first mooted were:

- 1 *Minimum site (or workshop) input.* Site staff should spend their time managing the contract and not filling in unnecessary forms.
- 2 *Speed.* The returns should be monitored and analysed quickly so that action can be taken.
- 3 *Accuracy.* The manhour expenditure must be identifiable with specific activities which are naturally logged on time sheets.
- 4 *Value for money.* The useful manhours on an activity must be comparable with the actual hours expended.
- 5 *Economy.* The system must be inexpensive to operate.
- 6 *Forward looking.* Trends must be seen quickly so that remedial action can be taken when necessary.

The final system satisfied all these criteria with the additional advantage that the percentage complete returns become a simple but effective feedback for updating the network programme.

*SMAC is the proprietary name given to the cost-control program developed by Foster Wheeler.

One of the most significant differences between SMAC and the conventional progress-reporting systems is the substitution of ‘weightings’ given to individual activities, by the concept of ‘value hours’. If each activity is monitored against its budget hours (or the hours allocated at the beginning of the contract, to that activity) then the ‘value hour’ is simply the percentage complete of that activity multiplied by its budget hours. In other words, it is the useful hours as against the actual hours recorded on the time sheets.

If all the value hours of a project are added up and the total divided by the total budget hours, the overall per cent complete of the project is immediately seen.

The advantage of this system over the weighting system is that activities can be added or eliminated without having to ‘re-weight’ all the other activities. Furthermore, the value hours are a tangible parameter, which, if plotted on a graph against actual hours, budget hours and predicted final hours, gives the manager a ‘feel’ of the progress of the job that is second to none. The examples in Tables 27.1 and 27.2 show the difference between the two systems.

Table 27.1 Weighting system

1 <i>Activity no.</i>	2 <i>Activity</i>	3 <i>Budget × 100</i>	4 <i>Weighting</i>	5 <i>% Complete</i>	6 <i>% Weighted</i>	7 <i>Actual hours × 100</i>
1	A	1000	0.232	100	23.2	1,400
2	B	800	0.186	50	9.3	600
3	C	600	0.140	60	8.4	300
4	D	1200	0.279	40	11.2	850
5	E	300	0.070	70	4.9	250
6	F	400	0.093	80	7.4	600
<i>Total</i>		4300	1.000		64.4	4,000

Overall % complete = 64.4%.

Predicted final hours $\frac{4000}{0.644} = 6211 \times 100$ hours

Efficiency = $\frac{4300 \times 0.644}{4000} = 69.25\%$

Table 27.2 Value hours (Earned Value) system

1 <i>Activity no.</i>	2 <i>Activity</i>	3 <i>Budget × 100</i>	4 <i>% Complete</i>	5 <i>Value hours × 100</i>	6 <i>Actual hours × 100</i>
1	A	1000	100	1000	1400
2	B	800	50	400	600
3	C	600	60	360	300
4	D	1200	40	480	850
5	E	300	70	210	250
6	F	400	80	320	600
<i>Total</i>		4300		2770	4000

$$\text{Overall \% complete} = \frac{2770}{4300} = 64.4\%.$$

$$\text{Predicted final hours} = \frac{4000}{0.644} = 6211 \times 100 \text{ hours}$$

$$\text{Efficiency} = \frac{2770}{4000} = 69.25\%$$

Summary of advantages

Comparing the weighting and value hour systems, the following advantages of the value hour system are immediately apparent:

- 1 The value hours system requires only six columns against the weighting system's seven.
- 2 There is no need to carry out a preliminary time-consuming 'weighting' at the beginning of the job.
- 3 The value hours can be entered in many cases by inspection – i.e. there is no need to calculate them. The reader may wish to test the relative speed by carrying out both sets of calculations and timing them with a stopwatch!
- 4 Errors are easily seen, since one can compare value with budget.
- 5 Activities can be added or removed without the need to recalculate the weightings. This saves hundreds of hours on a large project.
- 6 Budget hours, actual hours, value hours and predicted final hours can all be plotted on one graph to show trends.
- 7 The method is ideal for assessing the value of work actually completed for progress payments of main and sub-contracts. Since it is based on

manhours, it truly represents construction progress independently of material costs, which so often distort the assessment.

It will be noted that the predicted final hours were obtained by dividing the *total* actual hours by the *overall* percentage complete. This is a rapid method of assessing the predicted final hours and is satisfactory for most practical purposes. In many ways this method is preferable to the more 'exact' method, which consists of calculating the predicted final hours for each activity separately and then adding them up for the total final hours. The reason for this is easily seen when one examines what the individual final hours can be if the percentage complete is very low and the actual hours are very high (i.e. if the work has been carried out very inefficiently). In practice, such instances always occur on a few activities, especially where rework is involved so that the resulting predicted final hours for such activities are unrealistic. The following examples will make this clear.

Example 1 Reasonable progress

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>
<i>Activity</i>	<i>Budget hours</i>	<i>Actual hours</i>	<i>% Complete</i>	<i>Value hours $B \times D$</i>	<i>Forecast final hours C/D</i>
1	1000	200	20	200	1000
2	200	100	50	100	200
3	600	300	40	240	750
<i>Total</i>	1800	600		540	1950

By adding all the hours in column F the total forecast hours are 1950. The overall percentage complete is

$$\frac{\text{Total value}}{\text{Total budget}} = \frac{E}{B} = \frac{540}{1800} = 30\%$$

The *approximate* final hours are therefore:

$$\frac{\text{Total actual}}{\text{Overall \%}} = \frac{C}{D} = \frac{600}{0.3} = 2000$$

It can be seen that the difference between 2000 and 1950 is not very great (in fact, only $2\frac{1}{2}\%$) and this tends to be the variation on a project with a large number of activities.

Example 2 Very poor progress due to rework

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>
<i>Activity</i>	<i>Budget hours</i>	<i>Actual hours</i>	<i>% Complete</i>	<i>Value hours B × D</i>	<i>Forecast final hours C/D</i>
1	1000	200	5	50	4000
2	200	100	10	20	4000
3	600	300	40	240	750
<i>Total</i>	<u>1800</u>	<u>600</u>	<u>40</u>	<u>310</u>	<u>8750</u>

The total predicted hours in Example 2 are now a massive 8750 simply because of the abysmal inefficiencies of activities 1 and 2. In this example the overall percentage complete is

$$\frac{E}{B} = \frac{310}{1800} = 17.2\%$$

The approximate final hours are therefore:

$$\frac{C}{D} = \frac{600}{0.172} = 3488$$

This is still a large overrun but it is considerably less than the 8750 produced by adding up the individual forecast final hours. Clearly, such a discrepancy of 5262 hours cannot be tolerated. The answer lies in examining the offending activities 1 and 2 and rewriting them if necessary. For example, if it is found that activities 1 and 2 required rework to such an extent that the original work was completely wasted (or dismantled) and the job had to be started again, it is sensible to rewrite the activities in just such a manner. In other words, all the abortive work is 'written off' and a new assessment of percentage complete is made from the starting point of the rework. A reasonable restatement would therefore be as shown in Example 2A.

Comparing Examples 2 and 2A it will be noted that:

- 1 The total budget hours are the same, i.e. 1800.
- 2 The total actual hours are the same, i.e. 600 (after all, these are the hours actually worked, whether abortive or useful).
- 3 The value hours are the same, i.e. 310.

Example 2A

<i>A</i>	<i>B</i>	<i>C</i>	<i>D</i>	<i>E</i>	<i>F</i>
<i>Activity</i>	<i>Budget hours</i>	<i>Actual hours</i>	<i>% Complete</i>	<i>Value hours $B \times D$</i>	<i>Forecast final hours C/D</i>
1A	0	180	100	0	180
1B	1000	20	5	50	400
2A	0	70	100	0	70
2B	200	30	10	20	300
3	600	300	40	240	750
<i>Total</i>	1800	600		310	1700

(1A or 2A are the works which have been written off)

- 4 The forecast final hours are very different – 8750 in Example 2 and 1700 in Example 2A.

Clearly, there is little virtue in handicapping the final forecast with the gross inefficiency caused by an occasional rework problem, and for this reason the method proposed in Example 2A should be used.

The final forecast obtained by dividing the total actual by the overall percentage complete is still 3488, since the budget hours (1800), actual hours (600) and value hours (310) have not changed. The difference is now on 1788 hours, and may still be unacceptable to the purist. While this difference of over 100% is, on the face of it, untenable, it is in fact less serious in practice because:

- 1 With a large number of activities the law of ‘swings and roundabouts’ applies, and the activities with large variations would tend to cancel each other out.
- 2 The forecast final prediction produced by the summary method is very rapid and quite adequate for control purposes. In many cases it tends to be pessimistic and hence ‘safe’.
- 3 Should the forecast final be required for any individual activity, it can always be carried out rigorously at any time or stage.
- 4 It is far better to *control* the job by comparing actual hours with value hours than placing too much emphasis on forecast final hours. The difference between these two approaches becomes apparent when one remembers that comparing actual hours with value hours is a control function, while comparing forecast final hours with budget hours is a reporting or prediction function.

As stated earlier, two of the criteria of the system were the absolute minimum amount of form filling for reporting progress, and the accurate assessment of percentage complete of specific activities. The first requirement is met by cutting down the reporting items to three essentials.

- 1 The activity numbers of the activities worked on in the reporting period (usually one week).
- 2 The *actual* hours spent on each of these activities, taken from the time cards.
- 3 The assessment of the percentage complete of each reported activity. This is made by the 'man on the spot.'

The third item is the most likely one to be inaccurate, since any estimate is a mixture of fact and opinion. To reduce this risk (and thus comply with the second criterion, i.e. accuracy) the activities on the network have to be chosen and 'sized' to enable them to be estimated, measured or assessed in the field, shop or office by the foreman or supervisor in charge. This is an absolute prerequisite of success, and its importance cannot be over-emphasized.

Individual activities must not be so complex or long (in time) that further breakdown is necessary in the field, nor should they be so small as to cause unnecessary paperwork. For example, the erection of a length of ducting and supports (Figure 27.1) could be split into the activities shown in Figure 27.2 and 27.3.

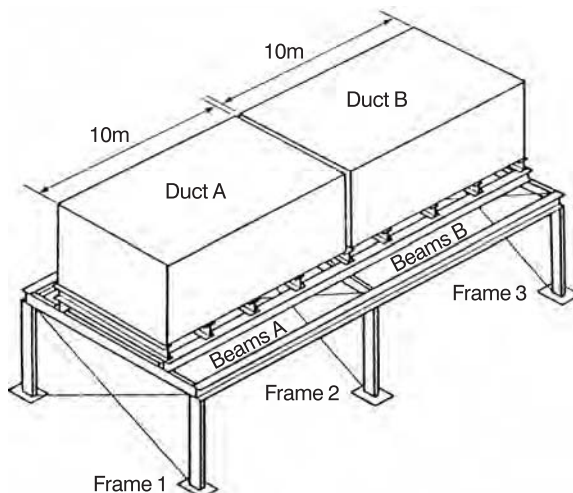


Figure 27.1

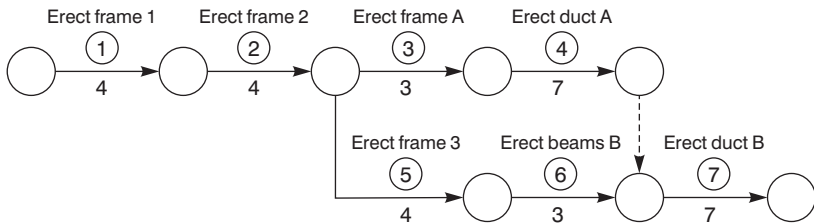


Figure 27.2

Any competent supervisor can see that if the two columns of frame 1 (Activity 1) have been erected and stayed, the activity is about 50% complete. He may be conservative and report 40% or optimistic and report 60%, but this $\pm 20\%$ difference is not important in the light of the total project. When all these individual estimates are summated the discrepancies tend to cancel out. What is important is that the assessment is realistic and checkable. Similarly, if 3 m of the duct between frames 1 and 2 has been erected, it is *about* 30% complete. Again, a margin on each side of this estimate is permissible.

However, if the network were prepared as shown in Figure 27.3 the supervisor may have some difficulty in assessing the percentage complete of activity 1 when he had erected and stayed the columns of frame 1. He now has

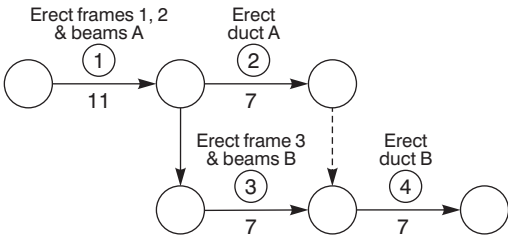


Figure 27.3

to mentally compute the manhours to erect and stay two columns in relation to four columns and four beams. The percentage complete could be between 10% and 30%, with an average of 20%. The $\pm$ percentage difference is now 50%, which is more than double the difference in the first network. It can be seen therefore that the possibility of error and the amount of effort to make an assessment or both is greater.

Had the size of each activity been *reduced* to each column, beam or brace, the clerical effort would have been increased and the whole exercise would have been less viable. It is important therefore to consult the men in the field

or on the shopfloor before drafting the network and fixing the sequence and duration of each activity.

Control graphs

Apart from the numerical report shown in Figure 27.8, two very useful management control graphs can then be produced.

- 1 Showing budget hours, actual hours, value hours and predicted final hours, all against a common time base;
- 2 Showing percentage planned, percentage complete and efficiency, against a similar time base.

The actual shape of the curves on these graphs give the project manager an insight into the running of the job, enabling appropriate action to be taken.

Figure 27.4 shows the site returns of manhours of a small project over a nine-month period, and, for convenience, the table of percentage complete, actual and value hours has been drawn on the same page as the resulting curves. In practice, the greater number of activities would not make such a compressed presentation possible.

A number of interesting points are ascertainable from the curves:

- 1 There was obviously a large increase in site labour between the fifth and sixth months, as is shown by the steep rise of the actual hours curve.
- 2 This has resulted in increased efficiency.
- 3 The learning curve given by the estimated final hours has flattened in month 6 making the prediction both consistent and realistic.
- 4 Month 7 showed a divergence of actual and value hours (indicated also by a loss of efficiency) which was corrected (probably by management action) by month 8.
- 5 It is possible to predict the month of actual completion by projecting all the curves forward. The month of completion is then given:
 - (a) When the value hours curve intersects the budget line; and
 - (b) When the actual hours curve intersects the estimated final hours curve.

In this example, one could safely predict completion of the project in month 10.

It will be appreciated that this system lends itself ideally to computerization, giving the project manager the maximum information with the very minimum of site input. The sensitivity of the system is shown by the immediate change in

efficiency when the value hours diverged from the actual hours in month 7. This alerts management to investigate and apply corrections.

For maximum benefit the returns and calculations should be carried out weekly. By using the normal weekly time cards very little additional site effort is required to complete the returns, and with the aid of a good computer program the results should be available 24 hours after the returns are received.

An example of the application of a manual SMAC analysis is shown in Figures 27.5 to 27.12. The site construction network of a package boiler installation is given in Figure 27.5. Although the project consisted of three boilers, only one network, that of Boiler No. 1 is shown. In this way it was possible to control each boiler construction separately and compare performances. The numbers above the activity description are the activity numbers, while those below are the durations. The reason for using activity numbers for identifying each activity, instead of the more conventional beginning and end event numbers, is that the identifier must always be uniquely associated with the activity description.

If the event numbers (in this case the coordinates of the grid) were used, the identifier could change if the logic were amended or other activities were inserted. In a sense, the activity number is akin to the node number of a precedence diagram which is always associated with its activity. The use of precedence diagrams and computerized SMAC is therefore a natural marriage, and to illustrate this point, a precedence diagram is shown in Figure 27.6.

Once the network has been drawn, the man hours allocated to each activity can be represented graphically on a bar chart. This is shown in Figure 27.7. By adding up the manhours for each week, the totals, cumulative totals and each week's percentage of the total man hours can be calculated. If these percentages are then plotted as a graph the planned percentage complete curve can be drawn. This is shown in Figure 27.10.

All the work described up to this stage can be carried out before work starts on-site. The only other operation necessary before the construction stage is to complete the left-hand side of the site returns analysis sheet. This is shown in Figure 27.8, which covers only periods 4 to 9 of the project. The columns to be completed at this stage are:

- 1 The activity number;
- 2 The activity title;
- 3 The budget hours.

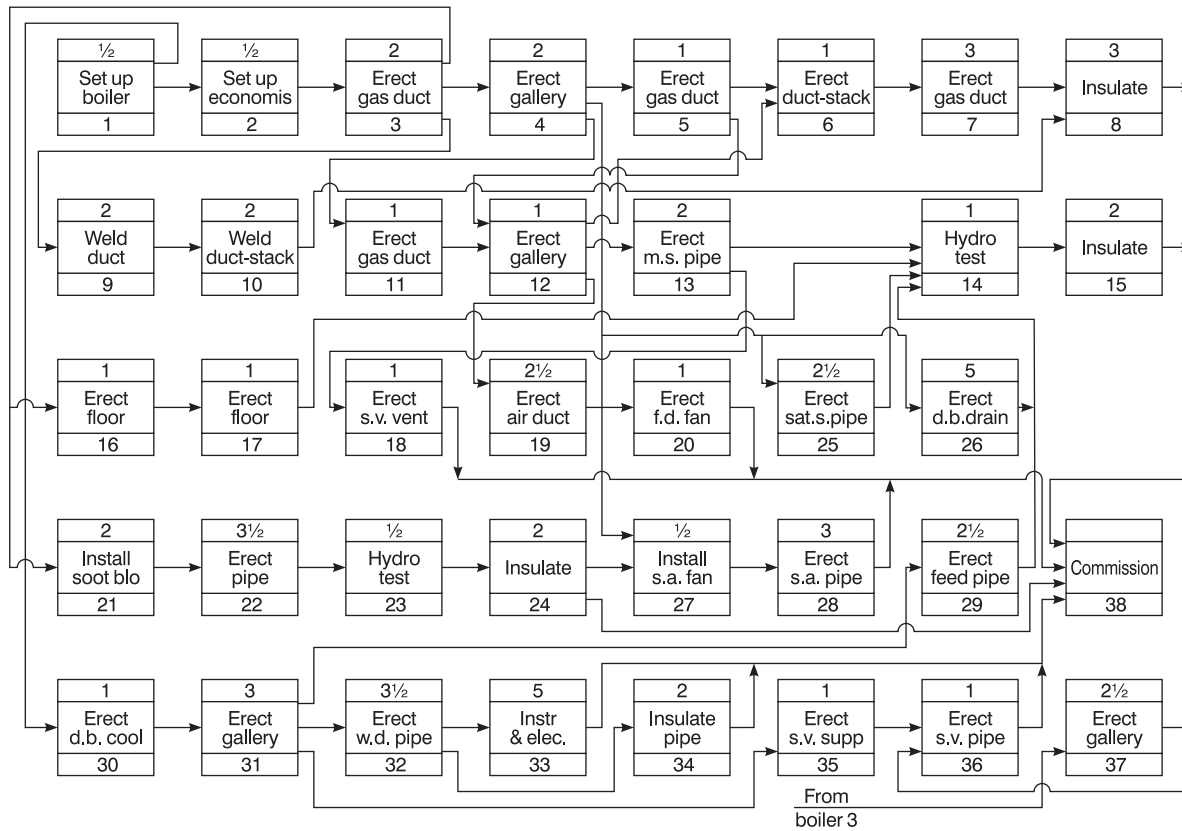


Figure 27.6 Boiler No. 1. Precedence diagram

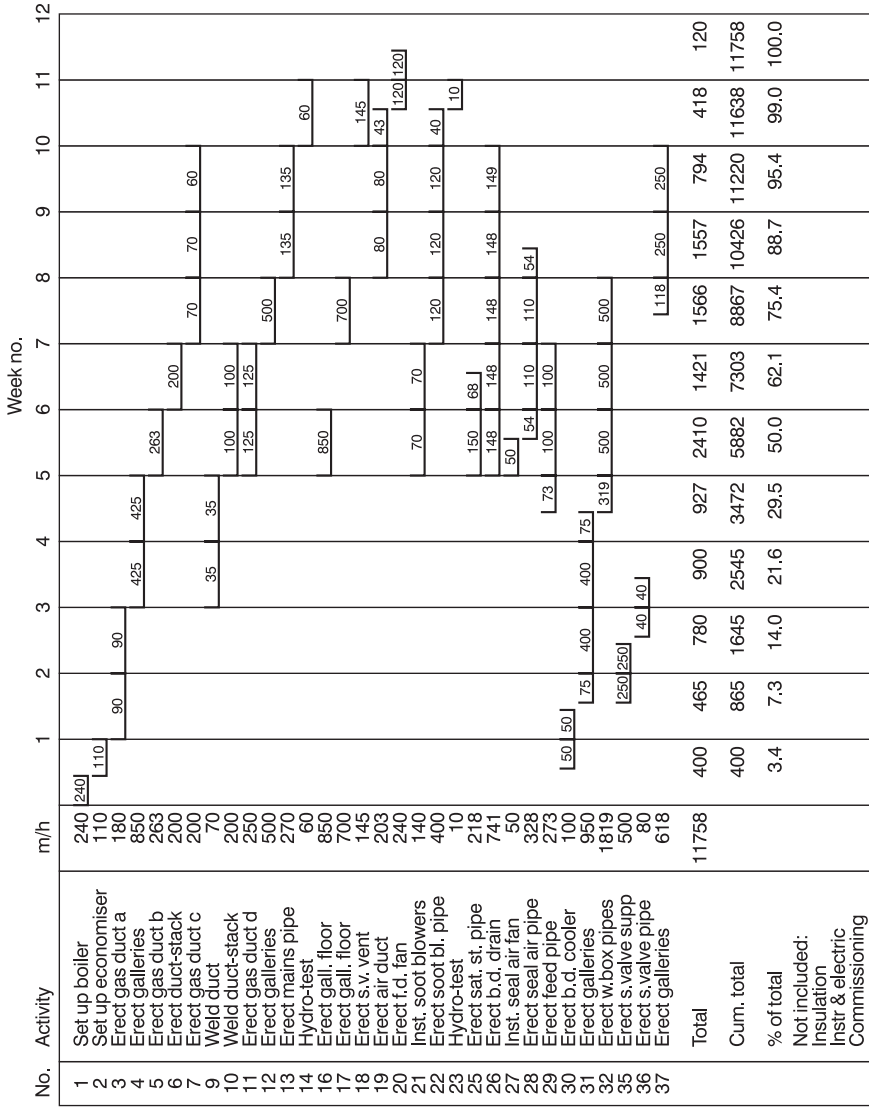


Figure 27.7 Boiler No. 1. Bar chart and manhour loadings

Activity				Period – 4				Period – 5				Period – 6				Period – 7				Period – 8				Period – 9					
No.	Title	Orig	Rev	W	A	%	V	W	A	%	V	W	A	%	V	W	A	%	V	W	A	%	V	W	A	%	V		
1	Set up boiler	240			233	100	240		230	100	240		230	100	240		230	100	240		230	100	240		230	100	240		
2	Set up economiser	110			90	100	110		90	100	110		90	100	110		90	100	110		90	100	110		90	100	110		
3	Erect gas duct a	180			155	100	180		155	100	180		155	100	180		155	100	180		155	100	180		155	100	180		
4	Erect galleries	850		352	352	60	510	389	741	80	450	69	810	100	850		810	100	850		810	100	850		810	100	850		
5	Erect gas duct b	263										200	200	60	158	55	255	100	263		255	100	263		255	100	263		
6	Erect duct-stack	200																		180	180	80	160	5	185	100	200		
7	Erect gas duct c	200																		62	62	30	60	88	150	75	150		
9	Weld duct	70		32	32	50	35	33	65	100	70		65	100	70		65	100	70		65	100	70		65	100	70		
10	Weld duct-stack	200																		110	110	60	120	70	180	100	200		
11	Erect gas duct d	250										42	92	60	150	18	70	80	200	5	175	100	250		175	100	250		
12	Erect galleries	500																		405	405	95	475	5	410	100	500		
13	Erect mains pipe	270																						105	105	40	108		
14	Hydro-test	60		–																									–
16	Erect gall. floor	850										420	420	60	510	360	780	90	765	5	785	100	850		785	100	850		
17	Erect gall. floor	700																		340	340	45	315	310	650	100	700		
18	Erect s.v. vent	145		–																									–
19	Erect air duct	203																						75	75	30	81		–
20	Erect f.d. fan	240		–																									–
21	Inst. soot blowers	140										65	65	55	77	65	130	95	133	5	135	100	140		135	100	140		
22	Erect soot bl. pipe	400																		100	100	20	80	110	210	40	160		
23	Hydro-test	10		–																									–
25	Erect sat. st. pipe	218										125	125	60	131	85	210	100	218		210	100	218		210	100	218		
26	Erect b.d. drain	741										130	130	20	148	132	212	45	333	136	398	60	445	122	520	80	593		
27	Inst. seal air fan	50														40	40	100	50		40	100	50		40	100	50		
28	Erect seal air pipe	328										45	45	20	66	37	82	40	131	128	210	85	279	10	220	90	293		
29	Erect feed pipe	273						52	52	25	68	93	145	60	164	100	245	100	273		245	100	273		245	100	273		
30	Erect b.d. cooler	100			105	100	100		105	100	100		105	100	100		105	100	100		105	100	100		105	100	100		
31	Erect galleries	950		390	810	75	713	30	240	80	760	25	865	100	950		865	100	950		865	100	950		865	100	950		
32	Erect w.box pipes	1819						300	300	20	364	460	760	30	546	445	1205	65	1182	405	1610	80	1455	340	1950	100	1819		
35	Erect s.valve supp	500			440	100	500		460	100	500		460	100	500		460	100	500		460	100	500		460	100	500		
36	Erect s.valve pipe	80		40	80	100	80		80	100	80		80	100	80		80	100	80		80	100	80		80	100	80		
37	Erect galleries	618																						120	120	30	185		
							106%				101%				104%				106%				105%					106%	
							11019				11548				11260				1141				1277					1095	
	Totals:-	11758		814	2314	21	2468	804	3118		3152	1724	4842	43	5030	1397	6239	56	6628	1881	8120	72	8513	1360	9480	86	10095		
Legend		A – Actual accumulated manhours used to end of period _____																											
		% – Estimate of percentage completion of activity _____																											
		V – Value hours = budget x percentage completion _____																											
		W – Hours worked this period _____																											

Figure 27.8

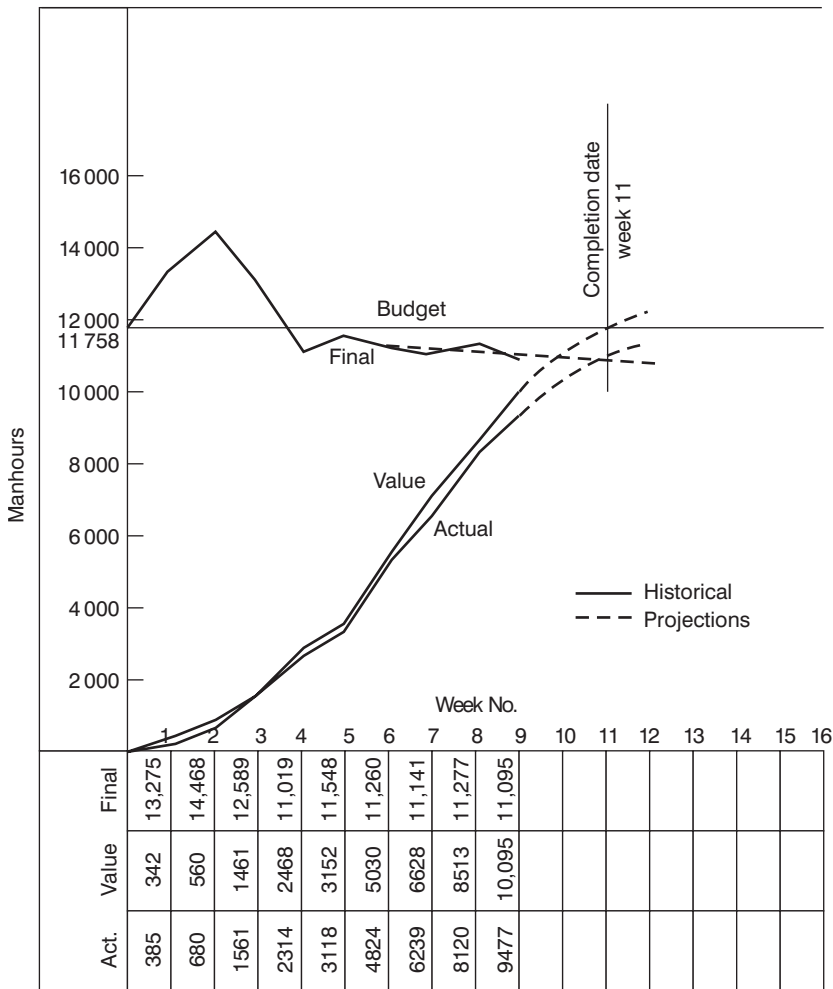


Figure 27.9 Boiler No. 1. Manhour – time curves

Once work has started on-site, the construction manager reports weekly on the progress of each activity worked on during that week. All he has to state is:

- 1 The activity number;
- 2 The actual hours expended *in that week*;
- 3 The percentage complete of that activity to date.

If the computation is carried out manually, the figures are entered on the sheet (Figure 27.8) and the following values calculated weekly:

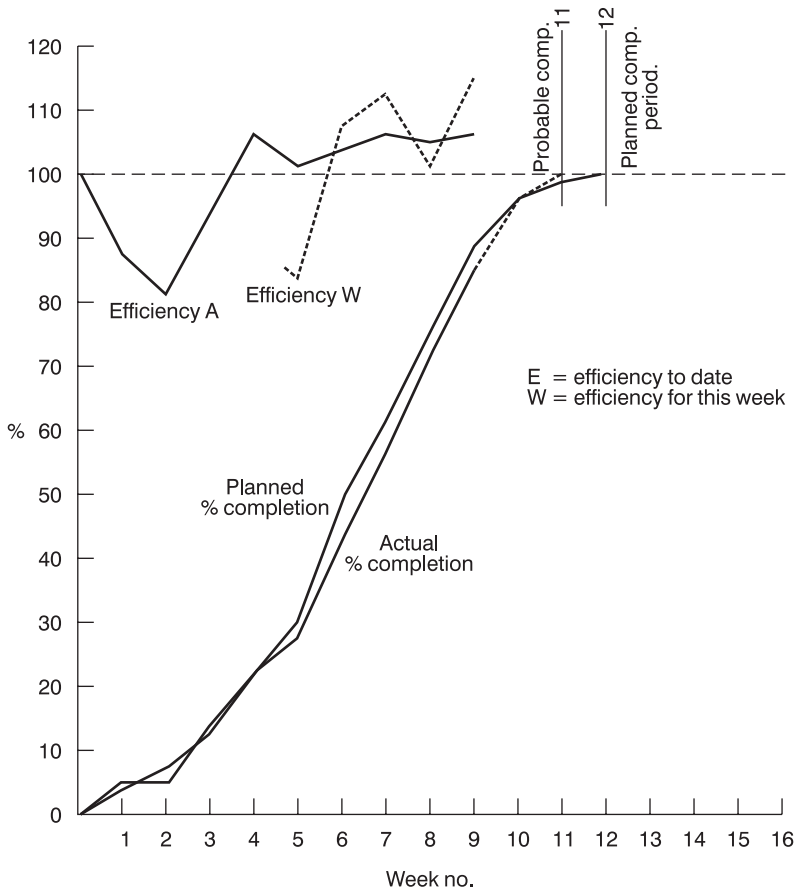


Figure 27.10 Boiler No. 1. Percentage – time curves

- 1 Total manhours expended this week (W column);
- 2 Total manhours to date (A column);
- 3 Percentage complete of project (% column);
- 4 Total value hours to date (V column);
- 5 Efficiency;
- 6 Estimated final hours;

Alternatively, the site returns can be processed by computer and the resulting printout of part of a project is shown in Figure 27.11. Whether the information is collected manually or electronically, the return can be made on a standard timesheet with the only addition being a % complete column. In other words, no additional forms are required to collect information for EVA. There are in fact only three items of data to be returned to give sufficient information:

- 1 The activity number of the activity actually being worked on in that time period;
- 2 The actual hours being expended on each activity worked on in that time period;
- 3 The cumulative % complete of each of these activities.

All the other information required for computation and reporting (such as activity titles and activity manhour budgets) will already have been inputted and is stored in the computer.

A typical modified timesheet is shown in Figure 27.12

A complete set of printouts produced by a modern project management system are shown in Figures 27.13–27.17. It will be noted that the network in precedence format has been produced by the computer, as have the bar chart and curves. In this program the numerical SMAC analysis has been combined with the normal critical path analysis from one database, so that both outputs can be printed and updated at the same time on one sheet of paper. The common database for the CPM & Earned Value (or value hour) analysis is, of course, also used on the more sophisticated Hornet program described in Chapters 17 and 30. The reason the totals of the forecast hours are different from the manual analysis is that the computer calculates the forecast hours for each activity and then adds them up, while in the manual system the total forecast hours are obtained by simply dividing the actual hours by the percentage complete rounded off to the nearest 1%.

As mentioned earlier, if the budget hours, actual hours, value hours and estimated final hours are plotted as curves on the same graph, their shape and relative positions can be extremely revealing in terms of profitability and progress. For example, it can be seen from Figure 27.9 that the contract was potentially running at a loss during the first three weeks, since the value hours were less than the actual hours. Once the two curves crossed, profitability returned and in fact increased, as indicated by the diverging nature of the value and actual hour curves. This trend is also reflected by the final hours curve dipping below the budget hour line.

The percentage-time curves in Figure 27.10 enable the project manager to compare actual percentage complete with planned percentage complete. This is a better measure of performance than comparing actual hours expended with planned hours expended. There is no virtue in spending the manhours in accordance with a planned rate. What is important is the percentage complete in relation to the plan and whether the hours spent were *useful* hours. Indeed, there should be every incentive to spend *less* hours than planned, provided that

Site manhours and costing system

Contract No. 2-322-04298
Construction at Suamprogetti

Standard report
Manhours report

Events prec succ	Description	No off unit 0-rate	Hrs/ unit C-rate	Budgets original/ current	Period this accum.	% com	Cimp. value	Est. to compl.	Firecast last rep total	Var. from last rep total	Extra	Remarks
0001-0001-01	Setup boiler	BLR 1	240.00	240.00 240.00	0.00 55.00	100	240	0	55 55	0 185		
	Setup boiler											
	Setup econ											
0001-0002-01	Setup economiser	ECON 1	110.00	110.00 110.00	0.00 52.00	100	110	0	52 52	0 58		
	Erect ducts											
0001-0003-01	Erect ducts blr/econ	DUCT 1	180.00	180.00 180.00	0.00 257.00	100	180	0	257 257	0 -77		
	Erect b/d cooler											
0001-0004-01	Erect b/d cooler	VESSL 1	100.00	100.00 100.00	0.00 128.00	100	100	0	128 128	0 -28		
	Erect galleries											
0001-0005-01	Erect Galls for blr	GALLS 1	850.00	850.00 850.00	0.00 651.00	850	850	0	651 651	0 199		
	Erect duct											
0001-0006-01	Erect duct chimney	DUCT 1	250.00	250.00 250.00	0.00 169.00	98	245	3	172 172	0 78		
	Dampers											
	Erect galleries											

Figure 27.11

WEEKLY TIMESHEET

Name

Staff no.

Week ending

Project no.	Activity/ document no.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.	Sun.	Total	% complete	Remarks

Signed

Date

Approved

Date

Figure 27.12

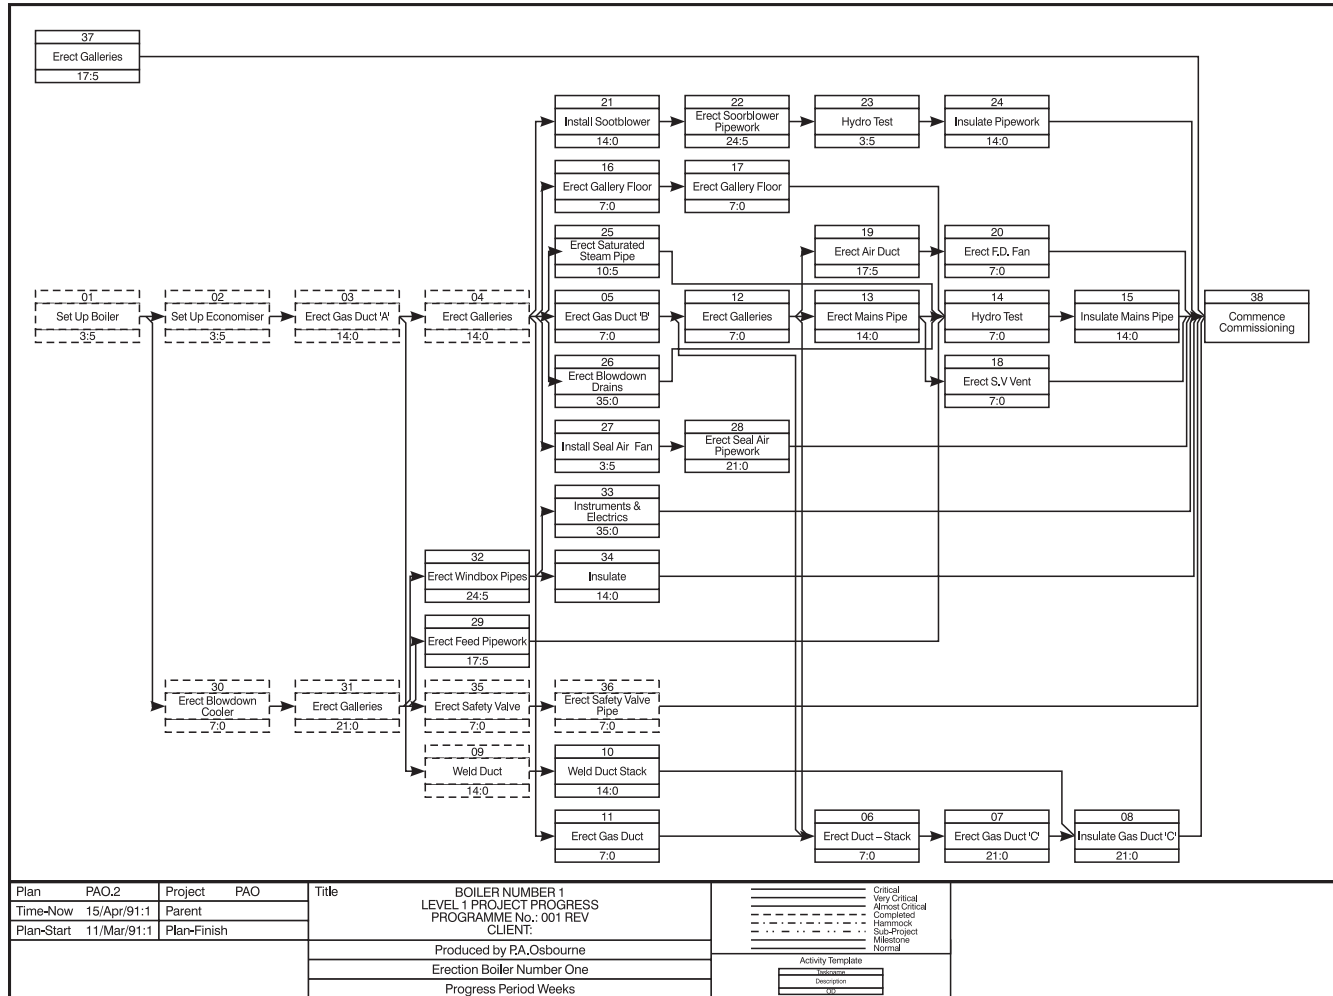


Figure 27.13

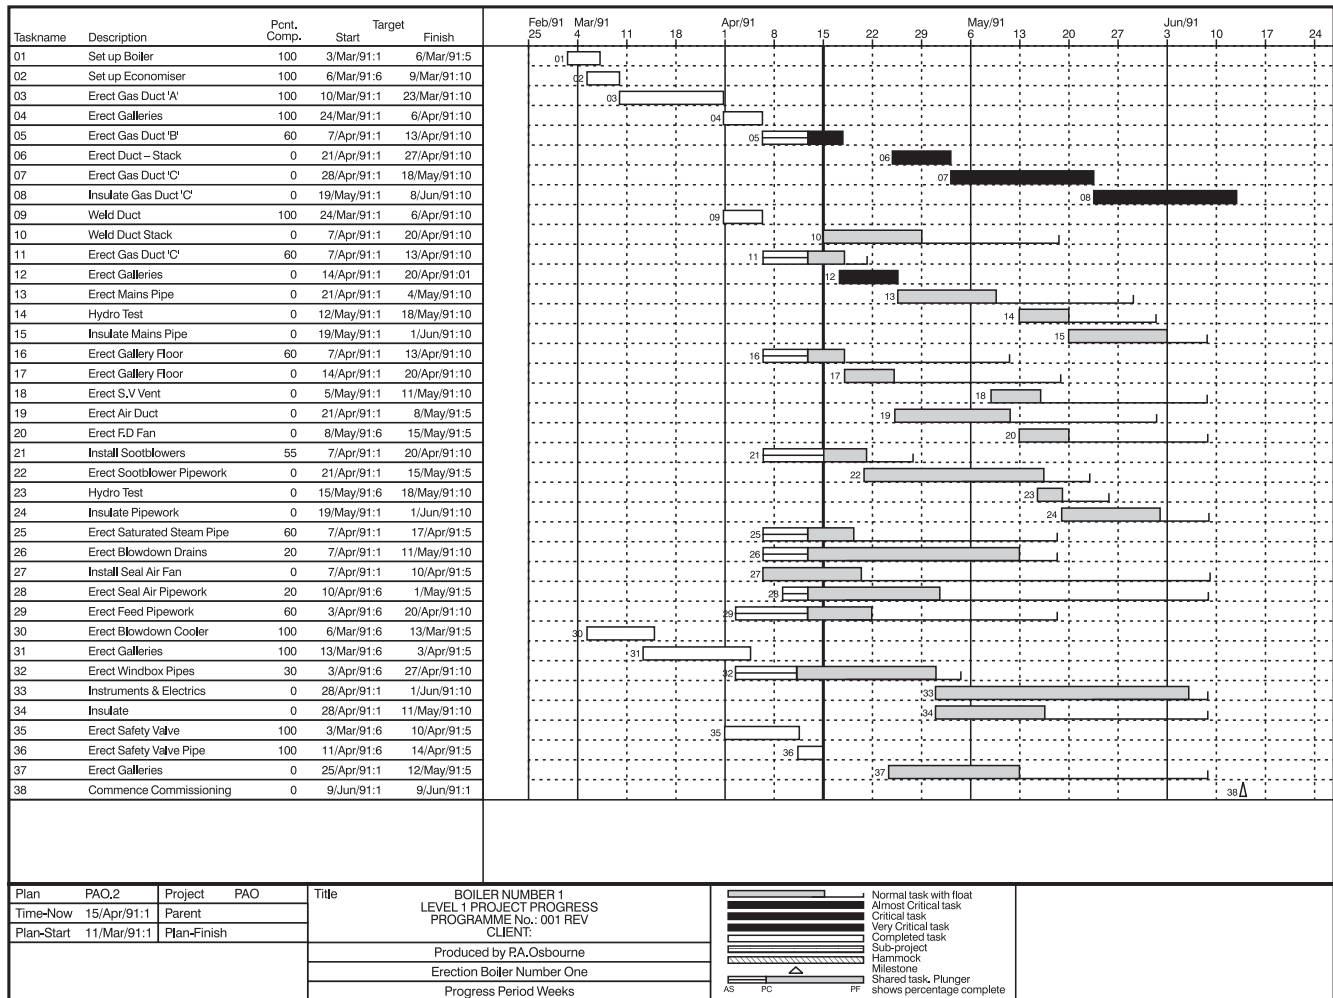


Figure 27.14

Activity Number	Description	Planned to date	Budget hours	Actual hours	% Complete	Value hours	Estimate comp	Forecast hours	Variance +/-	EFF 1	Orig sumt	Rem durth	Early start	Early Finish	Late start	Late finish	Target start	Target finish	Actual start	Actual finish	Float remain	Programme status against target	Action required
01	Set up boiler	240	240	230	100%	240	0	230	10	104	3.5	0.0	3/MAR/91	6/MAR/91	3/MAR/91	6/MAR/91	3/MAR/91	6/MAR/91	3/MAR/91	6/MAR/91	0.0	1 day (s) slippage	Complete
02	Set up economiser	110	110	90	100%	110	0	90	20	122	3.5	0.0	6/MAR/91	9/MAR/91	6/MAR/91	9/MAR/91	6/MAR/91	9/MAR/91	6/MAR/91	9/MAR/91	0.0	On target	Complete
03	Erect gas duct 'A'	180	180	155	100%	180	0	155	25	116	14.0	0.0	10/MAR/91	23/MAR/91	10/MAR/91	23/MAR/91	10/MAR/91	23/MAR/91	10/MAR/91	23/MAR/91	0.0	On target	Complete
04	Erect galleries	850	850	810	100%	850	0	810	40	105	14.0	0.0	24/MAR/91	6/APR/91	24/MAR/91	6/APR/91	24/MAR/91	6/APR/91	24/MAR/91	6/APR/91	0.0	On target	Complete
05	Erect gas duct 'B'	263	263	200	60%	158	133	133	-70	79	7.0	2.8	7/APR/91	17/APR/91	7/APR/91	13/APR/91	7/APR/91	13/APR/91	7/APR/91	/ /	-3.8	4 day (s) slippage	Yes
06	Erect duct - stack	0	200	0	0%	0	200	200	0	0	7.0	7.0	24/APR/91	1/MAY/91	21/APR/91	27/APR/91	21/APR/91	27/APR/91	/ /	/ /	3.8	4 day (s) slippage	Yes
07	Erect gas duct 'C'	0	200	0	0%	0	200	200	0	0	21.0	21.0	1/MAY/91	22/MAY/91	28/APR/91	18/MAY/91	28/APR/91	18/MAY/91	/ /	/ /	3.8	4 day (s) slippage	Yes
08	Insulator gas duct 'C'	0	0	0	0%	0	0	0	0	0	21.0	21.0	22/JUN/91	12/JUN/91	19/MAY/91	8/JUN/91	19/MAY/91	8/JUN/91	/ /	/ /	3.8	4 day (s) slippage	Yes
09	Weld duct	70	70	65	100%	70	0	65	5	108	14.0	0.0	24/MAY/91	6/APR/91	24/MAR/91	6/APR/91	24/MAR/91	6/APR/91	24/MAR/91	6/APR/91	0.0	On target	Complete
10	Weld duct stack	108	200	0	0%	0	200	200	0	0	14.0	14.0	15/APR/91	28/APR/91	5/MAY/91	18/MAY/91	7/APR/91	20/APR/91	/ /	/ /	20.0	8 day (s) slippage	
11	Erect gas duct 'C'	125	250	92	60%	150	61	153	97	163	7.0	2.8	7/APR/91	17/APR/91	7/APR/91	20/APR/91	7/APR/91	13/APR/91	7/APR/91	/ /	3.2	4 day (s) slippage	
12	Erect galleries	0	500	0	0%	0	500	500	0	0	7.0	7.0	17/APR/91	24/APR/91	14/APR/91	20/APR/91	14/APR/91	20/APR/91	/ /	/ /	-3.8	4 day (s) slippage	Yes
13	Erect mains pipe	0	270	0	0%	0	270	270	0	0	14.0	14.0	24/APR/91	8/MAY/91	5/MAY/91	18/MAY/91	21/APR/91	4/MAY/91	/ /	/ /	10.2	4 day (s) slippage	
14	Hydro test	0	60	0	0%	0	60	60	0	0	7.0	7.0	13/MAY/91	19/MAY/91	19/MAY/91	25/MAY/91	12/MAY/91	18/MAY/91	/ /	/ /	6.0	1 day (s) slippage	
15	Insulate mains pipe	0	0	0	0%	0	0	0	0	0	14.0	14.0	20/MAY/91	2/JUN/91	26/MAY/91	8/JUN/91	19/MAY/91	1/JUN/91	/ /	/ /	6.0	1 day (s) slippage	Complete
16	Erect galley floor	850	850	420	60%	510	280	700	150	121	7.0	2.8	7/APR/91	17/APR/91	7/APR/91	11/MAY/91	7/APR/91	13/APR/91	7/APR/91	/ /	24.2	4 day (s) slippage	Complete
17	Erect galley floor	0	700	0	0%	0	700	700	0	0	7.0	7.0	17/APR/91	24/APR/91	12/MAY/91	18/MAY/91	14/APR/91	20/APR/91	/ /	/ /	24.2	4 day (s) slippage	
18	Erect S.V. vent	0	145	0	0%	0	145	145	0	0	7.0	7.0	8/MAY/91	15/MAY/91	2/JUN/91	8/JUN/91	5/MAY/91	11/MAY/91	/ /	/ /	24.2	4 day (s) slippage	
19	Erect air duct	0	203	0	0%	0	203	203	0	0	17.5	17.5	24/APR/91	12/MAY/91	15/MAY/91	1/JUN/91	21/APR/91	8/MAY/91	/ /	/ /	20.7	4 day (s) slippage	
20	Erect F.D. fan	0	240	0	0%	0	240	240	0	0	7.0	7.0	12/MAY/91	19/MAY/91	2/JUN/91	8/JUL/91	8/MAY/91	15/MAY/91	/ /	/ /	20.7	4 day (s) slippage	
21	Install sootblowers	70	140	65	55%	77	53	118	22	118	14.0	6.3	7/APR/91	21/APR/91	7/APR/91	27/APR/91	7/APR/91	20/APR/91	7/APR/91	/ /	6.7	0 day (s) slippage	
22	Erect sootblower pipework	0	400	0	0%	0	400	400	0	0	24.5	24.5	21/APR/91	15/MAY/91	28/APR/91	22/MAY/91	21/APR/91	15/MAY/91	/ /	/ /	6.7	0 day (s) slippage	
23	Hydro test	0	10	0	0%	0	10	10	0	0	3.5	3.5	15/MAY/91	19/MAY/91	22/MAY/91	25/MAY/91	15/MAY/91	18/MAY/91	/ /	/ /	6.7	0 day (s) slippage	
24	Insulate pipework	0	0	0	0%	0	0	0	0	0	14.0	14.0	19/MAY/91	2/JUN/91	26/MAY/91	8/JUN/91	19/MAY/91	1/JUN/91	/ /	/ /	6.7	0 day (s) slippage	
25	Erect saturated steam pipe	150	218	125	60%	131	83	208	10	105	10.5	4.2	7/APR/91	19/APR/91	7/APR/91	18/MAY/91	7/APR/91	17/APR/91	7/APR/91	/ /	29.8	2 day (s) slippage	
26	Erect blowdown drains	148	741	130	20%	148	520	650	91	114	35.0	28.0	7/APR/91	12/MAY/91	7/APR/91	18/MAY/91	7/APR/91	11/MAY/91	/ /	/ /	6.0	1 day (s) slippage	
27	Install seal air fan	50	50	0	0%	0	50	50	0	0	3.5	3.5	7/APR/91	18/APR/91	7/APR/91	8/JUN/91	7/APR/91	10/APR/91	7/APR/91	/ /	51.5	8 day (s) slippage	
28	Erect seal air pipework	54	328	45	20%	66	180	225	103	146	21.0	16.8	10/APR/91	1/MAY/91	10/APR/91	8/JUN/91	10/APR/91	1/MAY/91	10/APR/91	/ /	38.2	0 day (s) slippage	
29	Erect feed pipework	173	273	145	60%	164	97	242	31	113	17.5	7.0	3/APR/91	21/APR/91	3/APR/91	18/MAY/91	3/APR/91	20/APR/91	3/APR/91	/ /	27.0	1 day (s) slippage	
30	Erect blowdown cooler	100	100	105	100%	100	0	105	-5	95	7.0	0.0	6/MAR/91	13/MAR/91	6/APR/91	13/MAR/91	6/MAR/91	13/MAR/91	6/MAR/91	13/MAR/91	0.0	1 day (s) slippage	Complete
31	Erect galleries	950	950	865	100%	950	0	865	85	110	21.0	0.0	13/MAR/91	3/APR/91	13/MAR/91	3/APR/91	13/MAR/91	3/APR/91	13/MAR/91	3/APR/91	0.0	1 day (s) slippage	Complete
32	Erect window pipes	819	1819	760	30%	546	1773	2533	-714	72	24.5	17.2	3/APR/91	2/MAY/91	3/APR/91	4/MAY/91	3/APR/91	27/APR/91	3/APR/91	/ /	2.8	1 day (s) slippage	
33	Instruments & electrics	0	0	0	0%	0	0	0	0	0	35.0	35.0	2/MAY/91	6/JUN/91	5/MAY/91	8/JUN/91	28/APR/91	1/JUN/91	/ /	/ /	2.8	4 day (s) slippage	
34	Insulate	0	0	0	0%	0	0	0	0	0	14.0	14.0	2/MAY/91	16/MAY/91	26/MAY/91	8/JUN/91	28/APR/91	11/MAY/91	/ /	/ /	23.8	4 day (s) slippage	
35	Erect safety valve	500	500	460	100%	500	0	460	40	109	7.0	0.0	3/APR/91	10/APR/91	3/APR/91	10/APR/91	3/APR/91	10/APR/91	3/APR/91	10/APR/91	0.0	1 day (s) slippage	Complete
36	Erect safety valve pipe	80	80	80	100%	80	0	80	0	100	7.0	0.0	11/APR/91	14/APR/91	11/APR/91	14/APR/91	11/APR/91	14/APR/91	11/APR/91	14/APR/91	0.0	1 day (s) slippage	Complete
37	Erect galleries	0	618	0	0%	0	618	618	0	0	17.5	17.5	25/APR/91	12/MAY/91	22/MAY/91	8/JUN/91	25/APR/91	12/MAY/91	/ /	/ /	27.5	On target	
38	Commence commissioning	0	0	0	0%	0	0	0	0	0	0.0	0.0	12/JUN/91	12/JUN/91	9/JUN/91	9/JUN/91	9/JUN/91	9/JUN/91	/ /	/ /	-3.8	4 day (s) slippage	Yes
Total		5882	11758	4842	43%	5029	6977	11819	-61	104													

Figure 27.15

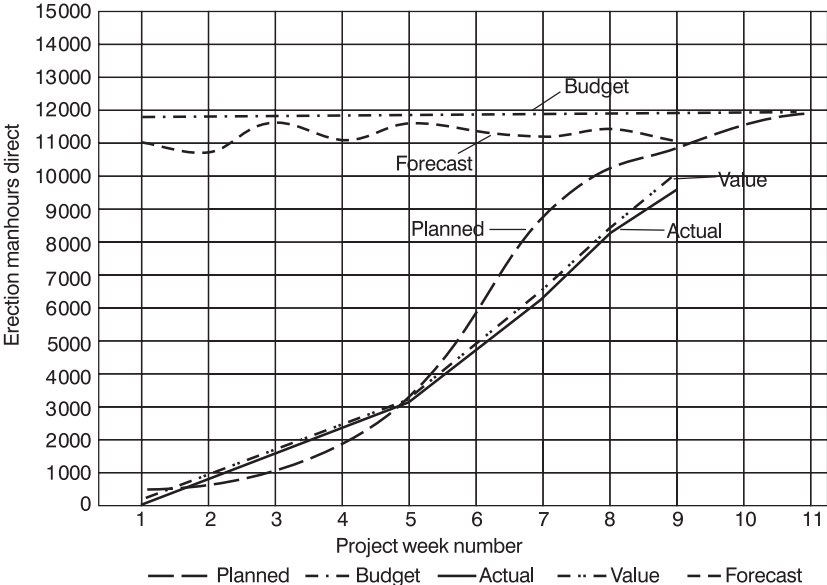


Figure 27.16 Boiler No. 1. Erection manhours

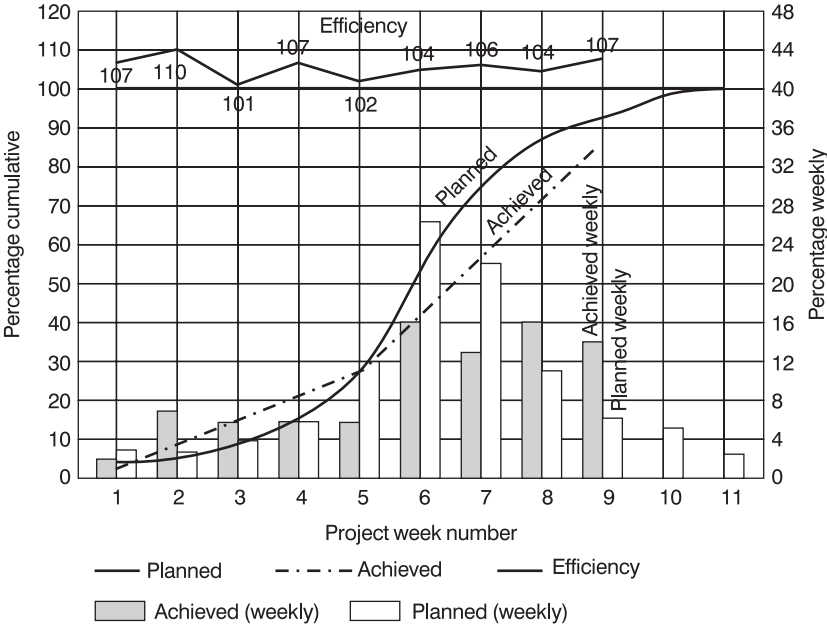


Figure 27.17 Boiler No. 1. Percentage complete and efficiency

the *value* hours are equal or greater than the actual, and the percentage complete is equal or greater than the planned.

The efficiency curve in Figure 27.10 is useful, since any drop is a signal for management action. Curve 'A' is based on the efficiency calculated by dividing the cumulative value hours by the cumulative actual hours for every week. Curve W is the efficiency by dividing the value hours generated in a particular week by the actual hours expended in that week. It can be seen that Curve 'W' (shown only for the periods 5 to 9) is more sensitive to change and is therefore a more dramatic warning device to management.

Finally, by comparing the curves in Figures 27.9 and 27.10 the following conclusions can be drawn:

- 1 *Value hours exceed actual hours* (Figure 27.9). This indicates that the site is efficiently run.
- 2 *Final hours are less than budget hours* (Figure 27.9). This implies that the contract will make a profit.
- 3 *The efficiency is over 100% and rising* (Figure 27.10). This bears out conclusion 1.
- 4 *The actual percentage complete curve* (Figure 27.10), although less than the planned, has for the last four periods been increasing at a greater rate than the planned (i.e. the line is at a steeper angle). Hence the job may well finish *earlier* than planned (probably in Week 11).
- 5 By projecting value hour curve forward to meet the budget hour line, it crosses in Week 11 (Figure 27.9).
- 6 By projecting the actual hour curve to meet the projection of the final hour curve, it intersects in Week 11 (Figure 27.9). Hence Week 11 is the probable completion date.

The computer printout shown in Figure 27.11 is updated weekly by adding the manhours logged against individual activities. However, it is possible to show on the same report the *cost* of both the historical and current manhours. This is achieved by feeding the average manhour rate for the contract into the machine at the beginning of the job and updating it when the rate changes. Hence the new hours will be multiplied by the current rates. A separate report can also be issued to cover the indirect hours such as supervision, inspection, inclement weather, general services etc.

Since the value hour concept is so important in assessing the labour content of a site or works operation, the following summary showing the computation in non-numerical terms may be of help:

A = Actual hours expended (total)	F = Final anticipated hours
B = Budget hours (total)	L = Manhour loss (or gain)
C = Hours to complete	P = Percentage complete
E = Efficiency	V = Value hours (total)

Then $V = \Sigma$ of all value hours = Σ (Budget $\times$ percentage complete of individual activity)

$$E = \frac{V}{A} \times 100\% \qquad F = \frac{A}{V} \times \frac{B}{100} = \frac{A}{P}$$

$$P = \frac{V}{B} \times 100\% \qquad C = F - A$$

$$L = A - V$$

Overall project completion

Once the manhours have been 'costed' they can be added to other cost reports of plant, equipment, materials, subcontracts, etc., so that an overall percentage completion of a project can be calculated for valuation purposes on the only true common denominator of a project – money.

The total *value* to date divided by the revised budget $\times 100$ is the percentage complete of a job. The value hour concept is entirely compatible with the conventional valuation of costing such as value of concrete poured, value of goods installed, cost of plant utilized – activities which can, by themselves, be represented on networks at the planning stage.

Table 27.3 shows how the two main streams of operations, i.e. those categories measured by cost and those measured by manhours, can be combined to give an overall picture of the percentage completion in terms of cost and overall cost of a project. While the operations shown relate to a construction project, a similar table can be drawn for a manufacturing process, covering such operations as design, tooling, raw material purchase, machinery, assembly, testing, packing, etc.

Cost of overheads, plant amortization, licences, etc. can, of course, be added like any other commodity. An example giving quantities and cost values of a small job involving all the categories shown in Table 27.3 is presented in Tables 27.4–27.6. It can be seen that in order to enable an overall percentage complete to be calculated, all the quantities of the estimate (Table 27.4) have been multiplied by their respective rates – as in fact would be done as part of any budget – to give the estimated costs.

Table 27.3

<i>Basic method of measurement</i> <i>Method of measurement</i> <i>Category</i>	<i>Cost (money)</i>			<i>Manhours</i>
	<i>Bills of quantities</i> <i>A</i>	<i>Lump sum</i> <i>B</i>	<i>Rates</i> <i>C</i>	<i>Rate/hour</i> <i>D</i>
Type of activity	Earth moving Civil work Painting Insulation Piping supply	Tanks Equipment (compressors, pumps, towers, etc.)	Mechanical plant Cranes Scaffolding Transport	Erection of: piping electrical work instrumentation machinery steelwork testing commissioning
Base for comparison of progress	Total of bills of quantities	Total of equipment items	Plant estimate	Manhour budget
Periodic valuation	Measured quantities	Cost of items delivered	Cost of plant on-site	Value hours = % complete × budget
Method of assessment	Field measurement	Equipment count	Plant count	Physical % complete
Percentage complete for reporting	Measured quantities × rates Total in bill of quantities	Delivered cost Total equipment cost	Cost of plant on-site Plant estimate	Value hours Manhour budget
Total cost = measured quantity × rates + cost of items delivered + cost of plant on-site + actual hours × rate				
Total site percentage complete = $\frac{100 (\text{cost of A} + \text{cost of B} + \text{adjusted cost of C} + \text{value hours of D} \times \text{average rate})}{\text{Total budget}}$				

Table 27.4 Example showing effect of percentage completion of different categories

<i>Estimate Category</i>	<i>Item</i>	<i>Unit</i>	<i>Quantity</i>	<i>Rate</i>	<i>Cost £</i>
A	Concrete	M ³	1 000	25	25 000
	Pipe 6-inch	M	2 000	3	6 000
	Painting	M ²	2 500	10	25 000
					<u>56 000</u>
B	Tanks	No	3	20 000	60 000
	Pumps	No	1	8 000	8 000
	Pumps	No	1	14 000	14 000
					<u>82 000</u>
C	Cranes (hire)	Hours	200	60	12 600
	Welding plant	Hours	400	15	6 000
					<u>18 000</u>
D	Pipe fitters	Hours	4 000	4} Av.	16 000
	Welders	Hours	6 000	5} 4.6	30 000
			<u>10 000</u>		<u>46 000</u>

Table 27.5 Progress after 16 weeks

<i>Category</i>	<i>Item</i>	<i>Unit</i>	<i>Quantity</i>	<i>Rate</i>	<i>Cost £</i>
A	Concrete poured	M ³	900	25	22 500
	Pipe 6-inch supplied	M	1 000	3	3 000
	Painting	M ²	500	10	5 000
					<u>30 500</u>
	% complete: $\frac{30\,500}{56\,000} \times 100 = 54.46\%$				
B	Tanks	No	2	20 000	40 000
	Delivered				
	Pumps A	No	1	8 000	8 000
	Pumps B	No	1	—	—
					<u>48 000</u>
	% complete: $\frac{48\,000}{82\,000} \times 100 = 58.53\%$				

Table 27.6

<i>Category</i>	<i>Item</i>	<i>Unit</i>	<i>Quantity</i>	<i>Rate</i>	<i>Cost £</i>
C	Cranes on-site	Hours	150	60	9 000
	Welding plant	Hours	200	15	<u>3 000</u>
					12 000
	% complete: $\frac{12000}{18000} \times 100 = 66.66$				
D	Pipe fitters	Hours	1800	4	7 200
	Welders	Hours	2 700	5	<u>13 500</u>
					20 700
<i>Erection work</i>	<i>Budget M/H</i>	<i>Percentage complete</i>	<i>Value hours</i>	<i>Actual hours</i>	
Pipeline A	3 800	35	1 330	1 550	
Pipeline B	2 800	45	1 260	1 420	
Pump connection	1 800	15	270	220	
Tank connection	<u>1 600</u>	20	<u>320</u>	<u>310</u>	
	10 000		3 180	3 500	
	% complete: $\frac{3180}{10000} \times 100 = 31.80$				
	cost value (Av.) = $3180 \times 4.6 = \text{£}14\,628$				

Table 27.5 shows the progress after a 16-week period, but in order to obtain the value hours (and hence the cost value) of Category D it was necessary to break down the manhours into work packages which could be assessed for percentage completion. Thus, in Table 27.6, the pipelines A and B were assessed as 35% and 45% complete, respectively, and the pump and tank connections were found to be 15% and 20% complete, respectively. Once the value hours (3180) were found, they could be multiplied by the average cost per man hour to give a cost value of £14 628.

Table 27.7 shows the summary of the four categories. An adjustment should therefore also be made to the value of plant utilization Category C since the two are closely related. The adjusted value total would therefore be as shown in Column V.

Table 27.7 Total cost to date

<i>I</i> Category	<i>II</i> <i>Budget</i>	<i>III</i> <i>Cost</i>	<i>IV</i> <i>Value</i>	<i>V</i> <i>Adjusted value</i>
A	56 000	30 500	30 500	30 500
B	82 000	48 500	48 000	48 000
C	18 000	12 000	12 000	10 920
D	46 000	20 700	14 628	14 628
<i>Total</i>	£202 000	£111 200	£105 128	£104 048

With a true value of expenditure to date of £104 048, the percentage completion in terms of cost of the whole site is therefore:

$$\frac{104\,048}{202\,000} \times 100 = 51.5$$


It must be stressed that the % of cost completed is not the same as the % completion of construction work. It is only a valuation method when the material and equipment are valued (and paid for) in their month of arrival or installation.

When the materials or equipment are paid for as they arrive on site (possibly a month before they are actually erected), or when they are supplied ‘free issue’ by the employer, they must not be part of the value or % complete calculation.

It is clearly unrealistic to include materials and equipment in the % complete and efficiency calculation as the cost of equipment is not proportional to the cost of installation. For example, a carbon steel tank takes the same time to lift onto its foundations as a stainless steel tank, yet the cost is very different! Indeed, in some instances, an expensive item of equipment may be quicker and cheaper to install than an equivalent cheaper item, simply because the expensive item may be more ‘complete’ when it arrives on site.

All the items in the calculations can be stored, updated and processed by computer, so there is no reason why an accurate, up-to-date and regular progress report cannot be produced on a weekly basis, where the action takes place – on the site or in the workshop.

Clearly, with such information at one’s fingertips, costs can truly be controlled – not merely reported!

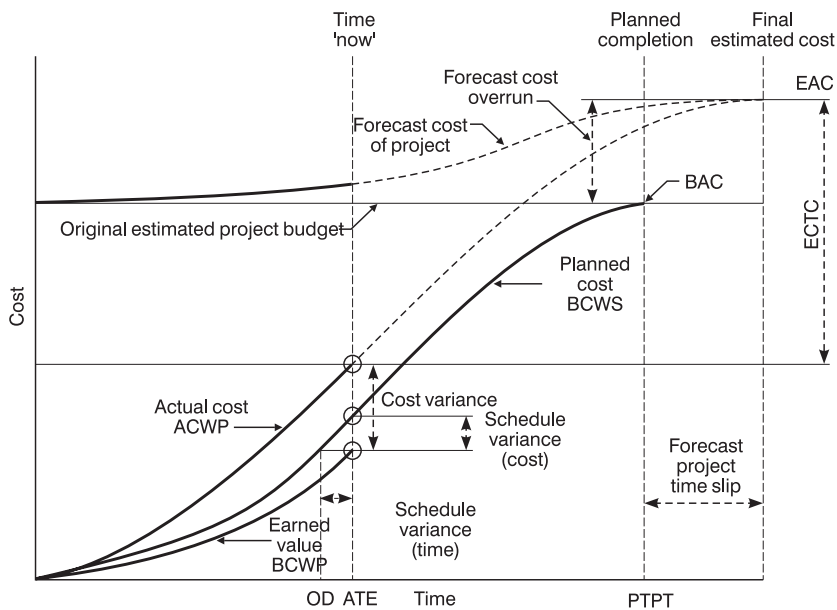

- Key**
- ECTC is Estimated Cost To Complete
 - BAC is Budget At Completion (current) (budget)
 - BCWS is Budgeted Cost of Work Scheduled (current) (planned)
 - BCWP is Budgeted Cost of Work Performed (earned value)
 - ACWP is Actual Cost of Work Performed (actual)
 - OD is Original Duration planned for the work to date
 - ATE is the Actual Time Expended for the work to date
 - PTPT is the Planned Total Project Time
 - EAC is Estimated Cost at Completion
 - ETPT is Estimated Project Time
 - CPI is Cost Performance Index = $BCWP/ACWP$ = Efficiency
 - SPI is Schedule Performance = $BCWP/BCWS$ (cost based) = OD/ATE = % complete

Figure 27.18

It can be seen that the value hours for erection work are only 3180 against an actual manhours usage of 3500. This represents an efficiency of only

$$\frac{3180}{3500} \times 100 = 91\% \text{ approx.}$$

An adjustment should therefore also be made to the value of plant utilization i.e. $12\,000 \times 91\% = 10\,920$. The adjusted value total would therefore be as shown in column V.

The SMAC system described on the previous pages was developed in 1978 by Foster Wheeler Power Products, primarily to find a quicker and more accurate method for assessing the % complete of multi-discipline, multi-contractor construction projects.

However, about 10 years earlier the Department of Defense in the USA developed an almost identical system called Cost, Schedule, Control System (CSCS) which was generally referred to as Earned Value Analysis (EVA). This was mainly geared to the cost control of defence projects within the USA, and apart from UK subcontractors to the American defence contractors, was not disseminated widely in the UK.

While the principles of SMAC and EVA are identical, there developed inevitably a difference in terminology and methods of calculating the desired parameters. The most important change is the introduction of two parameters.

- 1 The Cost Performance Index (CPI), which is the Earned Value Cost/Actual Cost or BCWP/ACWP;
- 2 The Schedule Performance Index (SPI), which is the Earned Value Cost/Planned Cost or BCWP/BCWS.

The set of curves and key in Figure 27.18, page 251, taken from BS 6079 (Guide to Project Management) show clearly the EVA terms and their SMAC equivalents. The curves also show how the Cost Variance and Schedule Variance are obtained and how the Schedule Performance Index (SPI) based on cost differs from the SPI based on time.

The Estimated Cost of Completion (EAC) is calculated in SMAC by dividing the Actual by the % complete, i.e. Actual/% complete.

In EVA the EAC is calculated by dividing the Budget at completion by the CPI, i.e. BAC/CPI.

The results of these two methods is of course the same as shown below:

$$\begin{aligned} \text{EAC} &= \text{Actual}/\% \text{ complete} = \text{Actual} \times \text{Budget/Value} = \text{BAC} \times \text{ACWP/BCWP} \\ \text{therefore EAC} &= \text{BAC/CPI, since ACWP/BCWP} = 1/\text{CPI.} \end{aligned}$$

In 1996 the National Security Industrial Association (NISA) of America published their own Earned Value Management System (EVMS) which dropped the terms such as ACWP, BCWP and BCWS used in CSCS and adopted the simpler terms of Earned Value, Actual and Schedule instead. In all

probability the CSCS terminology will be dropped in favour of the more understandable EVMS terminology.

Figure 27.19 clearly shows the earned value terms in both English (in **bold**) and EV jargon (in *italics*).

Integrated computer system

Until 1992, the SMAC system was run as a separate computer program in parallel with a conventional CPM system. Now, however, with the cooperation of Claremont Controls, utilizing their 'Hornet' program and Cogeneration Investments Limited (part of British Gas), a completely integrated computer program is available which, from one set of input data, entered into the computer on *one* input screen, calculates and prints out the CPM and SMAC results on *one* sheet of paper as well as drafting the network (of approx. 400 activities) in arrow diagram format on A1 or A0 paper. The network can also be produced in precedence format but this may require a larger sheet. The only weekly update information required is the time sheet which records the very minimum details required to control site progress, i.e. the activity number, the manhours expended that week and the assessment of the % complete (to the nearest 5%) of only those activities worked on during that week. The computer program does the rest.

Provided that all the subcontractors return their information regularly and on time, the weekly information produced enables the project manager to see:

- 1 The manhours spent on any activity or group of activities;
- 2 The % complete of any activity;
- 3 The overall % complete of the total project;
- 4 The overall manhours expended;
- 5 The value (useful) hours expended;
- 6 The efficiency of each activity;
- 7 The overall efficiency;
- 8 The estimated final hours for completion;
- 9 The approximate completion date;
- 10 The manhours spent on extra work;
- 11 The relationship between programme and progress;
- 12 The relative performance of subcontractors or internal subareas of work.

The system can of course be used for controlling individual work packages, whether carried out by direct labour or by subcontractors, and by multiplying

EARNED VALUE						
Earned Value	=	% complete	×	Budget	English	
BCWP	=	% complete	×	BAC	EV Jargon	
Overall % complete	=	Earned Value				
		Budget				
	=	BCWP BAC				(Budgeted Cost of Work Performed) (Budget at Completion)
Efficiency	=	Earned Value				
		Actual				
	=	BCWP ACWP				(Budgeted Cost of Work Performed) (Actual cost of Work Performed)
SPI (Cost based)	=	Earned Value				
		Planned				
	=	BCWP BCWS				(Budgeted Cost of Work Performed) (Budgeted cost of Work Scheduled)
SPI (Time based)	=	Original duration				
		Actual Time Expended				
	=	OD ATE				(Original Duration) (Actual Time Expended to date)
Cost Variance	=	Earned Value – Actual				
	=	BCWP – ACWP				
Schedule Variance	=	Earned Value – Planned				
	=	BCWP – BCWS				
Estimated Final Cost or	=	Actual				
		Overall % complete				
	=	ACWP				
	=	Overall % complete				
	=	Budget				
	=	Efficiency				
		BAC				(Budget at Completion)
	=	CPI				(Cost Performance Index)
Estimated Final Time	=	Planned Total Project Time				
Estimated Final Time	=	SPI				
		PTPT				SPI (Time based)
CPI	=	Cost Performance Index	SPI	=	Schedule Performance Index	
BAC	=	Budget At Completion	OD	=	Original Duration to date	
ATE	=	Actual Time to date	PTPT	=	Planned Total Project Time	

Figure 27.19

the total *actual* manhours by the average labour rate, the cost to date is immediately available. The final results should be carefully analysed and can form an excellent base for future estimates.

As previously stated, apart from printing the SMAC information and the conventional CPM data, the program also produces a computer drawn network. This is drawn on a grid with the activity numbers being in effect the grid coordinates. This has the advantage of 'banding' the activities into disciplines, trades or subcontracts and greatly facilitates finding any activity when discussing the programme with other parties. Unlike a normal arrow diagram, where the vertical grid lines are *on* the nodes, they are in this case *between* the nodes so that the coordinates are in effect the *activity* number as in a precedence diagram. The early and late start and finish dates are inserted in the event nodes from the input data. When the new % complete figures are inserted during regular updating, the early start and finish dates are automatically adjusted to reflect the progress. Critical activities are shown by a double line on the network.

A more detailed description of the 'Hornet' program is given in Chapter 30.

Worked examples

The previous chapters describe the various methods and techniques developed to produce meaningful and practical network programmes. In this chapter most of these techniques are combined in two fully worked examples. One is mainly of a civil engineering and building nature and the other is concerned with mechanical erection – both are practical and could be applied to real situations.

The first example covers the planning, man-hour control and cost control of a construction project of a bungalow. Before any planning work is started, it is advantageous to write down the salient parameters of the design and construction, or what is grandly called the ‘design and construction philosophy’. This ensures that everyone who participates in the project knows not only what has to be done but why it is being done in a particular way. Indeed, if the design and construction philosophy is circulated *before* the programme, time- and cost-saving suggestions may well be volunteered by some recipients which, if acceptable, can be incorporated into the final plan.

Example 1 Small bungalow

Design and construction philosophy

- 1 The bungalow is constructed on strip footings.
- 2 External walls are in two skins of brick with a cavity. Internal partitions are in plasterboard on timber studding.
- 3 The floor is suspended on brick piers over an oversite concrete slab. Floorboards are T & G pine.
- 4 The roof is tiled on timber-trussed rafters with external gutters.
- 5 Internal finish is plaster on brick finished with emulsion paint.
- 6 Construction is by direct labour specially hired for the purpose. This includes specialist trades such as electricians and plumbing.
- 7 The work is financed by a bank loan, which is paid four-weekly on the basis of a regular site measure.
- 8 Labour is paid weekly. Suppliers and plant hire are paid 4 weeks after delivery. Materials and plant must be ordered 2 weeks before site requirement.
- 9 The *average* labour rate is £5 per hour or £250 per week for a 50-hour working week. This covers labourers and tradesmen.

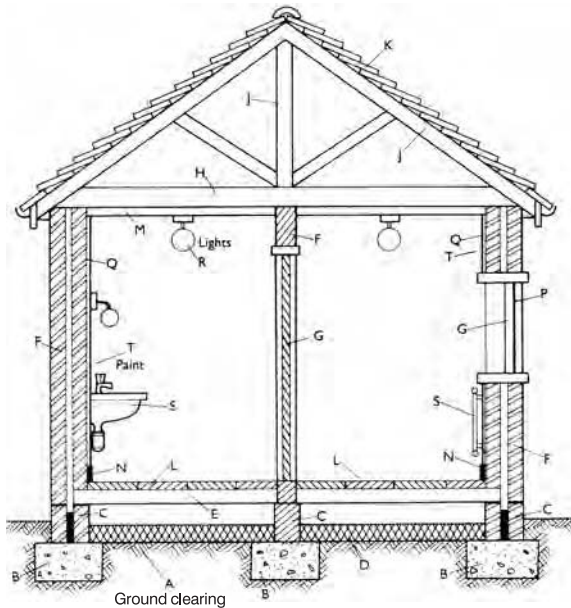


Figure 28.1 Bungalow (six rooms)

10 The cross-section of the bungalow is shown in Figure 28.1 and the sequence of activities is set out in Table 28.1, which shows the dependencies of each activity. All durations are in weeks.

The activity letters refer to the activities shown on the cross-section diagram of Figure 28.1, and on subsequent tables only these activity letters will be used. The total float column can, of course, only be completed when the network shown in Figure 28.2 has been analysed (see Table 28.1).

Table 28.1

<i>Activity letter</i>	<i>Activity – description</i>	<i>Duration (weeks)</i>	<i>Dependency</i>	<i>Total float</i>
A	Clear ground	2	Start	0
B	Lay foundations	3	A	0
C	Build dwarf walls	2	B	0
D	Oversite concrete	1	B	1
E	Floor joists	2	C and D	0
F	Main walls	5	E	0
G	Door and window frames	3	E	2
H	Ceiling joists	2	F and G	4
J	Roof timbers	6	F and G	0
K	Tiles	2	H and J	1
L	Floorboards	3	H and J	0
M	Ceiling boards	2	K and L	0
N	Skirtings	1	K and L	1
P	Glazing	2	M and N	0
Q	Plastering	2	P	2
R	Electrics	3	P	1
S	Plumbing and heating	4	P	0
T	Painting	3	Q, R and S	0

0 = Critical

Table 28.2 shows the complete analysis of the network including TL_e (latest time end event), TE_e (earliest time and event), TE_b (earliest time beginning event), total float and free float. It will be noted that none of the activities have free float. As mentioned in Chapter ??, free float is often confined to the dummy activities, which have been omitted from the table.

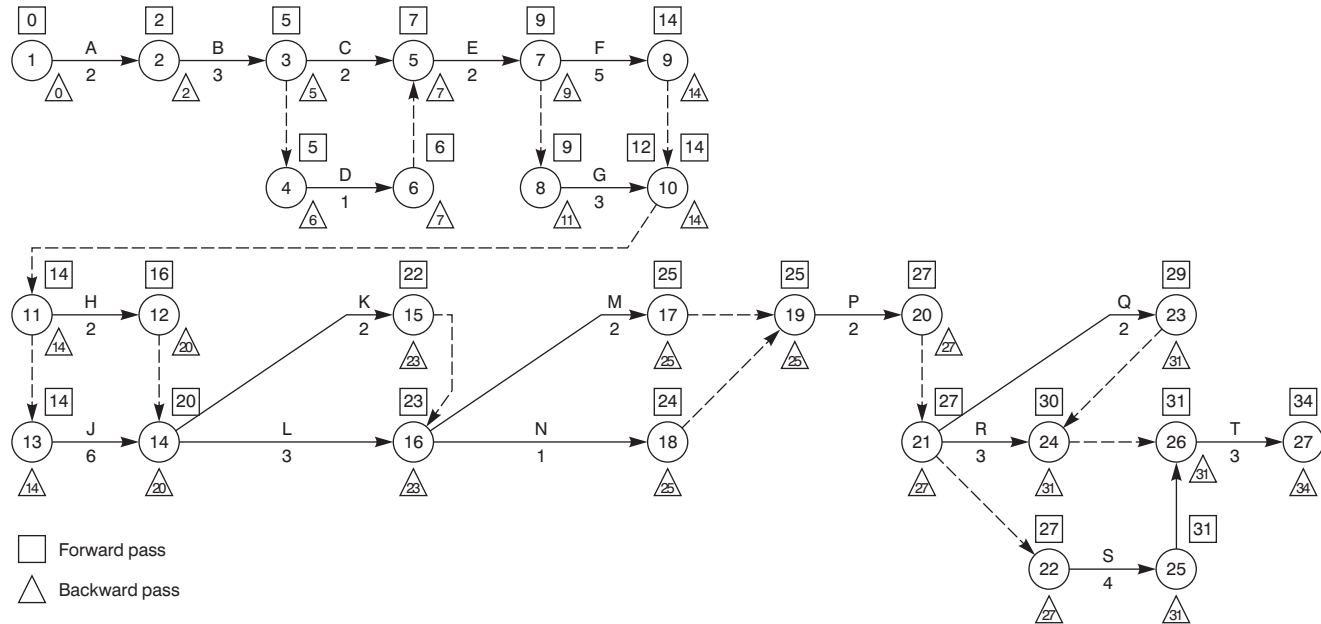


Figure 28.2 Network of bungalow (duration in weeks)

Table 28.2

<i>a</i>	<i>b</i>	<i>c</i>	<i>d</i>	<i>e</i>	<i>f</i>	<i>g</i>	<i>h</i>
<i>Activity letter</i>	<i>Node no.</i>	<i>Duration</i>	<i>TL_e</i>	<i>TE_e</i>	<i>TE_b</i>	<i>d-f-c Total float</i>	<i>e-f-c Free float</i>
A	1–2	2	2	2	0	0	0
B	2–3	3	5	5	2	0	0
C	3–5	2	7	7	5	0	0
D	4–6	1	7	6	5	1	0
E	5–7	2	9	9	7	0	0
F	7–9	5	14	14	9	0	0
G	8–10	3	14	12	9	2	0
H	11–12	2	20	16	14	4	0
J	13–14	6	20	20	14	0	0
K	14–15	2	23	22	20	1	0
L	14–16	3	23	23	20	0	0
M	16–17	2	25	25	23	0	0
N	16–18	1	25	24	23	1	0
P	19–20	2	27	27	25	0	0
Q	21–23	2	31	29	27	2	0
R	21–24	3	31	30	27	1	0
S	22–25	4	31	31	27	0	0
T	26–27	3	34	34	31	0	0

To enable the resource loading bar chart in Figure 28.3 to be drawn it helps to prepare a table of resources for each activity (Table 28.3). The resources are divided into two categories:

- A Labourers
- B Tradesmen

This is because tradesmen are more likely to be in short supply and could affect the programme.

The total labour histogram can now be drawn, together with the total labour curve (Figure 28.4). It will be seen that the histogram has been hatched to differentiate between labourers and tradesmen, and shows that the maximum demand for tradesmen is eight men in weeks 27 and 28. Unfortunately, it is only possible to employ six tradesmen due to possible site congestion. What is to be done?

Table 28.3 Labour resources per week

<i>Activity letter</i>	<i>Resource A Labourers</i>	<i>Resource B Tradesman</i>	<i>Total</i>
A	6	—	6
B	4	2	6
C	2	4	6
D	4	—	4
E	—	2	2
F	2	4	6
G	—	2	2
H	—	2	2
J	—	2	2
K	2	3	5
L	—	2	2
M	—	2	2
N	—	2	2
P	—	2	2
Q	1	3	4
R	—	2	2
S	1	3	4
T	—	4	4

The advantage of network analysis with its float calculation is now apparent. Examination of the network shows that in weeks 27 and 28 the following operations (or activities) have to be carried out:

Activity Q	Plastering	3 men for 2 weeks
Activity R	Electrics	2 men for 3 weeks
Activity S	Plumbing and heating	3 men for 4 weeks

The first step is to check which activities have float. Consulting Table 28.2 reveals that Q (Plastering) has 2 weeks float and R (Electrics) has 1 week float. By delaying Q (Plastering) by 2 weeks and accelerating R (Electrics) to be carried out in 2 weeks by 3 men per week, the maximum total in any week is reduced to 6. Alternatively, it may be possible to extend Q (Plumbing) to 4 weeks using 2 men per week for the first two weeks and 1 man per week for the next two weeks. At the same time, R (Electrics) can be extended by one week by employing 1 man per week for the first two weeks and 2 men per

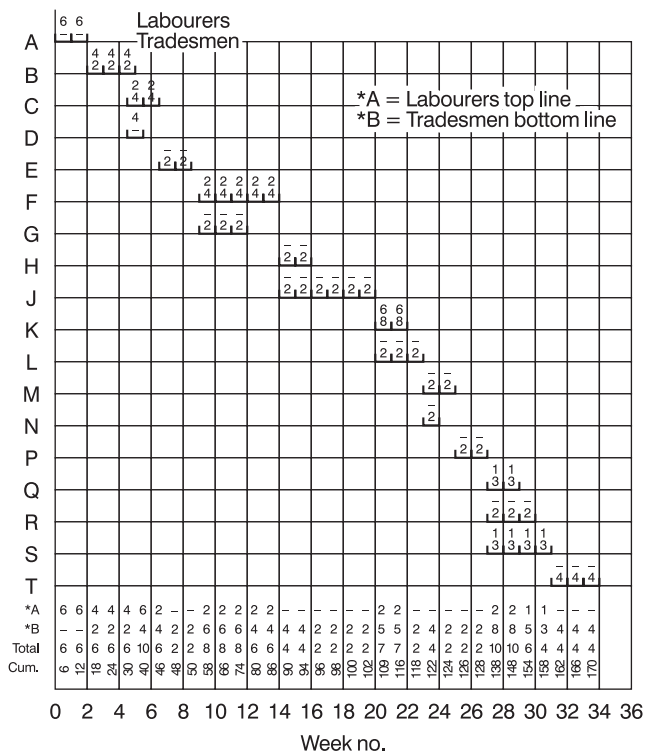


Figure 28.3

week for the next two weeks. Again, the maximum total for weeks 27–31 is 6 tradesmen.

The new partial disposition of resources and revized histograms after the two alternative smoothing operations are shown in Figures 28.5 and 28.6. It will be noted that:

- 1 The overall programme duration has not been exceeded because the extra durations have been absorbed by the float.
- 2 The total number of man weeks of any trade has not changed – i.e. Q (Plastering) still has 6 man weeks and R (Electrics) still has 6 man weeks.

If it is not possible to obtain the necessary smoothing by utilizing and absorbing floats the network logic may be amended, but this requires a careful reconsideration of the whole construction process.

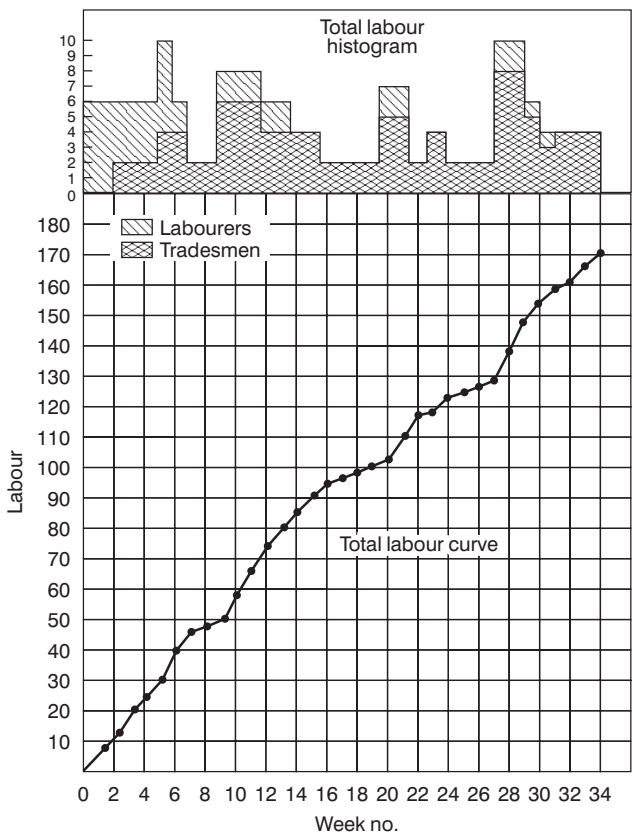


Figure 28.4

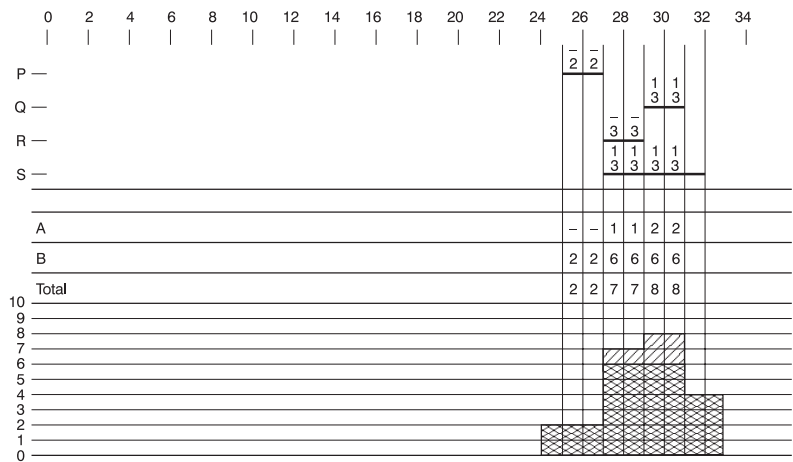


Figure 28.5

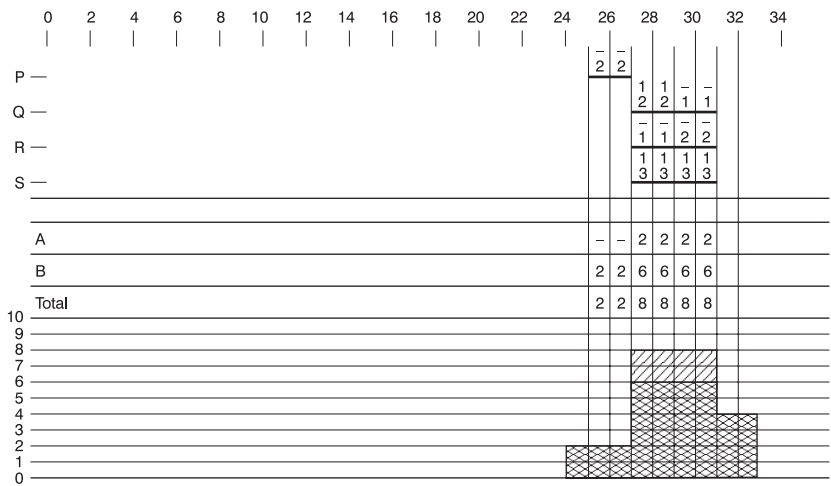


Figure 28.6

Table 28.4

<i>a</i> Activity letter	<i>b</i> Duration (weeks)	<i>c</i> No. of men	<i>d</i> $b \times c \times 50$ Budget hours
A	2	6	600
B	3	6	900
C	2	6	600
D	1	4	200
E	2	2	200
F	5	6	1500
G	3	2	300
H	2	2	200
J	6	2	600
K	2	5	500
L	3	2	300
M	2	2	200
N	1	2	100
P	2	2	200
Q	2	4	400
R	3	2	300
S	4	4	800
T	3	4	600
Total			8500

The next operation is to use the SMAC system to control the work on site. Multiplying for each activity the number of weeks required to do the work by the number of men employed on that activity yields the number of man weeks. If this is multiplied by 50 (the average number of working hours in a week), the man hours per activity are obtained. A table can now be drawn up listing the activities, durations, number of men and budget hours (Table 28.4).

As the bank will advance the money to pay for the construction in four-weekly tranches, the measurement and control system will have to be set up to monitor the work every 4 weeks. The anticipated completion date is week 34, so that a measure in weeks 4, 8, 12, 16, 20, 24, 28, 32 and 36 will be required. By recording the *actual* hours worked each week and assessing the percentage complete for each activity each week the value hours for each activity can be quickly calculated. As described in Chapter 27, the overall percentage complete, efficiency and predicted final hours can then be calculated. Table 28.5 shows a manual SMAC analysis for four sample weeks (8, 16, 24 and 32).

In practice, this calculation will have to be carried out every week either manually as shown or by computer using a simple spreadsheet. It must be remembered that only the activities actually worked on during the week in question have to be computed. The remaining activities are entered as shown in the previous week's analysis.

For purposes of progress payments, the *value* hours for every 4-week period must be multiplied by the average labour rate (£5 per hour) and, when added to the material and plant costs, the total value for payment purposes is obtained. This is shown later in this chapter.

At this stage it is more important to control the job, and for this to be done effectively, a set of curves must be drawn on a time base to enable all the various parameters to be compared. The relationship between the actual hours and value hours gives a measure of the efficiency of the work, while that between the value hours and the planned hours gives a measure of progress. The actual and value hours are plotted straight from the SMAC analysis, but the planned hours must be obtained from the labour expenditure curve (Figure 28.4) and multiplying the labour value (in men) by 50 (the number of working hours per week). For example, in week 16 the total labour used to date is 94 man weeks, giving $94 \times 50 = 4700$ man hours.

The complete set of curves (including the efficiency and percentage complete curves) are shown in Figure 28.7. In practice, it may be more

Table 28.5

<i>Period</i>		<i>Week 8</i>			<i>Week 16</i>			<i>Week 24</i>			<i>Week 32</i>		
<i>Budget</i>		<i>Actual cum.</i>	<i>%</i>	<i>V</i>	<i>Actual cum.</i>	<i>%</i>	<i>V</i>	<i>Actual cum.</i>	<i>%</i>	<i>V</i>	<i>Actual cum.</i>	<i>%</i>	<i>V</i>
A	600	600	100	600	600	100	600	600	100	600	600	100	600
B	900	800	100	900	800	100	900	800	100	900	800	100	900
C	600	550	100	600	550	100	600	550	100	600	550	100	600
D	200	220	90	180	240	100	200	240	100	200	240	100	200
E	200	110	40	80	180	100	200	180	100	200	180	100	200
F	1500	–	–	–	1200	80	1200	1550	100	1500	1550	100	1500
G	300	–	–	–	300	100	300	300	100	300	300	100	300
H	200	–	–	–	180	60	120	240	100	200	240	100	200
J	600	–	–	–	400	50	300	750	100	600	750	100	600
K	500	–	–	–	–	–	–	500	100	500	550	100	500
L	300	–	–	–	–	–	–	250	80	240	310	100	300
M	200	–	–	–	–	–	–	100	60	120	180	100	200
N	100	–	–	–	–	–	–	50	40	40	110	100	100
P	200	–	–	–	–	–	–	–	–	–	220	100	200
Q	400	–	–	–	–	–	–	–	–	–	480	100	400
R	300	–	–	–	–	–	–	–	–	–	160	60	180
S	800	–	–	–	–	–	–	–	–	–	600	80	640
T	600	–	–	–	–	–	–	–	–	–	100	10	60
<i>Total</i>	8500	2280	27.8%	2360	4450	52%	4420	6110	70.6%	6000	7920	90.4%	7680
Efficiency			103%			99%			98%			96%	
Estimated final hours			8201			8557			8654			8761	

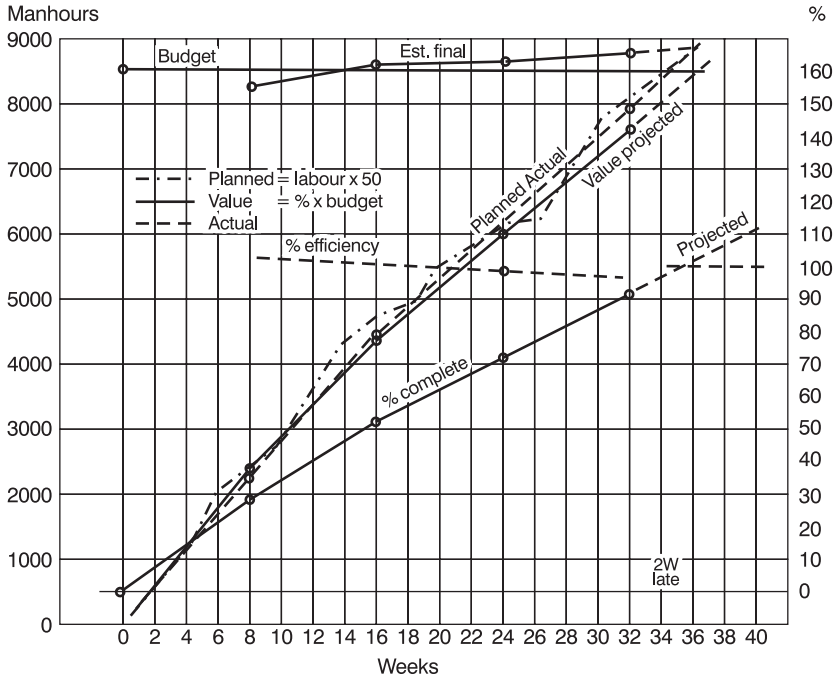


Figure 28.7

convenient to draw the last two curves on a separate sheet, but provided the percentage scale is drawn on the opposite side to the man hour scale no confusion should arise. Again, a computer program can be written to plot these curves on a weekly basis as shown in Chapter 27.

Once the control system has been set up it is essential to draw up the cash flow curve to ascertain what additional funding arrangements are required over the life of the project. In most cases where project financing is required the cash flow curve will give an indication of how much will have to be obtained from the finance house or bank and when. In the case of this example, where the construction is financed by bank advances related to site progress, it is still necessary to check that the payments will, in fact, cover the outgoings. It can be seen from the curve in Figure 28.9 that virtually permanent overdraft arrangements will have to be made to enable the men and suppliers to be paid regularly.

When considering cash flow it is useful to produce a table showing the relationship between the usage of a resource, payment date and the receipt of

Table 28.6

<i>Week intervals</i>	<i>1</i>	<i>2</i>	<i>3</i>	<i>4</i>	<i>5</i>	<i>6</i>	<i>7</i>	<i>8</i>
Order date								
Material delivery			X					
Labour use				X				
Material use				X				
Labour payments				X				
Pay suppliers							O	
Measurement							M	
Receipt from bank								R
Every 4 weeks								
Starting week no. 5								
First week no.	-3	-2	-1	1	2	3	4	5

cash from the bank to pay for it – even retrospectively. It can be seen in Table 28.6 that

- 1 Materials have to be ordered 4 weeks before use.
- 2 Materials have to be delivered 1 week before use.
- 3 Materials are paid for 4 weeks after delivery.
- 4 Labour is paid in week of use.
- 5 Measurements are made 3 weeks after use.
- 6 Payment is made 1 week after measurement.

The next step is to tabulate the labour costs and material and plant costs on a weekly basis (Table 28.7). The last column in the table shows the total material and plant cost for every activity, because all the materials and plant for an activity are being delivered one week before use and have to be paid for in one payment. For simplicity, no retentions are withheld (i.e. 100% payment is made to all suppliers when due).

A bar chart (Figure 28.8) can now be produced which is similar to that shown in Figure 28.3. The main difference is that instead of drawing bars, the length of the activity is represented by the weekly resource. As there are two

Table 28.7

<i>Activity</i>	<i>No. of weeks</i>	<i>Labour cost per week</i>	<i>Material and plant per week</i>	<i>Material cost and plant</i>
A	2	1 500	100	200
B	3	1 500	1 200	3 600
C	2	1 500	700	1 400
D	1	1 000	800	800
E	2	500	500	1 000
F	5	1 500	1 400	7 000
G	3	500	600	1 800
H	2	500	600	1 200
J	6	500	600	3 600
K	2	1 300	1 200	2 400
L	3	500	700	2 100
M	2	500	300	600
N	1	500	200	200
P	2	500	400	800
Q	2	1 000	300	600
R	3	500	600	1 800
S	4	1 000	900	3 600
T	3	1 000	300	900
<i>Material total</i>				33 600

types of resources – men and materials and plant – each activity is represented by two lines. The top line represents the labour cost in £100 units and the lower line the material and plant cost in £100 units. When the chart has been completed the resources are added vertically for each week to give a weekly total of labour out (i.e. men being paid, line 1) and material and plant out (line 2). The total cash out and the cumulative outflow values can now be added in lines 3 and 4, respectively.

The chart also shows the measurements every 4 weeks, starting in week 4 (line 5) and the payments one week later. The cumulative total cash in is shown in line 6. To enable the outflow of materials and plant to be shown separately on the graph in Figure 28.9, it was necessary to enter the cumulative outflow for material and plant in row 7. This figure shows the cash flow curves (i.e. cash in and cash out). The need for a more-or-less permanent overdraft of approximately £10 000 is apparent.

Average labour rate = £5/hour 50 hours/week = 50 x 5 = £250/week costs x £100

Figure 28.8

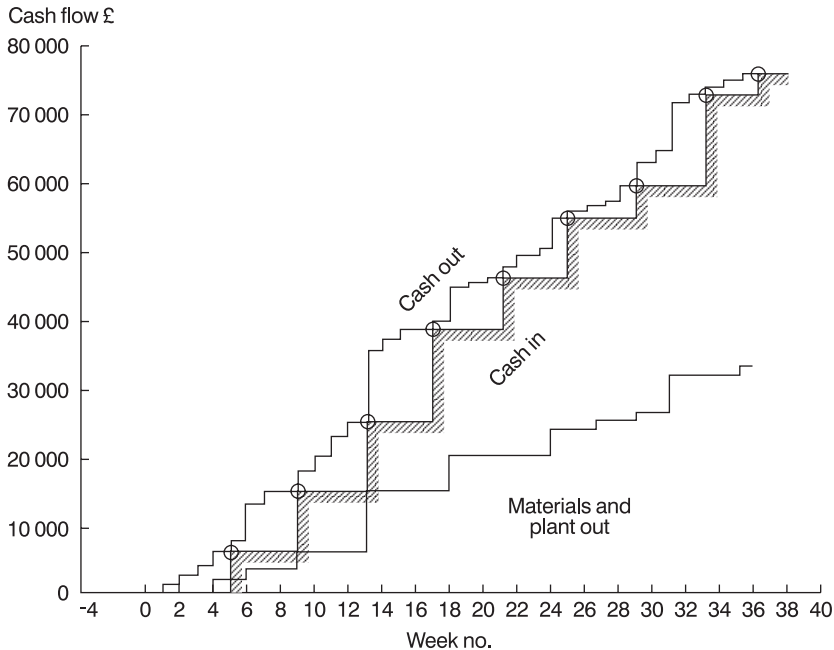


Figure 28.9

Example 2 Pumping installation

Design and construction philosophy

- 1 3 tonne vessel arrives on-site complete with nozzles and manhole doors in place.
- 2 Pipe gantry and vessel support steel arrives piece small.
- 3 Pumps, motors and bedplates arrive as separate units.
- 4 Stairs arrive in sections with treads fitted to a pair of stringers.
- 5 Suction and discharge headers are partially fabricated with weldolet tees in place. Slip-on flanges to be welded on-site for valves, vessel connection and blanked-off ends.
- 6 Suction and discharge lines from pumps to have slip-on flanges welded on-site after trimming to length.
- 7 Drive, couplings to be fitted before fitting of pipes to pumps, but not aligned.
- 8 Hydro test to be carried out in one stage. Hydro pump connection at discharge header end. Vent at top of vessel. Pumps have drain points.

- 9 Resource restraints require Sections A and B of suction and discharge headers to be erected in series.
- 10 Suction to pumps is prefabricated on-site from slip-on flange at valve to field weld at high-level bend.
- 11 Discharge from pumps is prefabricated on-site from slip-on flange at valve to field weld on high-level horizontal run.
- 12 Final motor coupling alignment to be carried out after hydro test in case pipes have to be re-welded and aligned after test.
- 13 Only pumps Nos 1 and 2 will be installed.

In this example it is necessary to produce a material take-off from the layout drawings so that the erection manhours can be calculated. The manhours can then be translated into man days and, by assessing the number of men required per activity, into activity durations. The manhour assessment is, of course, made in the conventional manner by multiplying the operational units, such as numbers of welds or tonnes of steel, by the manhour norms used by the construction organization. In this exercise the norms used are those published by the OCPCA (Oil & Chemical Plant Contractors Association). These are base norms which may or may not be factorized to take account of market, environmental, geographical or political conditions of the area in which the work is carried out. It is obvious that the rate for erecting a tonne of steel in the UK is different from erecting it in the wilds of Alaska.

The sequence of operations for producing a network programme and SMAC analysis is as follows:

- 1 Study layout drawing or piping isometric drawings (Figure 28.10).
- 2 Draw a construction network. Note that at this stage it is only possible to draw the logic sequences (Figure 28.11) and allocate activity numbers.
- 3 From the layout drawing, prepare a take-off of all the erection elements such as number of welds, number of flanges, weight of steel, number of pumps, etc.
- 4 Tabulate these quantities on an estimate sheet (Figure 28.12) and multiply these by the OCPCA norms given in Table 28.8 to give the manhours per operation.
- 5 Decide which operations are required to make up an activity on a network and list these in a table. This enables the manhours per activity to be obtained.
- 6 Assess the number of men required to perform any activity. By dividing the activity manhours by the number of men the actual working hours and consequently working days (durations) can be calculated.

(Continued on page 280)

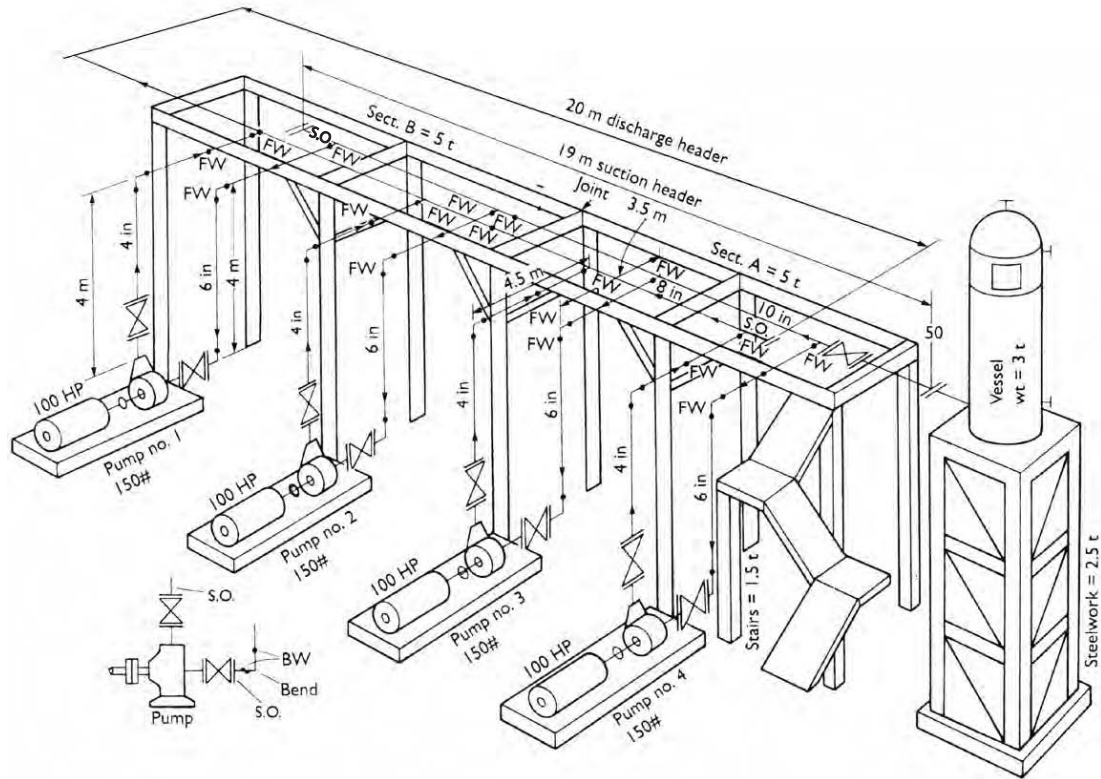


Figure 28.10 Isometric drawing. FW = Field weld, BW = Butt weld, SO = Slip-on

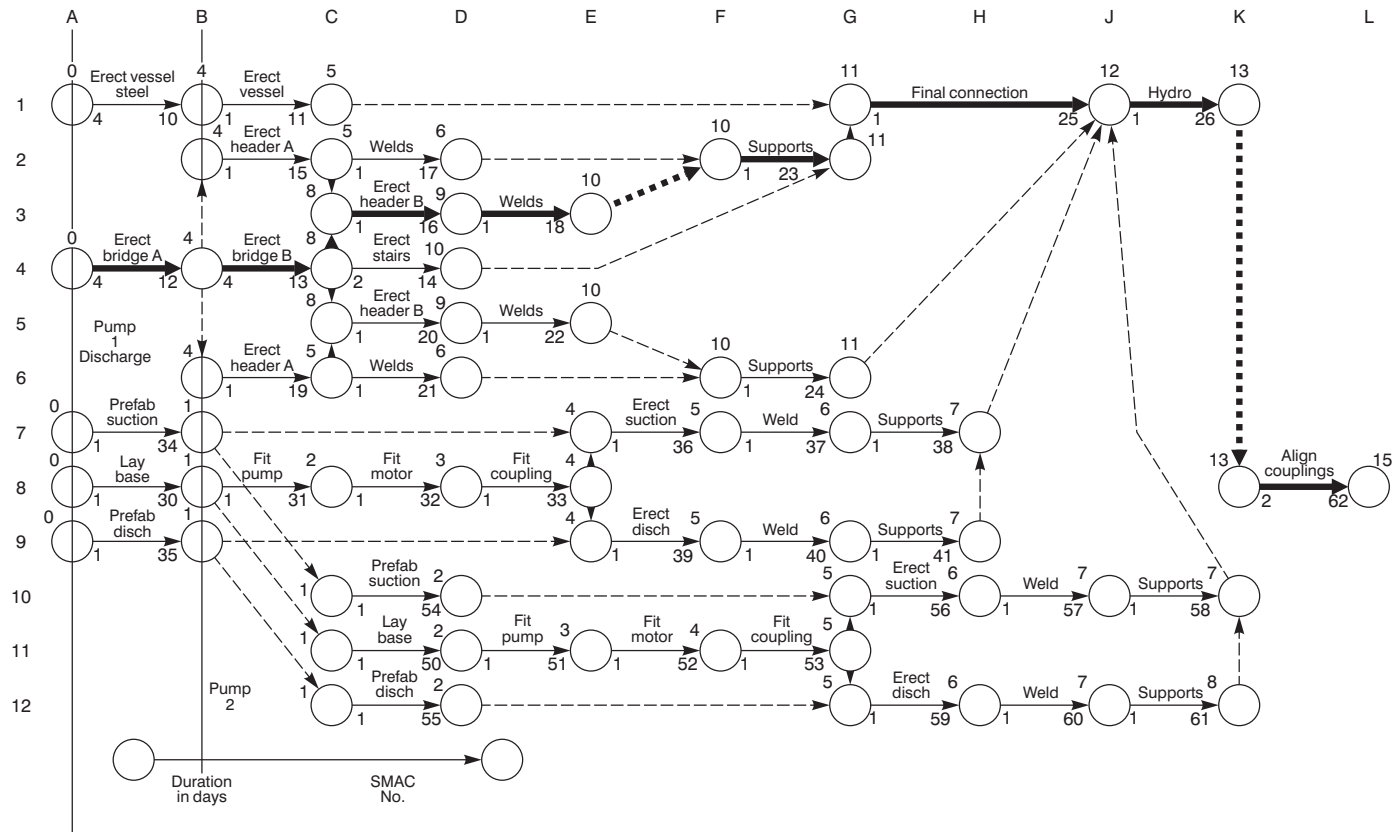


Figure 28.11 Network (using grid system)

ESTIMATE SHEET						SMAC ALLOCATION							
A	B	C	D	E	F								
Item	Unit	Quant 1 set	Hours rate	E =C + D man hours 1 set	F Pump man hours 2 sets				SMAC no. 1 set	SMAC man hours 1 set	SMAC no. pump no. 2	SMAC man hours pump no. 2	Duration days 1 set 2 men/act
Erect vessel steelwork	Tonne	2.5	24.7	61.75					10	62			4
Erect vessel 3 T.	No. + Tonne	1	6.5 + 3.9	10.40					11	11			1
Erect bridge sect A	Tonne	5	12.3	61.50					12	62			4
Erect bridge sect B	Tonne	5	12.3	61.50					13	62			4
Erect stairs	Tonne	1.5	19.7	29.55					14	30			2
10" Suct. head erect sect A	Metre	10	0.90	9.00					15	9			1
10" Suct. head erect sect B	Metre	9	0.90	8.10					16	8			1
10" Suct. head slip-on (valve)	No	2	2.92	5.84					17.1	15			1
10" Suct. head butt joint	No	1	3.25	5.25					17.2	—			—
10" Suct. head fit valve	No	1	3.41	2.41					17.3	—			—
10" Suct. head slip-on (vessel)	No	1	2.92	2.92					17.4	—			—
10" Suct. head slip-on (end)	No	1	2.92	2.92					18.1	4			1
10" Suct. head fit blank	No	1	0.90	0.90					18.2	—			—
10" Suct. head fit supports	No	4	1.44	5.76					23	6			1
10" Suct. head final conn.	No	1	0.90	0.90					25	1			1
8" Disch. head erect sect. A	Metre	8	0.80	6.40					19	6			1
8" Disch. head erect sect. B	Metre	12	0.80	9.60					20	10			1
8" Disch. head butt joint	No	1	2.77	2.77					22	3			1
8" Disch. head slip-on (end)	No	1	2.49	2.49					21.1	3			1
8" Disch. head fit blank	No	1	0.50	0.50					21.2	—			—
8" Disch. head fitt supports	No	4	1.44	5.76					24	6			1 1
Erect base plate	No	1	4.00	4.00	8.00				30	4	50	4	1 1 1
Fit pump 100 HP	No	1	14.00	14.00	28.00				31	14	51	14	1 1 1
Fit motor	No	1	14.00	14.00	28.00				32	14	52	14	1 1 1
Fit coupling	No	1	10.00	10.00	20.00				33	10	53	10	1 1 1
Fit 2 valves 6" & 4"	No	2	0.77	1.54	3.08				36.1	7	56.1	7	1 1 1
6" Suction erect	Metre	7.5	0.70	5.25	10.50				36.2	—	56.2	—	—
6" Suction make joint	No	1	0.44	0.44	0.88				36.3	—	56.3	—	—
6" Suction butt bend	No	2	2.30	4.60	9.20				37.1	7	57.1	7	1 1 1
6" Suction butt header	No	1	2.30	2.30	4.60				37.2	—	57.2	—	—
6" Suction fit supports	No	3	1.44	4.32	8.64				38	4	58	4	1 1 1
6" Suction 2 butts bend	* No	2	2.41	4.82	9.64				34.1	6	54.1	6	1 1 1
6" Suction slip-on	* No	1	1.44	1.44	2.88				34.2	—	54.2	—	—
4" Disch. erect	Metre	8.5	0.59	5.01	10.03				39	6	59	6	1 1 1
4" Disch. make joint	No	1	0.37	0.37	0.74				60.1	4	60.1	4	1 1 1
4" Disch. butt joint	No	1	1.82	1.82	3.64				40.2	—	60.2	—	—
4" Disch. butt header	No	1	1.82	1.82	3.64				40.3	—	60.3	—	—
4" Disch. fit supports	No	3	1.44	4.32	8.64				41	4	61	4	1 1 1
4" Disch. 2 butts bend	* No	2	1.89	3.78	7.56				35.1	5	55.1	5	1 1 1
4" Disch. slip-on	* No	1	1.14	1.14	2.28				35.2	—	55.2	—	—
Hydro-test 54 m	No	1	12.00	12.00					26	12			1
Align couplings	No	2	25.00	50.00				†	62	50			2
Total										445	+	85	= 530

* Pre-fabricate on site

† Item 62 is performed in 1 day due to overtime working

No. of man days = (41 + 12)2
= 53 × 2 = 106

Average hours/man day = 530/106 = 5

Figure 28.12

Table 28.8 Applicable rates from OCPCA norms

<i>Steel erection</i>	<i>Hours</i>
Pipe gantries	12.3/tonne
Stairs	19.7/tonne
Vessel support	24.7/tonne
Vessel (3 tonne)	6.5 + 1.3/tonne
Pump erection (100 hp)	14
Motor erection	14
Bedplate	4
Fit coupling	10
Align coupling	25
Prefab. piping (Sch. 40)	
6-inch suction prep.	0.81/end
4-inch discharge prep.	1.6/butt
suction welds	1.44/flange
4-inch discharge prep	0.62/end
discharge welds	1.27/butt
discharge slip-on	1.14/flange
Pipe erection (10-inch)	$0.79 \times 1.15 = 0.90/\text{m}$
Pipe erection (8-inch)	$0.70 \times 1.15 = 0.80/\text{m}$
Pipe erection (6-inch)	$0.61 \times 1.15 = 0.70/\text{m}$
Pipe erection (4-inch)	$0.51 \times 1.15 = 0.59/\text{m}$
Site butt welds (10-inch)	$2.83 \times 1.15 = 3.25/\text{butt}$
(8-inch)	$2.41 \times 1.15 = 2.77/\text{butt}$
(6-inch)	$2.0 \times 1.15 = 2.30/\text{butt}$
(4-inch)	$1.59 \times 1.15 = 1.82/\text{butt}$
Slip-ons (10-inch)	$3.25 \times 0.9 = 2.92/\text{butt}$
(8-inch)	$2.77 \times 0.9 = 2.49/\text{butt}$
(6-inch)	$2.30 \times 0.9 = 2.07/\text{butt}$
(4-inch)	$1.82 \times 0.9 = 1.64/\text{butt}$
Fit valves (10-inch)	$2.1 \times 1.15 = 2.41/\text{item}$
(6-inch)	$0.9 \times 1.15 = 1.04/\text{item}$
(4-inch)	$0.45 \times 1.15 = 0.51/\text{item}$
Flanged connection (10-inch)	$0.78 \times 1.15 = 0.90/\text{connection}$
(8-inch)	$0.43 \times 1.15 = 0.50/\text{connection}$
(6-inch)	$0.38 \times 1.15 = 0.44/\text{connection}$
(4-inch)	$0.32 \times 1.15 = 0.37/\text{connection}$
Supports	$1.25 \times 1.15 = 1.44/\text{support}$
Hydro test Set up	$6 \times 1.15 = 6.9$
Fill and drain	$2 \times 1.15 = 2.3$
Joint check	$0.2 \times 1.15 = 0.23/\text{joint}$
Blinds	$0.5 \times 1.15 = 0.58/\text{blind}$
$\text{Hydrotest Total} = 6.9 + 2.3 + (0.23 \times 12)$ $= 9.2 + 2.76 = 11.96 \text{ (say 12)}$	

Table 28.9 Total float

<i>M</i> <i>SMAC</i> <i>no.</i>	<i>D</i> <i>Duration</i> <i>(days)</i>	<i>Backward</i> <i>Pass</i> <i>TL_e</i>	<i>Forward</i> <i>Pass</i> <i>TE_e</i>	<i>TE_b</i>	<i>Total</i> <i>float</i>	<i>Welding</i> <i>activity</i>
10	4	10	4	0	6	
11	1	11	5	4	6	
12	4	4	4	0	0	
13	4	8	8	4	0	
14	2	11	10	8	1	
15	1	8	5	4	3	
16	1	9	9	8	0	
17	1	10	6	5	4	×
18	1	10	10	9	0	×
19	1	9	5	4	4	
20	1	10	9	8	1	
21	1	11	6	5	5	×
22	1	11	10	9	1	×
23	1	11	11	10	0	
24	1	12	11	10	1	
25	1	12	12	11	0	×
26	1	13	13	12	0	
30	1	5	1	0	4	
31	1	7	2	1	5	
32	1	8	3	2	5	
33	1	9	4	3	5	
34	1	8	1	0	7	×
35	1	8	1	0	7	×
36	1	10	5	4	5	
37	1	11	6	5	5	×
38	1	12	7	6	5	
39	1	10	5	4	5	
40	1	11	6	5	5	×
41	1	12	7	6	5	
50	1	6	2	1	4	
51	1	7	3	2	4	
52	1	8	4	3	4	
53	1	9	5	4	4	
54	1	9	2	1	7	×
55	1	9	2	1	7	×
56	1	10	6	5	4	
57	1	11	7	6	4	×
58	1	12	8	7	4	
59	1	10	6	5	4	
60	1	11	7	6	4	×
61	1	12	8	7	4	
62	2	15	15	13	0	

Table 28.10 SMAC analysis

	<i>SMAC no.</i>	<i>SMAC budget manhours</i>	<i>Day 5</i>			<i>Day 10</i>			<i>Day 15</i>		
			<i>A</i>	<i>%</i>	<i>V</i>	<i>A</i>	<i>%</i>	<i>V</i>	<i>A</i>	<i>%</i>	<i>V</i>
Erect vessel steelwork	10	62	70	100	62	70	100	62	70	100	62
Erect vessel	11	11	12	100	11	12	100	11	12	100	11
Erect bridge sect. A	12	62	60	100	62	60	100	62	60	100	62
Erect bridge sect. B	13	62	40	50	31	65	100	62	65	100	62
Erect stairs	14	30	—	—	—	35	100	30	35	100	30
10-inch suct. head. erect A	15	9	10	100	9	10	100	9	10	100	9
10-inch suct. head. erect B	16	8	—	—	—	8	100	8	8	100	8
10-inch suct. head. welds A	17	15	—	—	—	18	100	15	18	100	15
10-inch suct. head. welds B	18	4	—	—	—	5	100	4	5	100	4
8-inch disch. head. erect A	19	6	6	80	5	6	100	6	6	100	6
8-inch disch. head. erect B	20	10	—	—	—	11	80	8	12	100	8
8-inch disch. head. welds A	21	3	—	—	—	3	100	3	3	100	3
8-inch disch. head. welds B	22	3	—	—	—	—	—	—	3	100	3
Suction header supports	23	6	—	—	—	7	60	4	8	100	6
Discharge header supports	24	6	—	—	—	—	—	—	6	100	6
Final connection	25	1	—	—	—	—	—	—	1	100	1
Hydro test	26	12	—	—	—	—	—	—	10	100	12
Base plate pump 1	30	4	3	100	4	3	100	4	3	100	4
Fit pump 1	31	14	14	100	14	14	100	14	14	100	14
Fit motor 1	32	14	12	100	14	12	100	14	12	100	14

Fit coupling 1	33	10	12	100	10	12	100	10	12	100	10
Prefab. suction pipe 1	34	6	10	100	6	10	100	6	10	100	6
Prefab. discharge pipe 1	35	5	4	80	4	5	100	5	5	100	5
Erect suction pipe 1	36	7	—	—	—	8	100	7	8	100	7
Weld suction pipe 1	37	7	—	—	—	5	100	7	5	100	7
Support suction pipe 1	38	4	—	—	—	4	80	3	5	100	5
Erect discharge pipe 1	39	6	5	70	4	7	100	6	7	100	6
Weld discharge pipe 1	40	4	—	—	—	4	100	4	4	100	4
Support discharge pipe 1	41	4	—	—	—	2	50	2	3	100	4
Basic plate pump 2	50	4	3	100	4	3	100	4	3	100	4
Fit pump 2	51	14	14	100	14	14	100	14	14	100	14
Fit motor 2	52	14	12	100	14	12	100	14	12	100	14
Fit coupling 2	53	10	10	100	10	10	100	10	10	100	10
Prefab. suction pipe 2	54	6	10	100	6	10	100	6	10	100	6
Prefab. discharge pipe 2	55	5	6	100	5	6	100	5	6	100	5
Erect suction pipe 2	56	7	5	60	4	8	100	7	8	100	7
Weld suction pipe 2	57	7	—	—	—	5	100	7	5	100	7
Support suction pipe 2	58	4	—	—	—	2	40	2	4	100	4
Erect discharge pipe 2	59	6	6	70	4	8	100	6	8	100	6
Weld discharge pipe 2	60	4	—	—	—	5	100	4	5	100	4
Support discharge pipe 2	61	4	—	—	—	3	70	3	4	100	4
Align couplings 1 & 2	62	50	—	—	—	—	—	—	16	40	20
<i>Totals</i>		530	324	56%	297	482	84%	448	525	94%	500

- 7 Enter these durations in the network programme.
- 8 Carry out the network analysis, giving floats and the critical path (Table 28.9).
- 9 Draw up the SMAC analysis sheet (Table 28.10) listing activities, activity (SMAC) numbers and durations.
- 10 Carry out SMAC analysis at weekly intervals. The basic calculations for value hours, efficiency, etc. are shown in Table 28.11.
- 11 Draw a bar chart using the network as a basis for start and finish of activities (Figure 28.13).
- 12 Place the number of men per week against the activities on the bar chart.

Table 28.11 SMAC calculations

	<i>Day 5</i>	<i>Day 10</i>	<i>Day 15</i>
Budget manhours	530	530	530
Actual manhours	324	482	525
Value manhours	297	448	500
Percentage complete	$\frac{297}{530}$ = 56%	$\frac{448}{530}$ = 85%	$\frac{500}{530}$ = 94%
Est. final man hours	$\frac{324}{0.56}$ = 579	$\frac{482}{0.85}$ = 567	$\frac{525}{0.94}$ = 559
Efficiency	$\frac{297}{324}$ = 92%	$\frac{448}{482}$ = 93%	$\frac{500}{525}$ = 95%

A = Actual manhours

B = Budget manhours

V = Value manhours

V = Value manhours = Percentage complete $\times$ B of activity

$$\Sigma\% \text{ complete} = \frac{\Sigma V}{\Sigma B}$$

$$\text{efficiency} = \frac{V}{A}$$

$$\text{Est. final} = \frac{A}{\% \text{ complete}}$$

Activities shifted: 17, 21, 22, 35, 55, 19

- 13 Add up vertically per week and draw the labour histogram and S-curve.
- 14 Carry out a resource-smoothing exercise to ensure that labour demand does not exceed supply for any particular trade. In any case, high peaks or troughs are signs of inefficient working and should be avoided here (Fig 28.14). (Note: This smoothing operation only takes place with activities which have float.)
- 15 Draw the project control curves using the weekly SMAC analysis results to show graphically the relationship between
 - Budget hours
 - Planned hours
 - Actual hours
 - Value hours
 - Predicted final hours (Figure 28.15).
- 16 Draw control curves showing
 - Percentage complete (progress)
 - Efficiency (Figure 28.15)

The procedures outlined above will give a complete control system for time and cost for the project as far as site work is concerned.

Cash flow

Cash flow charts show the difference between expenditure (cash out flow) and income (cash inflow). Since money is the common unit of measurement, all contract components such as manhours, materials, overheads and consumables have to be stated in terms of money values.

It is convenient to set down the parameters which govern the cash flow calculations before calculating the actual amounts. For the example being considered:

- 1 There are 1748 productive hours in a year ($39 \text{ hours/week} \times 52$) – 280 days of annual holidays, statutory holidays, sickness and travelling allowance and induction.
- 2 Each manhour costs, on average, £5 in actual wages.
- 3 After adding payments for productivity, holiday credits, statutory holidays, course attendance, radius and travel allowance, the taxable rate becomes £8.40/hour.

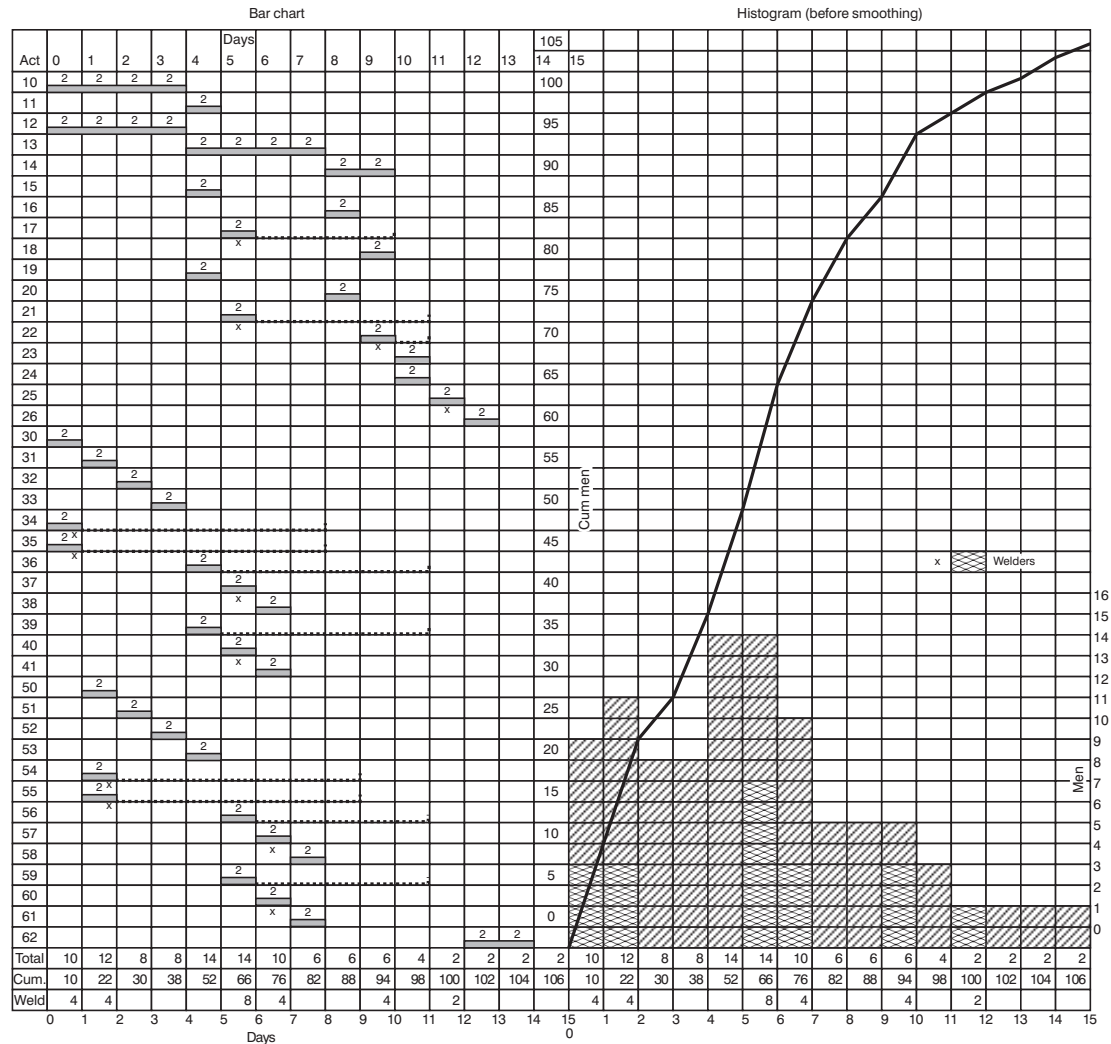


Figure 28.13 Bar chart

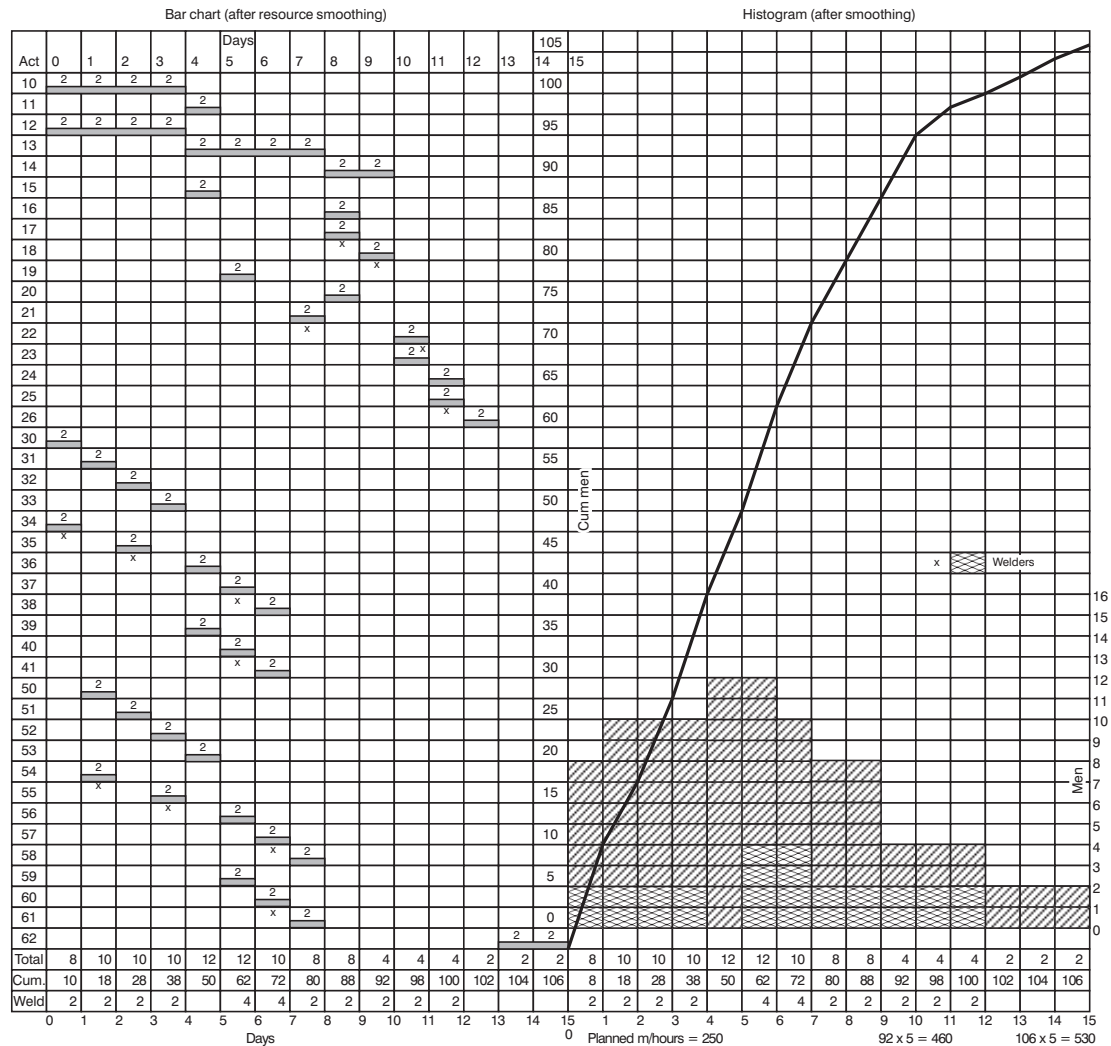


Figure 28.14 Bar chart after resource smoothing

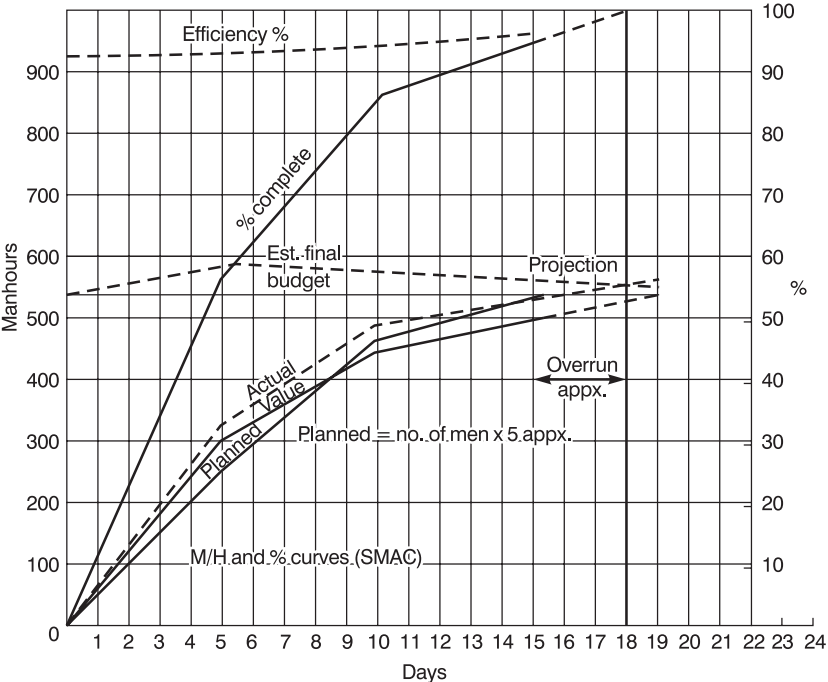


Figure 28.15

4 The addition of other substantive items such as levies, insurance, protective clothing and non-taxable fares and lodging increases the rate by £2.04 to £10.44/hour.

5 The ratio of other substantive items to taxable costs are $\frac{2.04}{8.40} = 0.243$

6 An on-cost allowance of 20% is made up of

Consumables	5%
Overheads	10%
Profit	<u>5%</u>
Total	20%

7 The total charge-out rate is, therefore, $10.44 \times 1.2 = £12.53$ per hour.

8 In this particular example

- (a) The men are paid at the end of each day at a rate of £8.40/hour.
- (b) The other substantive items of £2.04/hour are paid weekly.
- (c) Income is received weekly at the charge-out rate of £12.53/hour.

9 A week consists of 5 working days.

To enable the financing costs to be calculated at the estimate stage, cash flow charts are usually only drawn to show the difference between *planned* outgoings and *planned* income. However, once the contract is underway a constant check must be made between *actual* costs (outgoings taken from time cards) and *valued* income derived from valuations of useful work done. The calculations for days 5 and 10 in Table 28.12 show how this is carried out. When these figures are plotted on a chart as in Figure 28.16 it can be seen that for

days 0–5 the cash flow is negative (i.e. outgoings exceed income)

days 5–8 the cash flow is positive

days 8–10 the cash flow is negative

days 10–15 the cash flow is positive.

On day 15, the total value is recovered assuming there are no retentions.

The planned costs of the other substantives can be calculated for each period by multiplying the planned cumulative outgoings by the ratio of 0.243. Thus

For day 5 the substantive costs are $2391 \times 0.243 = \text{£}581$

For day 10 the substantive costs are $3826 \times 0.243 = \text{£}930$

For day 15 the substantive costs are $4455 \times 0.243 = \text{£}1083$.

These costs are plotted on the chart and, when added to the planned labour costs, give total planned outgoings of

$\text{£}2391 + 581 = 2972$ for day 5

$\text{£}3826 + 930 = 4756$ for day 10

$\text{£}4455 + 1083 = 5538$ for day 15

To obtain the *actual* total outgoings it is necessary to multiply the *actual* labour costs by 1.243: e.g. for day 5, the *actual* outgoings will be

$2722 \times 1.243 = \text{£}3383$

and for day 10 they will be

$4049 \times 1.243 = \text{£}5033$

The total planned and actuals can therefore be compared on a regular basis.

Table 28.12 Cash values

Activity	SMAC no.	Duration (days)	SMAC (budget) man hours	Planned cost at £8.40 per hour	Planned price at £12.53 per hour	Day 5				Day 10			
						Actual man hours	Actual cost at £8.40	Value hours	Value (price) at £12.53	Actual man hours	Actual cost at £8.40	Value hours	Value (price) at £12.53
Erect vessel steelwork	10	4	62	521	777	70	588	62	777	70	588	62	777
Erect vessel	11	1	11	92	138	12	101	11	138	12	101	11	138
Erect bridge sect. A	12	4	62	521	777	60	504	62	777	60	504	62	777
Erect bridge sect. B	13	4	62	521	777	40	336	31	388	65	546	62	777
Erect stairs	14	2	30	252	376	—	—	—	—	35	294	30	376
10-inch suct. head. erect A	15	1	9	76	113	10	84	9	113	10	84	9	113
10-inch suct. head. erect B	16	1	8	67	100	—	—	—	—	8	67	8	100
10-inch suct. head. welds A	17	1	15	126	188	—	—	—	—	18	151	15	188
10-inch suct. head. welds B	18	1	4	34	50	—	—	—	—	5	42	4	50
8-inch disch. head. erect A	19	1	6	50	75	6	50	5	63	6	50	6	75
8-inch disch. head. erect B	20	1	10	84	125	—	—	—	—	11	92	8	100
8-inch disch. head. welds A	21	1	3	25	38	—	—	—	—	3	25	3	38
8-inch disch. head. welds B	22	1	3	25	38	—	—	—	—	—	—	—	—
Suction header supports	23	1	6	50	75	—	—	—	—	7	59	4	50
Discharge header supports	24	1	6	50	75	—	—	—	—	—	—	—	—
Final connection	25	1	1	8	13	—	—	—	—	—	—	—	—
Hydro test	26		12	101	150	—	—	—	—	—	—	—	—

Base plate pump 1	30	1	4	34	50	3	25	4	50	3	25	4	50
Fit pump 1	31	1	14	118	175	14	118	14	175	14	118	14	175
Fit motor 1	32	1	14	118	175	12	101	14	175	12	101	14	175
Fit coupling 1	33	1	10	84	125	12	101	10	125	12	101	10	125
Prefab. suct. pipe 1	34	1	6	50	75	10	84	6	75	10	84	6	75
Prefab. discharge pipe 1	35	1	5	42	63	4	34	4	50	5	42	5	63
Erect suction pipe 1	36	1	7	59	88	–	–	–	–	8	67	7	88
Weld suction pipe 1	37	1	7	59	88	–	–	–	–	5	42	7	88
Support suction pipe 1	38	1	4	34	50	–	–	–	–	4	34	3	38
Erect discharge pipe 1	39	1	6	50	75	5	42	4	50	7	59	6	75
Weld discharge pipe 1	40	1	4	34	50	–	–	–	–	4	34	4	50
Support discharge pipe 1	41	1	4	34	50	–	–	–	–	2	17	2	25
Base plate pump 2	50	1	4	34	50	3	25	4	50	3	25	4	50
Fit pump 2	51	1	14	118	175	14	118	14	175	14	118	14	175
Fit motor 2	52	1	14	118	175	12	101	14	175	12	101	14	175
Fit coupling 2	53	1	10	84	125	10	84	10	125	10	84	10	125
Prefab. suction pipe 2	54	1	6	50	75	10	84	6	75	10	84	6	75
Prefab. discharge pipe 2	55	1	5	42	63	6	50	5	63	6	50	5	63
Erect suction pipe 2	56	1	7	59	88	5	42	4	50	8	67	7	88
Weld suction pipe 2	57	1	7	59	88	–	–	–	–	5	42	7	88
Support suction pipe 2	58	1	4	34	50	–	–	–	–	2	17	2	25
Erect discharge pipe 2	59	1	6	50	75	6	50	4	50	8	67	6	75
Weld discharge pipe 2	60	1	4	34	50	–	–	–	–	5	42	4	50
Support discharge pipe 2	61	1	4	34	50	–	–	–	–	3	25	3	38
Align couplings 1 & 2	62	2	50	420	627	–	–	–	–	–	–	–	–
						324	2722	297	3719	482	4049	448	5613

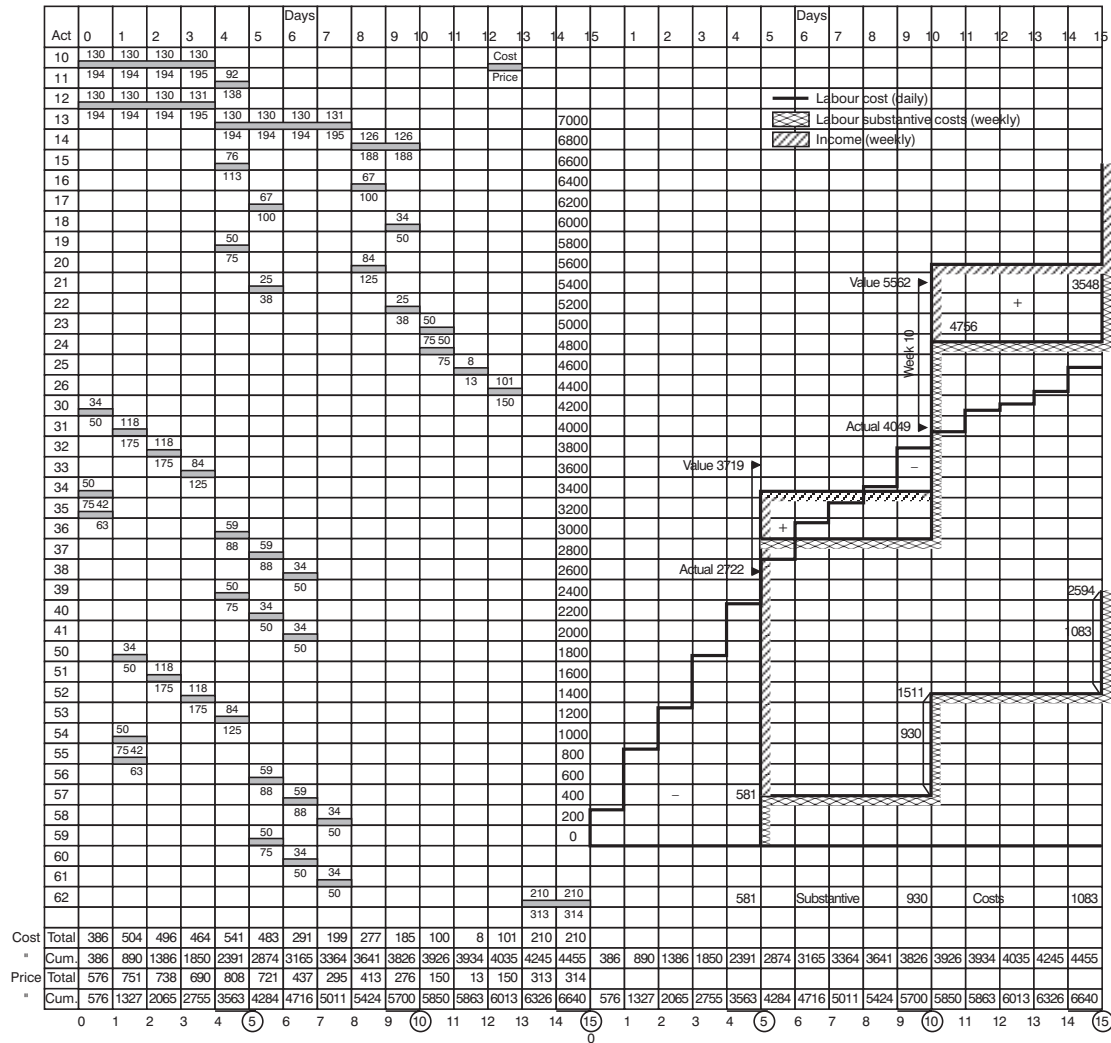


Figure 28.16

29

Example of integration of tools and techniques

The example in this chapter shows how all the tools and techniques described so far can be integrated to give a comprehensive project management system. The project chosen is the design, manufacture and distribution of a prototype motor car and while the operations and time scales are only indicative and do not purport to represent a real life situation, the examples show how the techniques follow each other in a logical sequence.

The prototype motor car being produced is illustrated in Figure 29.1 and the main components of the engine are shown in Figure 29.2. It will be seen that the letters given to the engine components are the activity identity letters used in planning networks.

The following gives an oversight of the main techniques and their most important constituents.

As with all projects, the first document to be produced is the *Business Case* which should also include the chosen option investigated for the

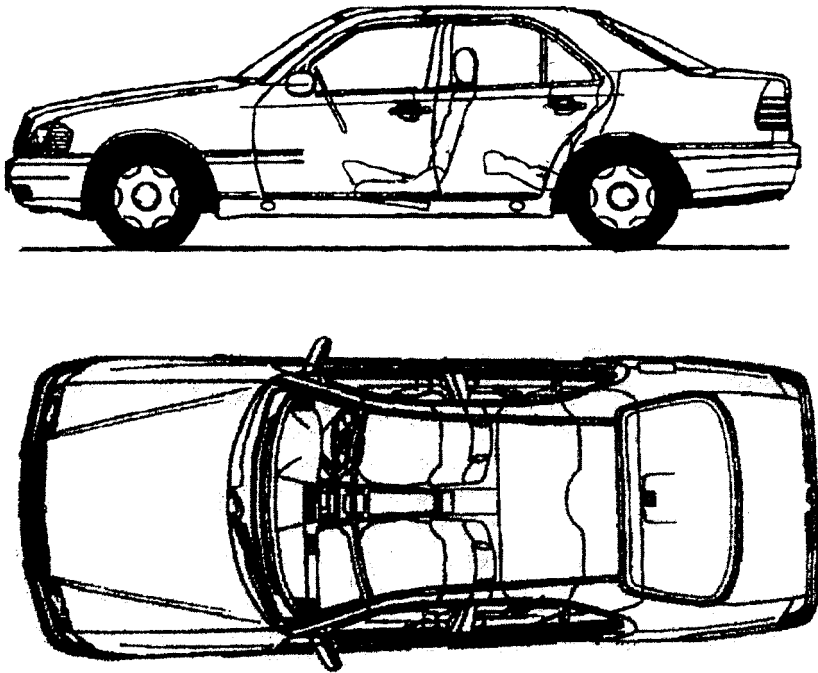


Figure 29.1

Investment Appraisal. In this exercise, the questions to be asked (and answered) are shown in Table 29.1.

It is assumed that the project requires an initial investment of £60 million and that over a 5 year period, 60 000 cars (units) will be produced at a cost of £5000 per unit. The assumptions are that the discount rate is 8% and there are two options for phasing the manufacture:

- (a) That the factory performs well for the first two years but suffers some production problems in the next three years (option 1);
- (b) That the factory has teething problems in the first three years but goes into full production in the last two (option 2).

The *Discounted Cash Flow* (DCF) calculations can be produced for both options as shown in Tables 29.2 and 29.3.

To obtain the *Internal Rate of Return* (IRR), an additional discount rate (in this case 20%) must be applied to both options. The resulting calculations are

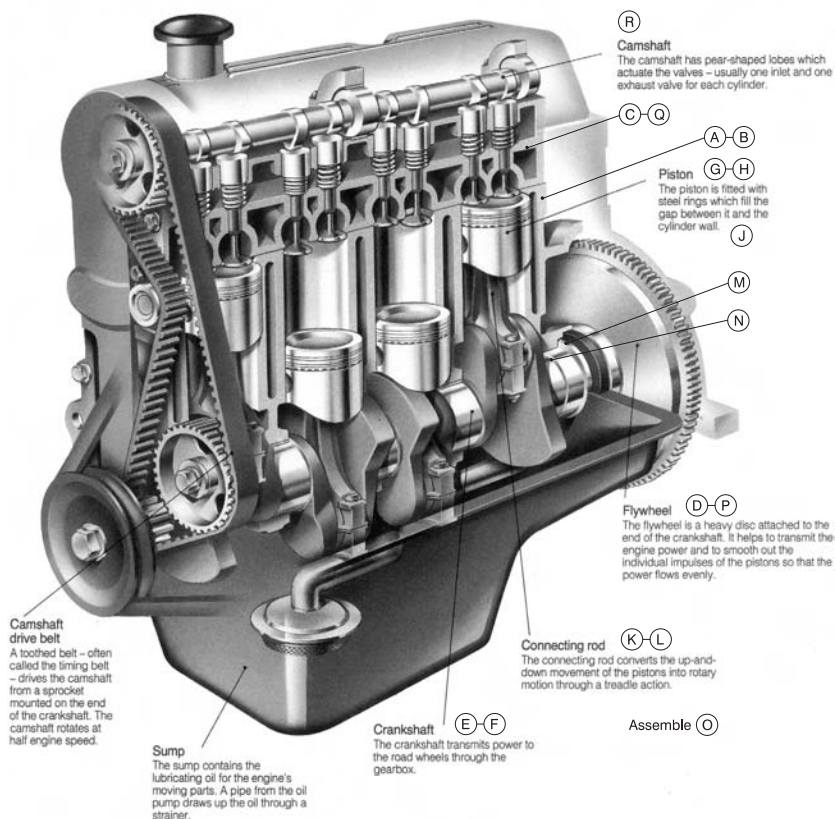


Figure 29.2 The parts of an overhead-camshaft engine

shown in Tables 29.4 and 29.5 and the graph showing both options is shown in Figure 29.3. This gives an IRR of 20.2% and 15.4%, respectively.

It is now necessary to carry out a cash flow calculation for the distribution phase of the cars. To line up with the DCF calculations, two options have to be examined. These are shown in Tables 29.6 and 29.7 and the graphs in Figures 29.4 and 29.5 for option 1 and option 2, respectively. An additional option 2a in which the income in years 2 and 3 is reduced from £65 000K to £55 000K is shown in the cash flow curves of Figure 29.6

All projects carry an element of *Risk* and it is prudent to carry out a risk analysis at this stage. The types of risks that can be encountered, the possible actual risks and the mitigation strategies are shown in Table 29.8. A risk log (or risk register) for five risks is given in Figure 29.7

Table 29.1

Business Case

Why do we need a new model?

What model will it replace?

What is the market?

Will it appeal to the young, the middle aged, families, the elderly, women, trendies, yobos?

How many can we sell per year in the UK, the USA, the EEC and other countries?

What is the competition for this type of car and what is their price?

Will the car rental companies buy it?

What is the max. and min. selling price?

What must be the max. manufacturing cost and in what country will it be built?

What name shall we give it?

Do we have a marketing plan?

Who will handle the publicity and advertising?

Do we have to train the sales force and maintenance mechanics?

What should be the insurance category?

What warranties can be given and for how long?

What are the main specifications regarding

Safety and theft proofing?

Engine size (cc) or a number of sizes?

Fuel consumption?

Emissions (pollution control)?

Catalytic converter?

Max. speed?

Max. acceleration?

Size and weight?

Styling?

Turning circle and ground clearance?

What 'extras' must be fitted as standard?

ABS

Power steering

Air bags

Electric windows and roof

Cruise control

Air conditioning

What % can be recycled

Investment Appraisal (options)

Should it be a Saloon, Coupé, Estate, People Carrier, Convertible, 4 × 4, Mini?

Will it have existing or newly designed engine?

Will it have existing or new platform (chassis)?

Do we need a new manufacturing plant or can we build it in an existing one?

Should the engine be cast iron or aluminium?

Should the body be steel, aluminium or fibreglass?

Do we use an existing brand name or devise a new one?

Will it be fuelled on petrol, diesel, electricity or hybrid power unit?

DCF of investment returns, NPV, cash flow?

Table 29.2

DCF of Investment Returns (Net Present Value)

Initial Investment £60 000K 5 Year period
Total car production 60 000 Units @ £5000/Unit

Option 1

<i>Year</i>	<i>Production Units</i>	<i>Income £K</i>	<i>Cost £K</i>	<i>Net Return £K</i>	<i>Discount Rate</i>	<i>Discount Factor</i>	<i>Present Value £K</i>
1	15 000	100 000	75 000	25 000	8%	0.926	23 150
2	15 000	100 000	75 000	25 000	8%	0.857	21 425
3	10 000	65 000	50 000	15 000	8%	0.794	11 910
4	10 000	65 000	50 000	15 000	8%	0.735	11 025
5	10 000	65 000	50 000	15 000	8%	0.681	10 215
Totals				95 000			77 725

Net Present Value (NPV) = 77 725 – 60 000 = £17 725K

Profit = £95 000K – £60 000K = £35 000K

Average Rate of Return (undiscounted) = £95 000/5 = £19 000K per annum

Return on Investment = £19 000/£60 000 = 31.66%

Table 29.3

DCF of Investment Returns (Net Present Value)

Initial Investment £60 000K 5 Year period
Total car production 60 000 Units @ £5000/Unit

Option 2

<i>Year</i>	<i>Production Units</i>	<i>Income £K</i>	<i>Cost £K</i>	<i>Net Return £K</i>	<i>Discount Rate</i>	<i>Discount Factor</i>	<i>Present Value £K</i>
1	10 000	65 000	50 000	15 000	8%	0.926	13 890
2	10 000	65 000	50 000	15 000	8%	0.857	12 855
3	10 000	65 000	50 000	15 000	8%	0.794	11 910
4	15 000	100 000	75 000	25 000	8%	0.735	18 375
5	15 000	100 000	75 000	25 000	8%	0.681	17 025
Totals				95 000			74 055

Net Present Value (NPV) = 74 055 – 60 000 = £14 055K

Profit = £95 000K – £60 000K = £35 000K

Average Rate of Return (undiscounted) = £95 000/5 = £19 000K per annum

Return on Investment = £19 000/£60 000 = 31.66%

Table 29.4

Internal Rate of Return (IRR)							
Option 1							
<i>Year</i>	<i>Net Return £K</i>	<i>Disc. Rate</i>	<i>Disc. Factor</i>	<i>Present Value £K</i>	<i>Disc. Rate</i>	<i>Disc. Factor</i>	<i>Present Value £K</i>
1	25 000	15%	0.870	21 750	20%	0.833	20 825
2	25 000	15%	0.756	18 900	20%	0.694	17 350
3	15 000	15%	0.658	9 870	20%	0.579	8 685
4	15 000	15%	0.572	8 580	20%	0.482	7 230
5	15 000	15%	0.497	7 455	20%	0.402	6 030
Totals	60 000			66 555			60 120
Less Investment				–60 000			–60 000
Net Present Value				£6 555K			£120K
Internal Rate of Return (from graph) = 20.2%							

Table 29.5

Internal Rate of Return (IRR)							
Option 2							
<i>Year</i>	<i>Net Return £K</i>	<i>Disc. Rate</i>	<i>Disc. Factor</i>	<i>Present Value £K</i>	<i>Disc. Rate</i>	<i>Disc. Factor</i>	<i>Present Value £K</i>
1	15 000	15%	0.870	13 050	20%	0.833	12 495
2	15 000	15%	0.756	11 340	20%	0.694	10 410
3	15 000	15%	0.658	9 870	20%	0.579	8 685
4	25 000	15%	0.572	14 300	20%	0.482	12 050
5	25 000	15%	0.497	12 425	20%	0.402	10 050
Totals	60 000			60 985			53 690
Less Investment				–60 000			–60 000
Net Present Value				£985K			–£6 310K
Internal Rate of Return (from graph) = 15.4%							

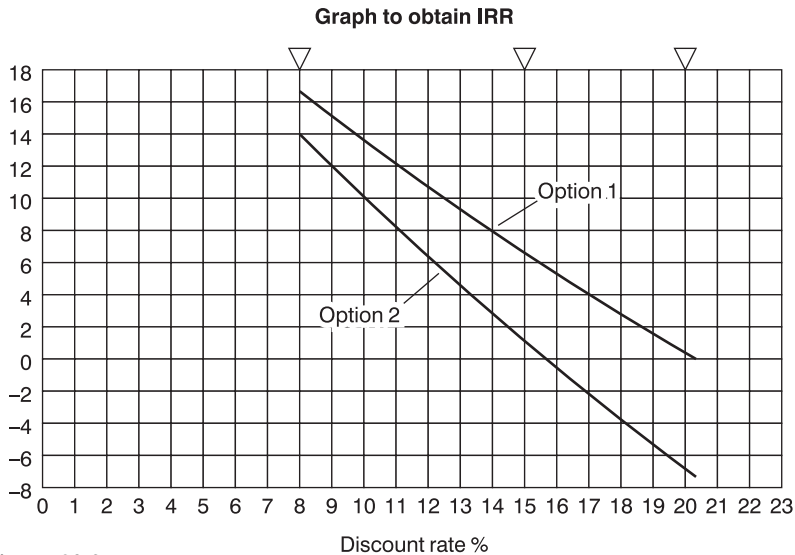


Figure 29.3

Once the decision has been made to proceed with the project, a *Project Life Cycle* diagram can be produced. This is shown on Figure 29.8 together with the constituents of the seven phases envisaged.

The next stage is the *Product Breakdown Structure* (Figure 29.9), followed by a combined *Cost Breakdown Structure* and *Organisation Breakdown Structure* (Figure 29.10). By using these two, the *Responsibility Matrix* can be drawn up (Figure 29.11).

It is now necessary to produce a programme. The first step is to draw an *Activity List* showing the activities and their dependencies and durations.

Table 29.6

Cash Flow							
Option 1							
Year		1	2	3	4	5	Cumulative
Capital	£K	12 000	12 000	12 000	12 000	12 000	
Costs	£K	75 000	75 000	50 000	50 000	50 000	
Total	£K	87 000	87 000	62 000	62 000	62 000	360 000
Cumulative		87 000	174 000	236 000	298 000	360 000	
Income	£K	100 000	100 000	65 000	65 000	65 000	395 000
Cumulative		100 000	200 000	265 000	330 000	395 000	

Table 29.7

Cash Flow							
Option 2							
Year		1	2	3	4	5	Cumulative
Capital	£K	12 000	12 000	12 000	12 000	12 000	
Costs	£K	50 000	50 000	50 000	75 000	75 000	
Total	£K	62 000	62 000	62 000	87 000	87 000	360 000
Cumulative		62 000	124 000	186 000	273 000	360 000	
Income	£K	65 000	65 000	65 000	100 000	100 000	395 000
Cumulative		65 000	130 000	195 000	295 000	395 000	

These are shown in the first four columns of Table 29.9. It is now possible to draw the *Critical Path Network* in either *AoN* format (Figure 29.12), *AoA* format (Figure 29.13) or as a *Lester diagram* (Figure 29.14).

After analysing the network diagram, the *Total Floats* and *Free Floats* of the activities can be listed (Table 29.10).


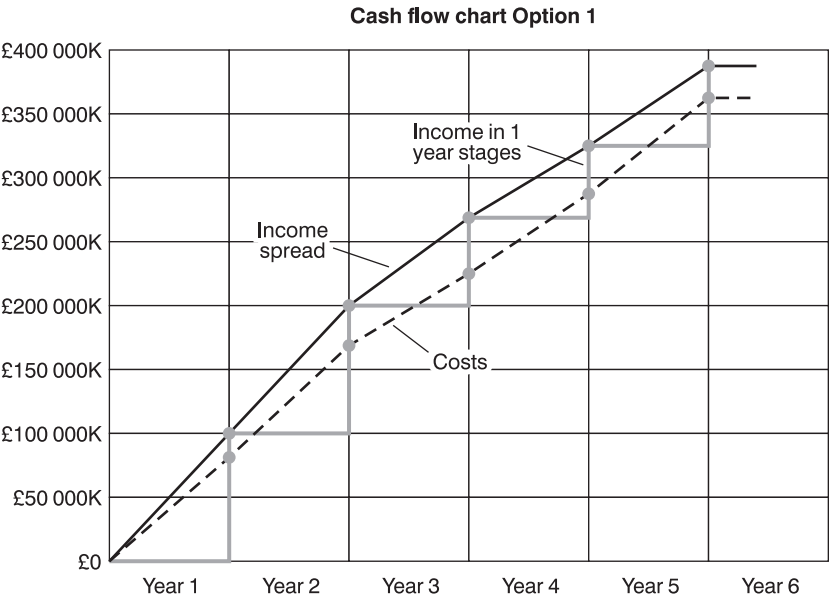


Figure 29.4

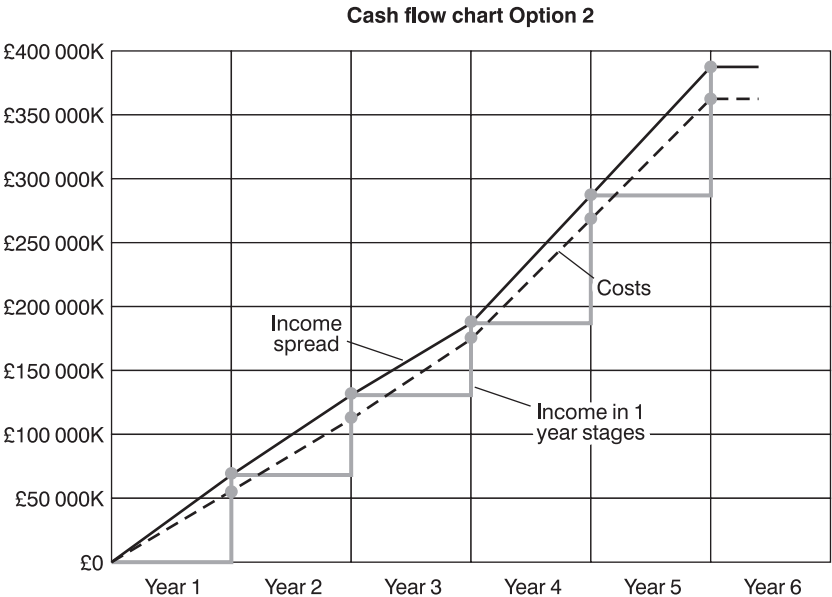

If income falls to £55 000K in years 2 and 3:

Income	£K	=	65 000	55 000	55 000	100 000	100 000
Cumulative		=	65 000	120 000	175 000	275 000	375 000

Figure 29.5

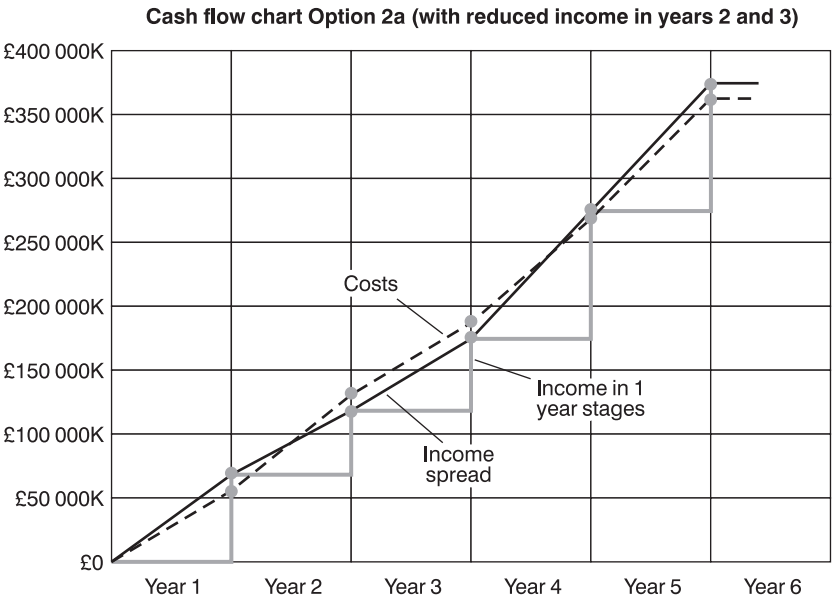


Figure 29.6

Apart from the start and finish, there are four milestones (days 8, 16, 24 and 30). These are described and plotted on the *Milestone Slip Chart* (Figure 29.15).

The network programme can now be converted into a bar chart (Figure 29.16) on which the resources (in men per day) as given in the fifth column

Table 29.8

Risk Analysis

Types of risks

Manufacturing (machinery and facilities) costs
Sales and marketing, exchange rates
Reliability
Mechanical components performance
Electrical components performance
Maintenance
Legislation (emissions, safety, recycling, labour, tax)
Quality

Possible risks

Won't sell in predicted numbers
Quality in design, manufacture, finish
Maintenance costs
Manufacturing costs
New factory costs
Tooling costs
New factory not finished on time
Training problems
Suppliers unreliable
Rust proofing problems
Performance problems
Industrial disputes
Electrical and electronic problems
Competition too great
Not ready for launch date (exhibition)
Safety requirements
Currency fluctuations


Mitigation strategy

Overtime
More tests
More research
More advertising/marketing
Insurance
Re-engineering
Contingency

RISK LOG										
Project: Key: H – High; M – Medium; L – Low				Prepared by: <i>A.L.</i>				Reference: Date: <i>12.12.2000</i>		
Type of Risk	Description of Risk	Probability			Impact			Risk Reduction Strategy	Contingency Plans	Risk Owner
		H	M	L	Perf.	Cost	Time			
<i>R1</i>	<i>Factory not</i>						<i>3 months</i>	<i>Work more</i>	<i>Cancel</i>	
<i>Manufact.</i>	<i>finished on time</i>			<i>10%</i>		<i>1M</i>	<i>delay</i>	<i>overtime</i>	<i>launch of car</i>	<i>PM</i>
<i>R2</i>	<i>Window mechanism</i>				<i>Not</i>		<i>1 week to</i>	<i>Test motor</i>	<i>Use manual</i>	<i>Chief</i>
<i>Quality</i>	<i>faulty</i>		<i>50%</i>		<i>serious</i>	<i>5K</i>	<i>rectify</i>		<i>winder</i>	<i>Designer</i>
<i>R3</i>	<i>Air bags may</i>						<i>1 week to</i>	<i>Run mode</i>	<i>Remove Air</i>	<i>Chief</i>
<i>Safety</i>	<i>explode</i>			<i>1%</i>	<i>Serious</i>	<i>10K</i>	<i>rectify</i>	<i>tests</i>	<i>bags</i>	<i>Designer</i>
<i>R4</i>	<i>Emission levels</i>						<i>1 year to</i>	<i>Increase</i>	<i>Buy another</i>	<i>Chief</i>
<i>Legislation</i>	<i>will be reduced</i>		<i>50%</i>		<i>Serious</i>	<i>3M</i>	<i>modify CC</i>	<i>research</i>	<i>proven conv.</i>	<i>Engineer</i>
<i>R5</i>	<i>Sales forecasts</i>				<i>Very</i>			<i>Increase</i>	<i>Reduce</i>	
<i>Sales</i>	<i>will not be met</i>		<i>30%</i>		<i>serious</i>	<i>10M</i>		<i>advertising</i>	<i>price</i>	<i>PM</i>

Figure 29.7
 Copyright © 1996 WPMC Ltd. All rights reserved

Product and Project Life Cycle

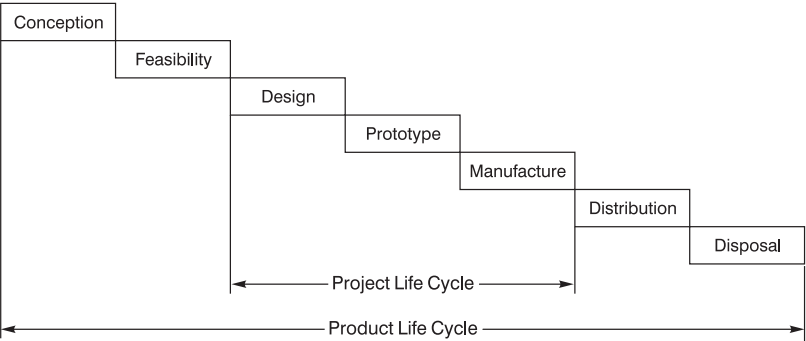

Phases

- Conception:* Original idea, high level discussions, preliminary market research
- Feasibility:* Consumer survey, market survey, type and size of car, production run and costs
- Design:* Vehicle design, tool design, development, component tests
- Prototype:* Tooling, production line, limited production, arctic and desert testing
- Manufacture:* Mass production, operator training, spares build up, customizing
- Distribution:* Deliveries, staff training, sales conferences, marketing, advertising, exhibitions
- Disposal:* Dismantling production line, selling tools, negotiating licences for spares

The phases could overlap.
The end of each phase could be a decision point to stop or proceed.

Figure 29.8

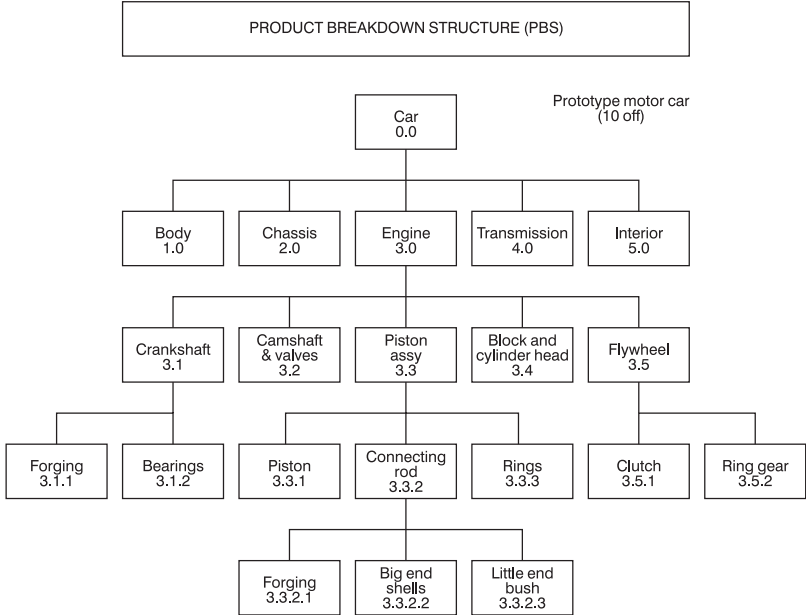


Figure 29.9

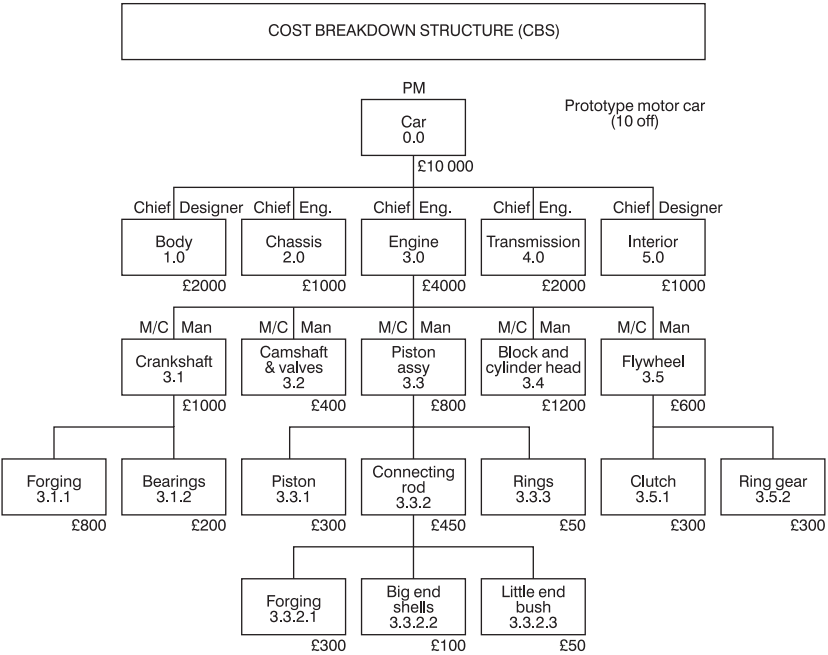


Figure 29.10

of Table 29.9 can be added. After summing the resources for every day, it has been noticed that there is a peak requirement of 12 men in days 11 and 12. As this might be more than the available resources, the bar chart can be adjusted by utilizing the available floats to *smooth* the resources and eliminate the peak demand. This is shown in Figure 29.17 by delaying the start of activities D and F.

Responsibility Matrix							
	Sponsor	Project manager	Chief designer	Chief engineer	M/C shop manager	Chassis manager	Styling manager
Body	B	B	A	D	D	D	C
Chassis		B		A	C	C	
Engine	B	B		A	C	D	
Transmission		B		A	C	C	
Interior	B	B	A	D	D	D	C

A Main responsibility
B Must be advised
C Must be consulted
D Requires updates

Figure 29.11

In Figure 29.18, the man days of the unsmoothed bar chart have been multiplied by 8 to convert them into manhours. This was necessary to carry out *Earned Value Analysis*. The daily manhour totals can be shown as a *histogram* and the cumulative totals are shown as an 'S' curve. In a similar way Figure 29.19 shows the respective histogram and 'S' curve for the smoothed bar chart.

It is now possible to draw up a table of *Actual Manhour* usage and % *complete* assessment for reporting day nos. 8, 16, 24 and 30. These, together with the *Earned Values* for these periods are shown in Table 29.11. Also shown is the efficiency (CPI), SPI, and the predicted final completion costs and times as calculated at each reporting day.

Using the unsmoothed bar chart histogram and 'S' curve as a *Planned manhour* base, the Actual manhours and Earned Value manhours can be

Table 29.9 Activity list of motor car engine manufacture and assembly (10 off), 8 hours/day

<i>Activ. letter</i>	<i>Description</i>	<i>Dependency</i>	<i>Duration days</i>	<i>Men per day</i>	<i>Man hours per day</i>	<i>Total man hours</i>
A	Cast block and cylinder head	Start	10	3	24	240
B	Machine block	A	6	2	16	96
C	Machine cylinder head	B	4	2	16	64
D	Forge and mc. flywheel	E	4	2	16	64
E	Forge crankshaft	Start	8	3	24	192
F	Machine crankshaft	E	5	2	16	80
G	Cast pistons	A	2	3	24	48
H	Machine pistons	G	4	2	16	64
J	Fit piston rings	H	1	2	16	16
K	Forge connecting rod	E	2	3	24	48
L	Machine conn. rod	K	2	2	16	32
M	Fit big end shells	L	1	1	8	8
N	Fit little end bush	M	1	1	8	8
O	Assemble engine	B, F, J, N	5	4	32	160
P	Fit flywheel	D, O	2	4	32	64
Q	Fit cylinder head	C, P	2	2	16	32
R	Fit camshaft and valves	Q	4	3	24	96
Total						1312

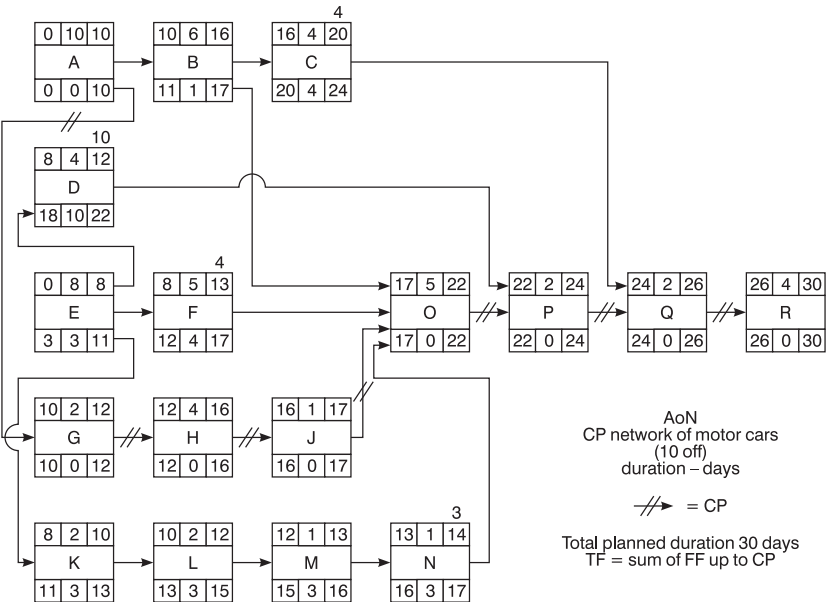


Figure 29.12

plotted on the graph in Figure 29.20. This graph also shows the % complete and % efficiency at each of the four reporting days.

Finally Table 29.12 shows the actions required for the *Close-Out* procedure.

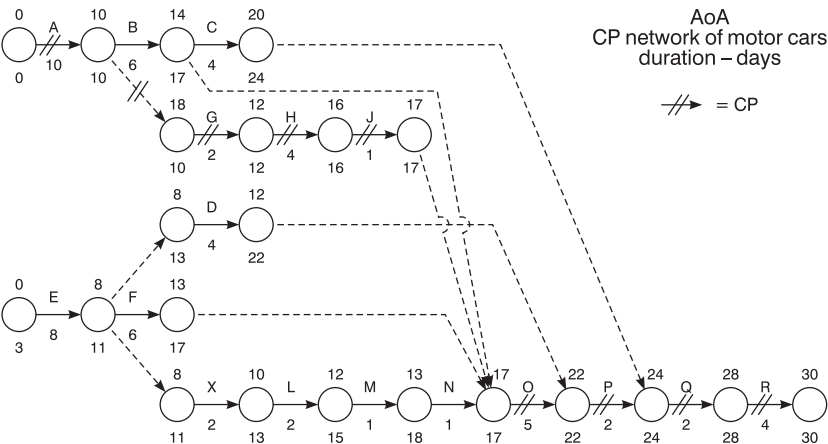


Figure 29.13

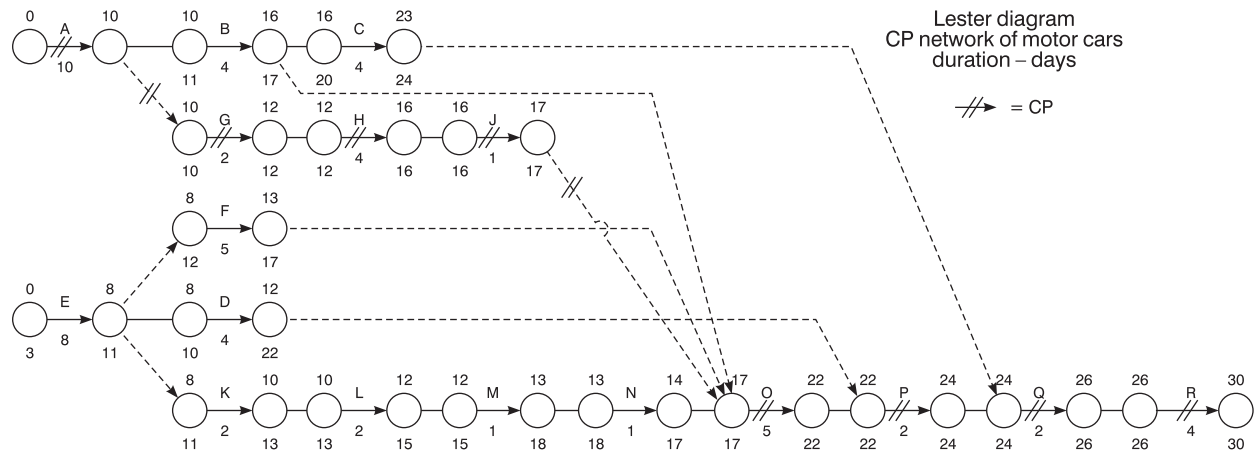



Figure 29.14

Table 29.10
Activity Floats
From CP network

<i>Activ. letter</i>	<i>Description</i>	<i>Duration</i>	<i>Total float</i>	<i>Free float</i>
A	Cast block and cylinder head	10	0	0
B	Machine block	6	1	0
C	Machine cylinder head	4	4	4
D	Forge and mc. flywheel	4	10	10
E	Forge crankshaft	8	3	0
F	Machine crankshaft	5	4	4
G	Cast pistons	2	0	0
H	Machine pistons	4	0	0
J	Fit piston rings	1	0	0
K	Forge connecting rod	2	3	0
L	Machine conn. rod	2	3	0
M	Fit big end shells	1	3	0
N	Fit little end bush	1	3	3
O	Assemble engine	5	0	0
P	Fit flywheel	2	0	0
Q	Fit cylinder head	2	0	0
R	Fit camshaft and valves	4	0	0

Milestones

Milestone 1 Forge crankshaft (E) Day 8
Milestone 2 Machine pistons (H) Day 16
Milestone 3 Fit flywheel (P) Day 24
Milestone 4 Completion Day 30

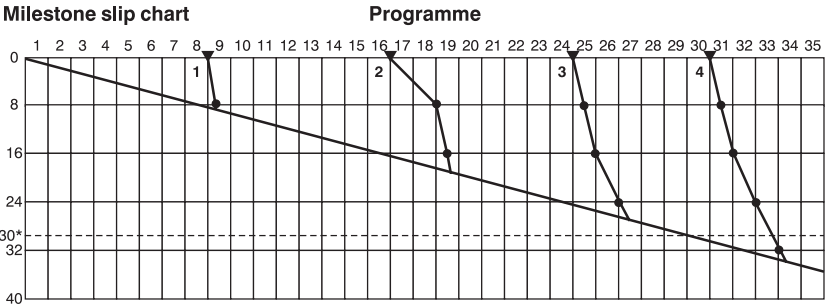

Assume:

* Reporting periods (8, 16, 24 and 30)
Milestone 1 slips ½ day
" 2 " 2 days, then ½ day
" 3 " ½ day, then ½ day, then 1 day
" 4 " ½ day, then ½ day, then 1 day, then 1 day

Figure 29.15

Bar chart of prototype motor cars (10 off)

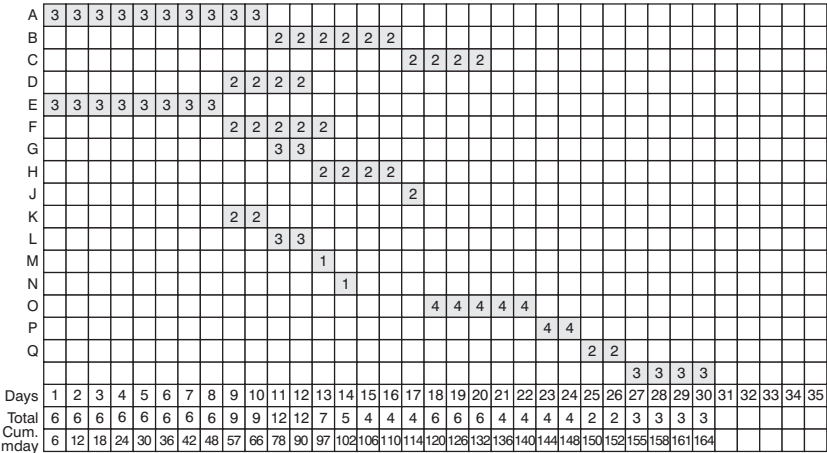


Figure 29.16 Unsmoothed

1 Business case

Need for new model. What type of car. Min./max. price. Manufacturing cost. Units per year Marketing strategy. What market sector is it aimed at. Main specification. What extras should be standard. Name of new model. Country of manufacture.

Bar chart of prototype motor cars (10 off) After moving D to start at day 18 and moving F to start at day 12

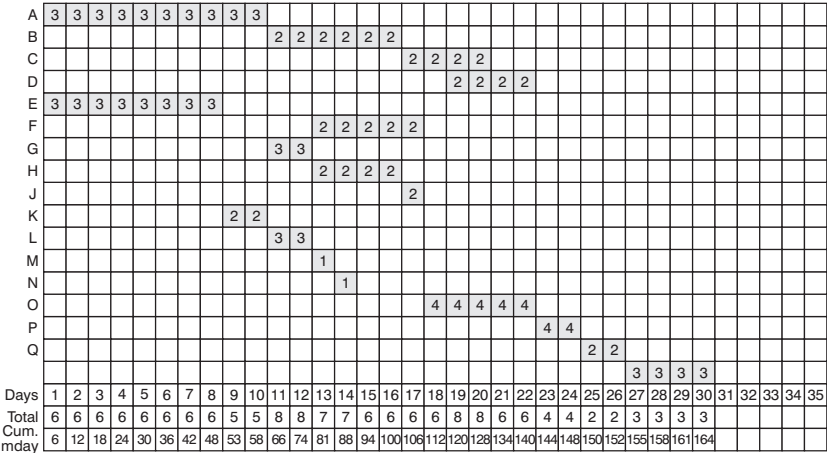


Figure 29.17 Smoothed

2 Investment appraisal

Options: Saloon, Coupé, Estate, Convertible, People carrier, 4 × 4. Existing or new engine. Existing or new platform. Materials of construction for engine, body. Type of fuel. New or existing plant. DCF of returns, NPV, Cash flow.

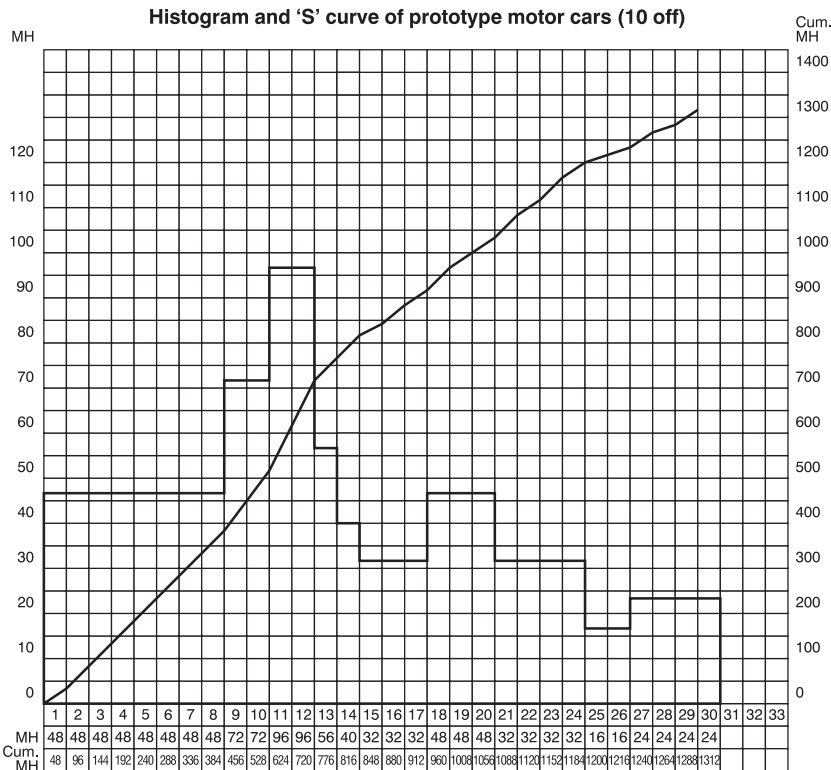


Figure 29.18

3 Project and product life cycle

- Conception: Original idea, submission to top management
- Feasibility: Feasibility study, preliminary costs, market survey
- Design: Vehicle and tool design, component tests
- Prototype: Tooling, production line, environmental tests
- Manufacture: Mass production, training
- Distribution: Deliveries, staff training, marketing
- Disposal: Dismantling of plant, selling tools

4 Work and product breakdown structure

Design, Prototype, Manufacture, Testing, Marketing, Distribution, Training.
Body, Chassis, Engine, Transmission, Interior, Electronics.
Cost Breakdown Structure, Organization Breakdown Structure, Responsibility Matrix.

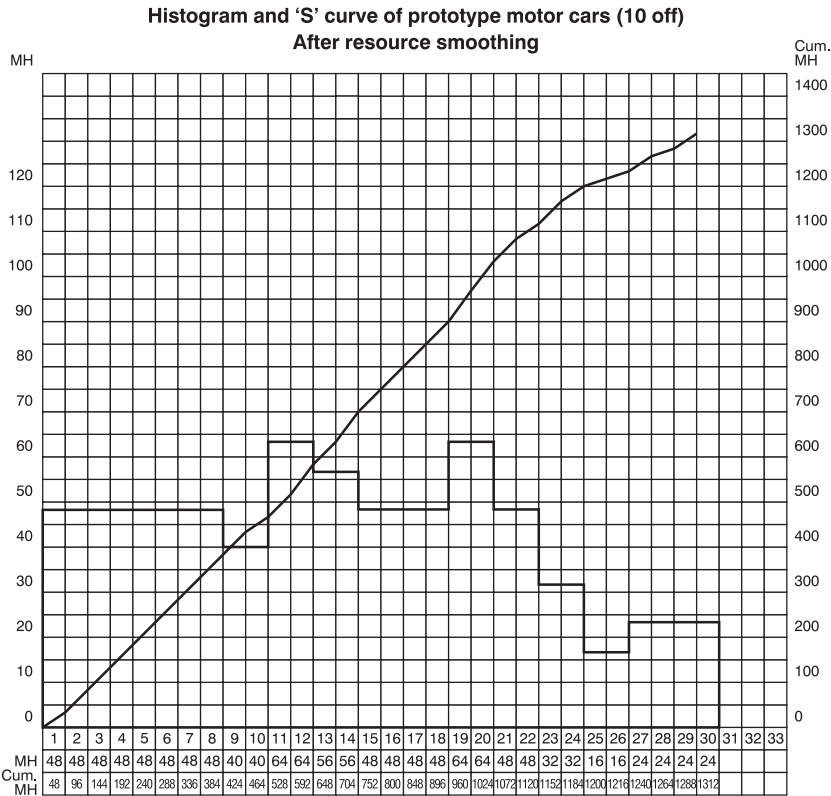


Figure 29.19

5 AoN network

Network diagram, forward and backward pass, floats, critical path, examination for overall time reduction, conversion to bar chart with resource loading, histogram, reduction of resource peaks, cumulative 'S' curve. Milestone slip chart.

Table 29.11 Manhour usage of motor car engine manufacture and assembly (10 off) (unsmoothed)

<i>Period</i>		<i>Day 8</i>			<i>Day 16</i>			<i>Day 24</i>			<i>Day 30</i>		
<i>Act.</i>	<i>Budget M/H</i>	<i>Actual cum.</i>	<i>% comp.</i>	<i>EV</i>	<i>Actual cum.</i>	<i>% comp.</i>	<i>EV</i>	<i>Actual cum.</i>	<i>% comp.</i>	<i>EV</i>	<i>Actual cum.</i>	<i>% comp.</i>	<i>EV</i>
A	240	210	80	192	260	100	240	260	100	240	260	100	240
B	96				30	20	19	110	100	96	110	100	96
C	64							70	100	64	70	100	64
D	64				60	50	32	80	100	64	80	100	64
E	192	170	80	154	200	100	192	200	100	192	200	100	192
F	80				70	80	64	90	100	80	90	100	80
G	48				54	100	48	60	100	48	60	100	48
H	64				60	80	51	68	100	64	68	100	64
J	16							16	100	16	16	100	16
K	48				52	100	48	52	100	48	52	100	48
L	32				40	100	32	40	100	32	40	100	32
M	8				6	80	6	8	100	8	8	100	8
N	8				6	80	6	8	100	8	8	100	8
O	160							158	90	144	166	100	160
P	64										80	100	64
Q	32										24	60	19
R	96										52	40	38
Total	1312	380		346	838		738	1220		1104	1384		1241
% complete			26.3			56.2			84.1			94.6	
Planned manhours			384			880			1184			1312	
Efficiency (CPI) %			91			88			90			90	
Est. final manhours			1442			1491			1458			1458	
SPI (cost)			0.90			0.84			0.93			0.96	
SPI (time)			0.90			0.86			0.92			0.89	
Est. completion day			33			36			32			31	

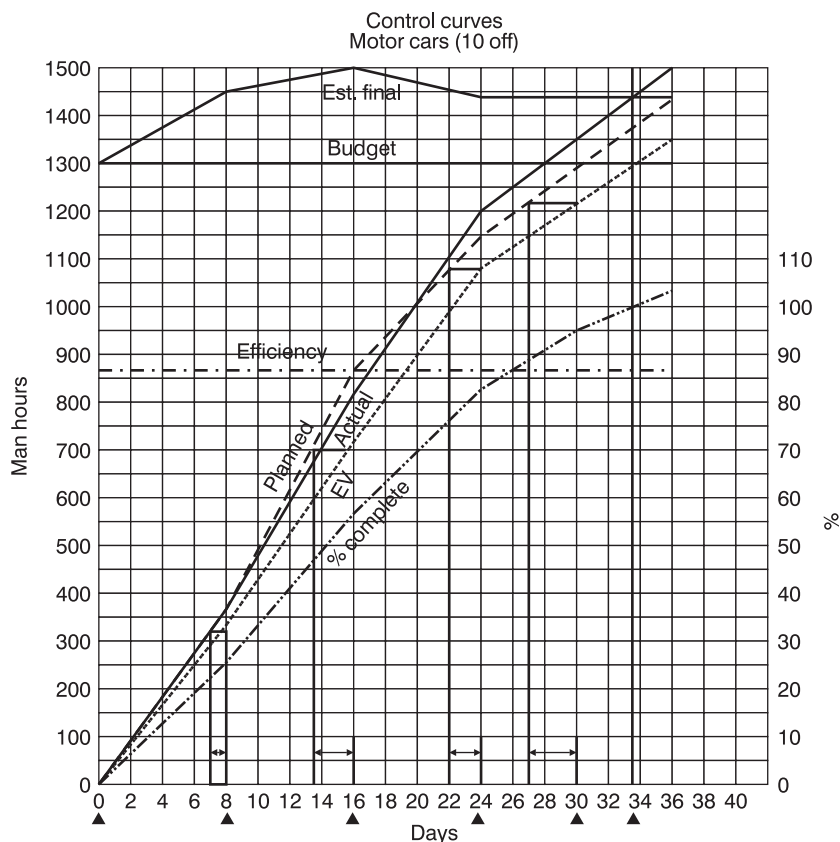


Figure 29.20 Unsmoothed resources

Table 29.12

Close-out

- Close-out meeting
- Store standard tools
- Sell special tools and drawings to Ruritania
- Clear machinery from factory
- Sign lease with supermarket that bought the site
- Sell spares to dealers
- Sell scrap materials
- Write report and highlight problems
- Press release and photo opportunity for last car
- Give away 600 000th production car to special lottery winner

6 Risk register

Types of risks: manufacturing, sales, marketing, reliability, components failure, maintenance, suppliers, legislation, quality. Qualitative and quantitative analysis. Probability and impact matrix. Risk owner. Mitigation strategy, contingency.

7 Earned value analysis

EVA of manufacture and assembly of engine, calculate Earned Value, CPI, SPI, cost at completion, final project time, draw curves of budget hours, planned hours, actual hours earned value, % complete, efficiency over four reporting periods.

8 Close-out

Close-out meeting

Close-out report

Instruction manuals

Test certificates

Spares lists

Dispose of surplus materials.

Hornet Windmill

Hornet Windmill is the latest version of the range of Hornet Software for Project Management that has been developed steadily over the past 20 years by Claremont Controls Ltd. This software system is designed for use on PCs and provides a high performance project planning and control tool for use with virtually any type of project. In its early versions the product was designed for use on the character style DOS displays of the first personal computers. Now current versions of the system have taken the product forward onto the Windows operating environment to provide a highly interactive, yet flexible and powerful management tool. Hornet Windmill may be used in both the single-project and multi-project environments, and includes an extremely powerful scheduling capacity and very comprehensive and flexible reporting capability.

Over recent years all PC-based project management software systems have become more interactive with direct entry of task details and logic on tabular grids and bar chart displays. Hornet Windmill is no exception as the following brief summary of the system's functionality

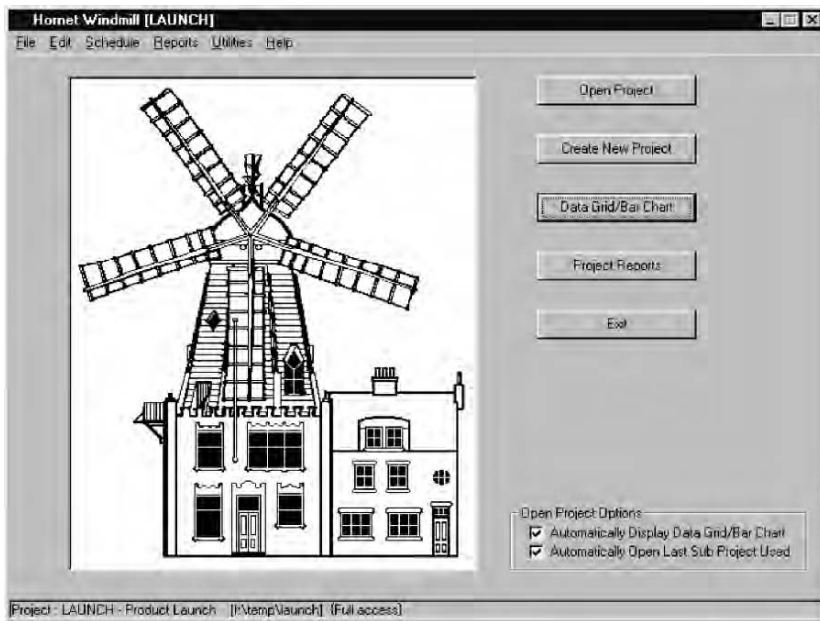


Figure 30.1 Hornet Windmill title screen

shows. Additionally the Hornet range of software is unique in directly supporting the management methods described by the author in earlier chapters of this book – specifically the drafting and numbering of network diagrams, and the SMAC Cost Control methodology. The following review does not detail the product’s features and functions – space does not permit this – but describes the range of facilities and the types of reporting that this system offers. By way of example the manner in which the SMAC Cost Control calculations are supported by Hornet Windmill is described.

The main display

The main display in Hornet Windmill is a combined data grid and interactive bar chart display. The data values for the project tasks are displayed on the grid section with task bars shown on the bar chart area.

Both sections of the display scroll vertically through the entire task list, whilst the bar chart section can also be scrolled horizontally through time, and the timescale contracted or expanded to show a larger or smaller slice of the project duration.

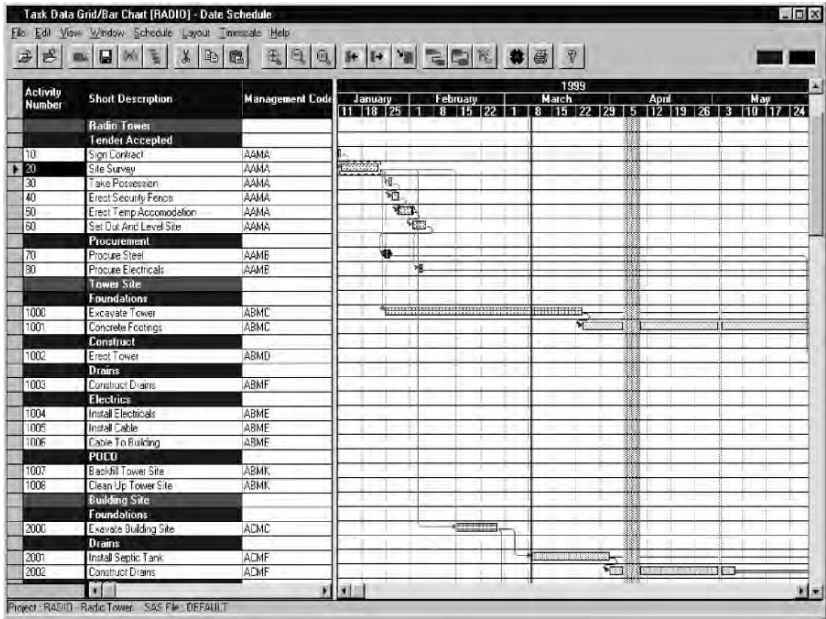


Figure 30.2 Main data grid and bar chart display

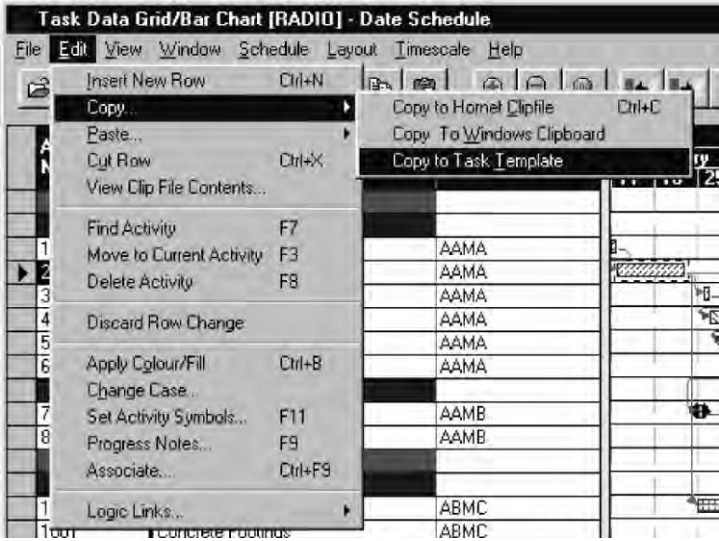


Figure 30.3 Pull-down menu displays

Also on the display are a series of drop-down menus that give access to the wide range of control options, settings and other project functions offered by Hornet Windmill. Under the menus is a toolbar holding a series of buttons that gives direct access to primary functions – like reschedule, link tasks or print a report.



Figure 30.4 Toolbar display

The display is controlled and driven by use of the menus, the toolbar buttons, specific function keys (or key combinations known as ‘hot-keys’), the mouse and the normal keyboard. As familiarity is gained with the system increased use is made of the toolbar buttons and special key combinations to access the required functions.

Task numbering

In Hornet Windmill the user can enter task data on the data grid side, or directly on the bar chart display – usually using a combination of both. Each task that is entered must be allocated a unique number or code – this may be a straight number like 10, 100, or an alphanumeric code like BAW34. Generally a normal numeric sequence is recommended as this is easy to trace and sort into sequence. Numbering tasks in a stepped sequence, for example in 10s, allows for any subsequent insertions although this is not essential as Hornet Windmill includes a powerful ‘renumber’ facility.

Task numbering can be used to great effect in formatting and controlling final reports. Task numbers can be defined down to intervals of 0.1 and 0.01 and the numbering related to the automatic ‘grouping’ or summarizing of tasks on displays and reports. By changing the selection options you can show a range of tasks split across successive lines – or produce a summary or roll-up report that covers different work sections. The level of summary obtained can be determined by specifying the range of numbers under which summaries are made – for instance, using number intervals of tenths, integers (whole numbers), tens, hundreds and thousands. An example of this is shown in Figure 30.5.

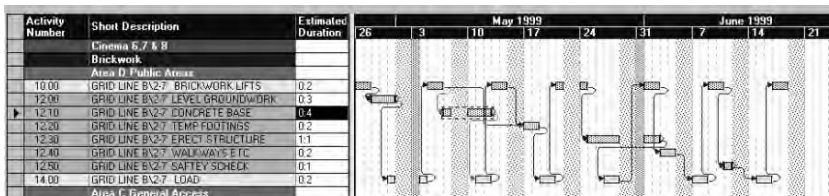


Figure 30.5 Using task numbering to define task groups and summaries

If the original project has been drafted by hand on a large sheet (see Chapter 13) then the task numbers can be related to the row and column numbers on the original sketch. These numbers will then be carried through the system by Hornet Windmill to draw the network diagram for the project in *exactly* the same style as drawn by hand (but neater!).

Task data values

Initially the two data values required for each task are a text title or description (not essential but it does help) and task duration. The latter can be specified in days, or weeks and days, or, if the project is related to smaller time periods, in half-days or hours. Interconnecting logic between the tasks is also required but this is described shortly. One major advantage of a software product over a manual approach is that one can readily associate extra data values with each task, and increase the level of detail or complexity given to each task.

The use of different *calendars* within a project is one of the most commonly used facilities. One can define a whole range of different working calendars – for instance, a five-day working week, a full seven-day working week, and a calendar for just two days’ working each weekend.

Each calendar can have a range of holidays added, Christmas, New Year, Easter etc., to give an accurate representation of a working pattern. If appropriate one can define a separate calendar for each member of staff. Calendars can also relate to different types of work or task; for instance, embankment settlement and concrete curing would be associated to a full working calendar as these tasks do not stop over weekends and holidays. Many users also associate tasks that are subcontracted to other companies to a global calendar as they have no interest in showing weekends and holidays for these items. Some tasks may be restricted to weekend or holiday periods only, for example road and rail closures. All these permutations can be reflected by applying project calendars.

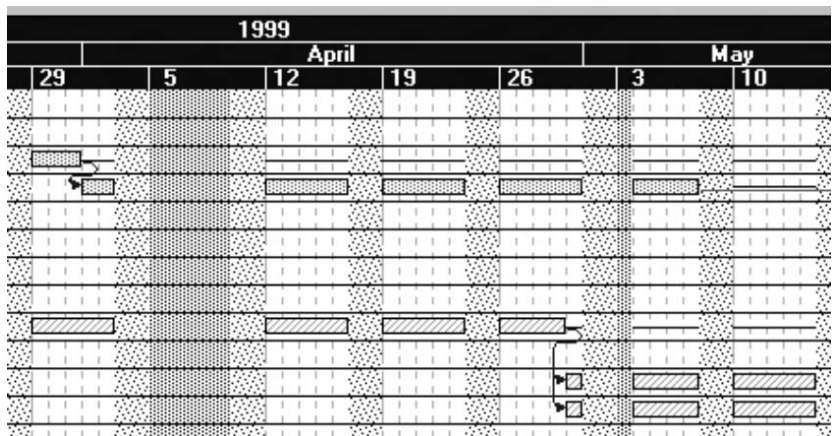


Figure 30.6 The use of calendars to show weekends and holidays

When a project is first planned then all tasks relate to ‘future’ work and the project schedule will run from the first work on site through to project completion. However, once work is underway the actual progress made in the field will need to be reflected in the project plan. This data is added to the project by recording the dates when each task commenced and, when completed, when it was finished. This information is vital as it allows Hornet Windmill to reschedule the uncompleted sections of the project based on the actual work done in the field. The results from this will show a revised future schedule based on the actual work done. To add this information data columns relating to actual start and finish dates, and a column for progress for tasks underway, are used.

Making the most of the task data

The task data entered into the Hornet Windmill system is already beyond the level of detail that can be managed in a manual calculation method, and with a computerized system much more can be achieved. Different text data fields can be used to hold alternative or extended task titles or notes; possibly task descriptions in an alternative language.

Tasks of different types can be colour coded, or a shading pattern applied, and legends included on reports to offer readers an easily identified coding system.

It is not necessary to restrict oneself to a single coding strategy as one can code tasks by both, say, responsibility *and* work type. One can then offer a



Figure 30.7 Selecting a shading style for task bars

report in two different styles – list tasks by responsibility and colour coding the display by work type, *and* list tasks by work type and colour coding by responsibility.

Additional data values can be included on the task data grid. Text notes and symbol designs can be added to the bar chart display to annotate the final report, for example to mark key stages or *milestones* in the project duration. Hornet Windmill offers a special panel to add and record a series of notes against each task, see Figure 30.8. This can be used as a record or *aide*

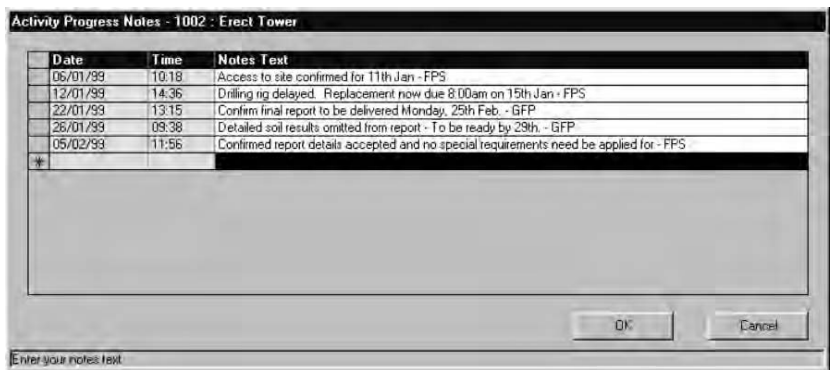


Figure 30.8 Panel recording task notes and comments

mémoire by the project manager to note pertinent details about the progress of each project task. These notes are automatically timed and dated and can be recalled and printed at any stage, possibly much later, to remind participants of precisely what contributed to the actual events in the field. If necessary file links or references can be created to other letters, designs and drawings held within the project archives – again facilitating any future need to collate information on a key event in the project’s development and execution. With a bit of thought the project manager can use the software to build a very powerful planning and reporting capability that encompasses just about every aspect of the project he or she is responsible for.

Coding tasks

As the project gets larger, more and more tasks will be added and any full report will run to many pages. Clearly some method of classifying the tasks into different sections, or different responsibilities, is required and this takes users into the task coding aspects of Hornet Windmill. This is one of the most powerful features of the product and a bit of forethought and care on setting up an appropriate coding strategy initially will ensure maximum focus of reporting later in the project. The simplest – and most versatile – coding method is to select key classifications that are relevant to your project. Examples include site location, work type, subcontractor code, person responsible, location within building etc. Each of these classifications is then

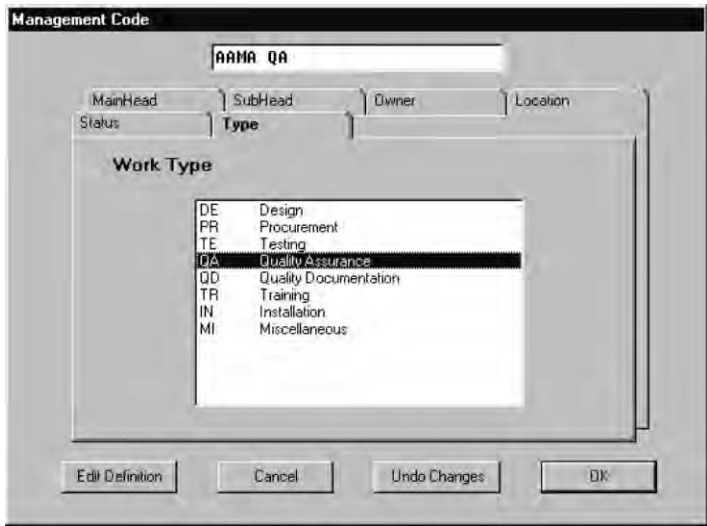


Figure 30.9 A customized coding prompt panel

broken down into a list of possible entries. Set up the coding letters for each entry in the prompt definition panel – each tab on the screen display covers a different coding classification – and you are then ready to code the project tasks.

Each task is coded under each classification using the prompt panel – global editing is possible to set a particular coding entry across a range of selected tasks. Once done these codes can be used to extract and list specific sections of the project, and sort the tasks into an appropriate order. All Hornet Windmill displays and reports support three levels of *Section Headings* and these are linked directly to the coding centres. It is an easy step to list tasks titled by *Site Section* (basement, ground, first, second and roof) and subtitled by *Work Type* (steel, concrete, flooring, walls, electrical, finishes). It is just as easy to reverse the titling to produce a second version of the report that lists by *Work Type* as the main heading, then *Site Section* as the subheading. If the coding classifications include *Responsibility* then one can list tasks under this heading with a separate report for each person giving them only the tasks they are responsible for. All this can be achieved without needing to recode or reclassify the tasks at any stage.

The task data display also shows the scheduled start and finish dates (both early and late dates), the different float values and other status information. If all potential data values were displayed at the same time then the grid display would be extremely wide and the user would need to scroll the display constantly left and right searching for specific values. Hornet Windmill offers a range of grid displays that show different sections of the task data giving complete control over the display contents. The user is free to adjust the display by resizing columns, changing the order of the columns and adding or removing specific values – the final layouts can be saved and recalled for later use. The grid includes a ‘lock left column’ facility that ensures the task number is held on the display whilst allowing the other columns to scroll.

The bar chart display

This section of the display is also interactive and allows direct control over the task bars. Bars can be dragged to required time locations and stretched to give the required duration period.

Stretching and dragging actions use the left mouse button to control selection and movement, whilst the right mouse button is used to add intertask logical constraints. The user can add a link between two tasks by using the mouse to draw a line between the end of the preceding task and the start of the

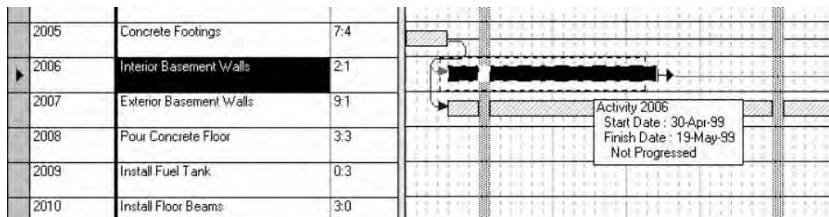


Figure 30.10 Stretching task bar 2006

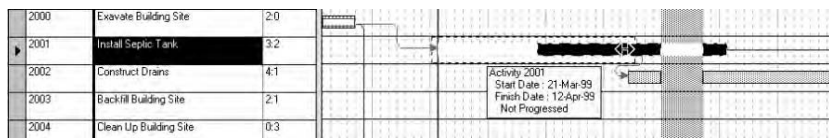


Figure 30.11 Dragging task bar 2001

succeeding task – the addition of a standard ‘finish to start’ logic constraint. Similar links in the styles ‘start to start’ and ‘finish to finish’ can also be added in this manner. Hornet Windmill supports the use of ‘logic delays’ on links and these can be added by using the ‘Ctrl’ key as the new link is drawn.

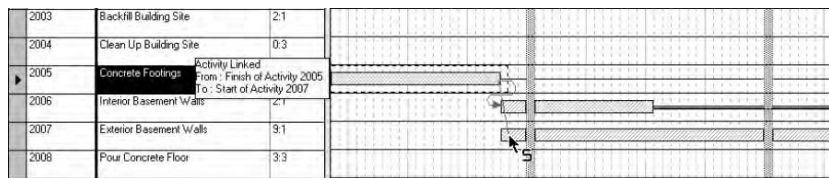


Figure 30.12 Adding a sequential FS link between tasks 2005 and 2007

In most projects the scheduling of the tasks relies on the entered logic links to determine where the tasks will be positioned in time. Thus as the bars on the display are dragged to a new position the next time the project is rescheduled Hornet Windmill will restore the bar to its correct position. If required this can be overridden by using the ‘drag-and-lock’ facility where tasks are left in the position given by the user permanently. This approach can be extended to build up an entire programme without the need to add *any* logic links between tasks. In any text on project management theory this approach is classified as the ultimate sin – however, it is a facility that is provided through user request.

Adding logic links on the screen display is a suitable method for relatively small projects as tasks are relatively close together on the display. However, in large projects adding links using a mouse can be tedious and prone to error – and cross-checking the entered logic can be virtually impossible. Hornet Windmill offers two solutions to overcome this problem: using the toolbar buttons to add links between previously selected tasks, or showing the logic links in a grid display that can be used to check, add and edit logic links.

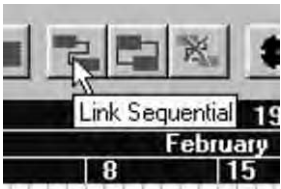


Figure 30.13 The three toolbar buttons for adding and removing logic links

The alternative data displays can be focused on either Precedent links (links running backwards) or Successor links (links running forward), and used alongside the direct entry on the bar chart display. Many users find this a more positive means of establishing the correct logic links on a project.

A screenshot of a data grid display titled "Activity Precedents - 1006 : Cable To Building". The grid has six columns: Precedent Activity, Precedent Description, Link Type, Precedent Delay, and Precedent Calendar. It lists three precedent activities for task 1006: 1005 (Install Cable), 2006 (Interior Basement Walls), and 2007 (Exterior Basement Walls). All are FS (Finish-to-Start) links with a delay of 0 and a calendar of Week. A fourth row with an asterisk in the first column is also present.

	Precedent Activity	Precedent Description	Link Type	Precedent Delay	Precedent Calendar
1	1005	Install Cable	FS		Week
2	2006	Interior Basement Walls	FS		Week
3	2007	Exterior Basement Walls	FS		Week
*					

Figure 30.14 Precedent logic links for task 1006 in a data grid display

Tracing of logic through a project is also supported by two tabular reports – a listing of all precedents *and* successors on a task-by-task basis – and a logic trace report that lists precedents to a given task, then lists the precedents to the precedents, and so on (the report can also work through successors). This form of ‘thread’ analysis can be invaluable on a large project as it identifies relationships between key tasks even when there is no direct link between them. A sample report is shown in Figure 30.15.

 Successor Logic Trace 				
Starting Task: 10 - Sign Contract				
Activity	Description	Critical Status	Predecessor/Successor	
Level 1				
20	Site Survey	Critical	10	Sign Contract
Level 2				
1000	Excavate Tower	Float	20	Site Survey
2000	Excavate Building Site	Critical	20	Site Survey
3000	Lay Road Base	Float	20	Site Survey
30	Take Possession	Critical	20	Site Survey
Level 3				
1001	Concrete Footings	Float	1000	Excavate Tower
2001	Install Septic Tank	Float	2000	Excavate Building Site
2005	Concrete Footings	Float	2000	Excavate Building Site
3001	Surface Road	Float	3000	Lay Road Base
3001	Surface Road	Float	3000	Lay Road Base
40	Erect Security Fence	Critical	30	Take Possession
Level 4				
1002	Erect Tower	Critical	1001	Concrete Footings
2002	Construct Drains	Float	2001	Install Septic Tank
2006	Interior Basement Walls	Float	2005	Concrete Footings
2007	Exterior Basement Walls	Float	2005	Concrete Footings
4000	Obtain Job Acceptance	Critical	3001	Surface Road
50	Erect Temp Accommodation	Critical	40	Erect Security Fence
Level 5				
1003	Construct Drains	Float	1002	Erect Tower
1004	Install Electricals	Critical	1002	Erect Tower
2003	Backfill Building Site	Float	2002	Construct Drains
2008	Pour Concrete Floor	Float	2006	Interior Basement Walls
1006	Cable To Building	Critical	2006	Interior Basement Walls
2008	Pour Concrete Floor	Float	2007	Exterior Basement Walls
1006	Cable To Building	Float	2007	Exterior Basement Walls
60	Set Out And Level Site	Critical	50	Erect Temp Accommodation
Level 6				
1007	Backfill Tower Site	Critical	1003	Construct Drains
1005	Install Cable	Critical	1004	Install Electricals
2004	Clean Up Building Site	Float	2003	Backfill Building Site
2009	Install Fuel Tank	Float	2008	Pour Concrete Floor
2010	Install Floor Beams	Float	2008	Pour Concrete Floor
1007	Backfill Tower Site	Critical	1006	Cable To Building
2003	Backfill Building Site	Critical	1006	Cable To Building
70	Procure Steel	Critical	60	Set Out And Level Site
80	Procure Electricals	Critical	60	Set Out And Level Site
Level 7				
1008	Clean Up Tower Site	Critical	1007	Backfill Tower Site
1006	Cable To Building	Critical	1005	Install Cable
4000	Obtain Job Acceptance	Float	2004	Clean Up Building Site
4000	Obtain Job Acceptance	Float	2009	Install Fuel Tank
2011	Concrete Main Floor/Walls	Float	2010	Install Floor Beams
1002	Erect Tower	Critical	70	Procure Steel
1004	Install Electricals	Critical	80	Procure Electricals
Level 8				
4000	Obtain Job Acceptance	Critical	1008	Clean Up Tower Site
2012	Concrete Roof	Float	2011	Concrete Main Floor/Walls
Level 9				
2013	Lay Roof	Float	2012	Concrete Roof
2014	Complete Interior	Float	2012	Concrete Roof
Level 10				
4000	Obtain Job Acceptance	Float	2013	Lay Roof
2015	Paint & Clean	Float	2014	Complete Interior
Level 11				
4000	Obtain Job Acceptance	Float	2015	Paint & Clean
Date 18/02/99 Project Radio Tower Time 15:18				

Figure 30.15 Successor logic trace report

Scheduling the project


Once the project data has been completed the results can be calculated by using the scheduling facilities of Hornet Windmill. The most common analysis method is to perform a standard Time Schedule or Time Analysis for the entered tasks and logic links. Under this calculation the task start and finish dates – both early and late dates – are calculated based on the task durations and logic links or constraints between them. This is a very quick calculation and the displays are promptly updated to show the new values. The calculation in Hornet Windmill also takes into consideration the relevant working calendar patterns (weekends and holidays) for all tasks and logic links, and builds the future dates on any progress details already entered for the project. The calculation uses a ‘time now’ or ‘project date’ as the equivalent to today’s date which marks the point between the past and the future in the project schedule.

The scheduling calculation is so quick on modern computers that it is possible to set the system to rerun the scheduling calculation after each addition or revision of the data values. Use of this type of facility is a matter of preference and the majority of users choose to complete a series of revisions before making the calculation – this prevents a constantly changing view of the project being given and on larger projects is quicker to operate.

The scheduling calculations in Hornet Windmill can also take into account the availability of resources – manpower, equipment etc. – and give a future project schedule that takes into account all logical relationships *and* ensures that there will be sufficient resources available to complete the tasks. These calculations are known as Resource Scheduling and offer a range of different calculation facilities – before these calculations can be made the user must define the resource requirements and availabilities for the project.

Adding resources to the project

Project resources can cover a wide range of different commodities and these are often applied quite differently by users. Hornet Windmill is very flexible in what it terms as a resource – a resource is any commodity that has a *quantity* associated to it and that can be linked to the completion of an individual task within the project. This definition covers most things – work content in manhours (or mandays), monetary value, material quantities, equipment needs etc. The user is free to define as many distinct resource types, or *resource centres*, as needed by the project. The user must ensure that the units used on each resource are consistent through the project, although

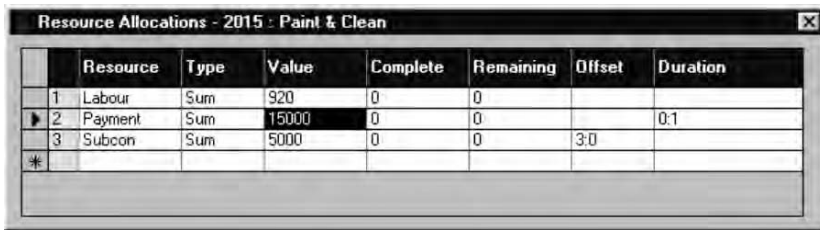

	Resource	Type	Value	Complete	Remaining	Offset	Duration
1	Labour	Sum	920	0	0		
2	Payment	Sum	15000	0	0		0:1
3	Subcon	Sum	5000	0	0	3:0	

Figure 30.16 Resource allocations for task 2015 in a data grid display

any unit of measure may be applied in each case. One or more of the defined resources may be used to measure progress within the project – this is usually manhours but may be any easily identified unit of measure that runs throughout the project.

Hornet Windmill allows each defined resource to be given ‘availability’ limits over the duration of the project. These limits will on histogram reports highlight periods when insufficient resource is available in the planned project schedule – ideally these will be picked up well in advance so that the project manager has enough time to take steps to avoid the potential shortfall. The automatic scheduling facilities in Hornet Windmill will automatically reschedule project tasks to ensure future resource availabilities are not exceeded. This form of Resource Scheduling is a useful tool for projects that are heavily resource constrained – although many construction-type projects are constrained more by the logical sequence of tasks rather than simple resource availability. However, the ability to predict accurately future requirements of a wide range of resources over the duration of the project is extremely valuable.

Each task may have any number of different resources associated to it and these are entered on a mini task data grid. In addition to resource name and value, Hornet Windmill allows the user to enter current progress values against each of them – for example, a record of hours already expended and estimated hours to completion; these can then be compared to the original budgeted hours for the task. Once resource values have been allocated to tasks a histogram report showing future resource usage over the project duration can be produced and displayed.

Project reports

Producing the final project reports and distributing them to the relevant parties is a key task of the project manager and any project management system must

be able to produce required reports quickly and consistently. These reports will usually take the form of standard reporting styles, e.g. bar charts (Gantt charts), tabular listings, resource histograms and network diagrams, but there is invariably a requirement to produce a slightly customized report that gives a specific style of report to meet particular requests – or to match an existing report that has been developed and used for some time.

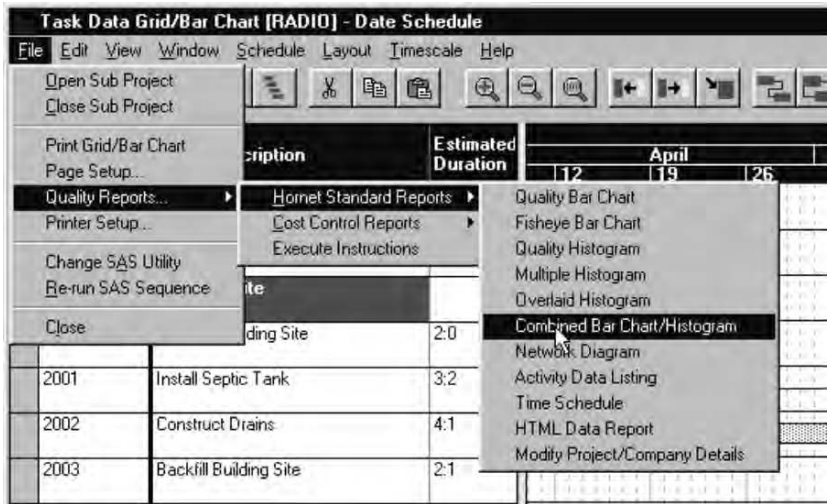


Figure 30.17 The standard reports menu

Hornet Windmill supports a wide range of standard reporting formats that satisfy the most common requirements. It also offers a Report Wizard which is used to build customized reports that include selected project values across the page. All reports in Hornet Windmill are created using a form of macros or program language, report layouts and variable screen prompt panels and these can be applied by the user to build virtually any type of project report that could be envisaged.

All standard reports use a form of tabbed prompt panel into which the user enters required titles, selects the range of tasks to be included and sets required layout options and styles. All task reports allow for the inclusion of headings and subheadings, and the grouping or summary of tasks to provide a roll-up or summary report. Each report saves the settings and selections made by the user – these can be recalled to rerun any defined style at a later date. Reports produced by Hornet Windmill do not have to be distributed in paper form –

Standard Quality Bar Chart : [stdtabis]

Revisions Output **General** Headings & Groups Bar Chart Style Notes

General Report Settings

Select & Sort Utility: Default SAS

Optional date range for report: Start Date: Finish date:

Report Timescale: D: Days ☒ Fit Date Range To Page

Bar Type: A: Current Schedule

Report Reference

Interim plan based on winter schedule

Show Additional Parameters: D: Early Start Date & Early Finish Date

☐ Show Logic on Bar Chart

☒ Fit Activities On 2 Page(s)

Help OK Cancel

Tab set A : Values last modified on 06/01/99 14:05

Figure 30.18 Report settings panel for a standard bar chart report

they can be effectively e-mailed or posted on the Internet for all users to view and print.

The range of options and facilities provided in the standard reports is very wide and only the main facilities for each report type are summarized below:

Bar chart reports may be produced on all paper sizes from A4 to A0 and support full colour printing and shading styles, see Figure 30.19. The horizontal timescale supports a 'scale to fit' facility which ensures the full project duration (or a specified date range) fits neatly across the page. The timescale can be shown in a non-linear style – a sort of 'fisheye' – where work already completed is compressed – say the past nine months over the first 30% of the page, the current three-month period occupying the next 50% of the page, and the remaining two years to project completion shown in the final 20% of the page. These page proportions can be adjusted to meet the specific requirements of the user and allow even long projects to be drawn on a single sheet. Bar chart styles may be set to show future task dates as currently scheduled, or show the original or *baseline* schedule alongside current dates,

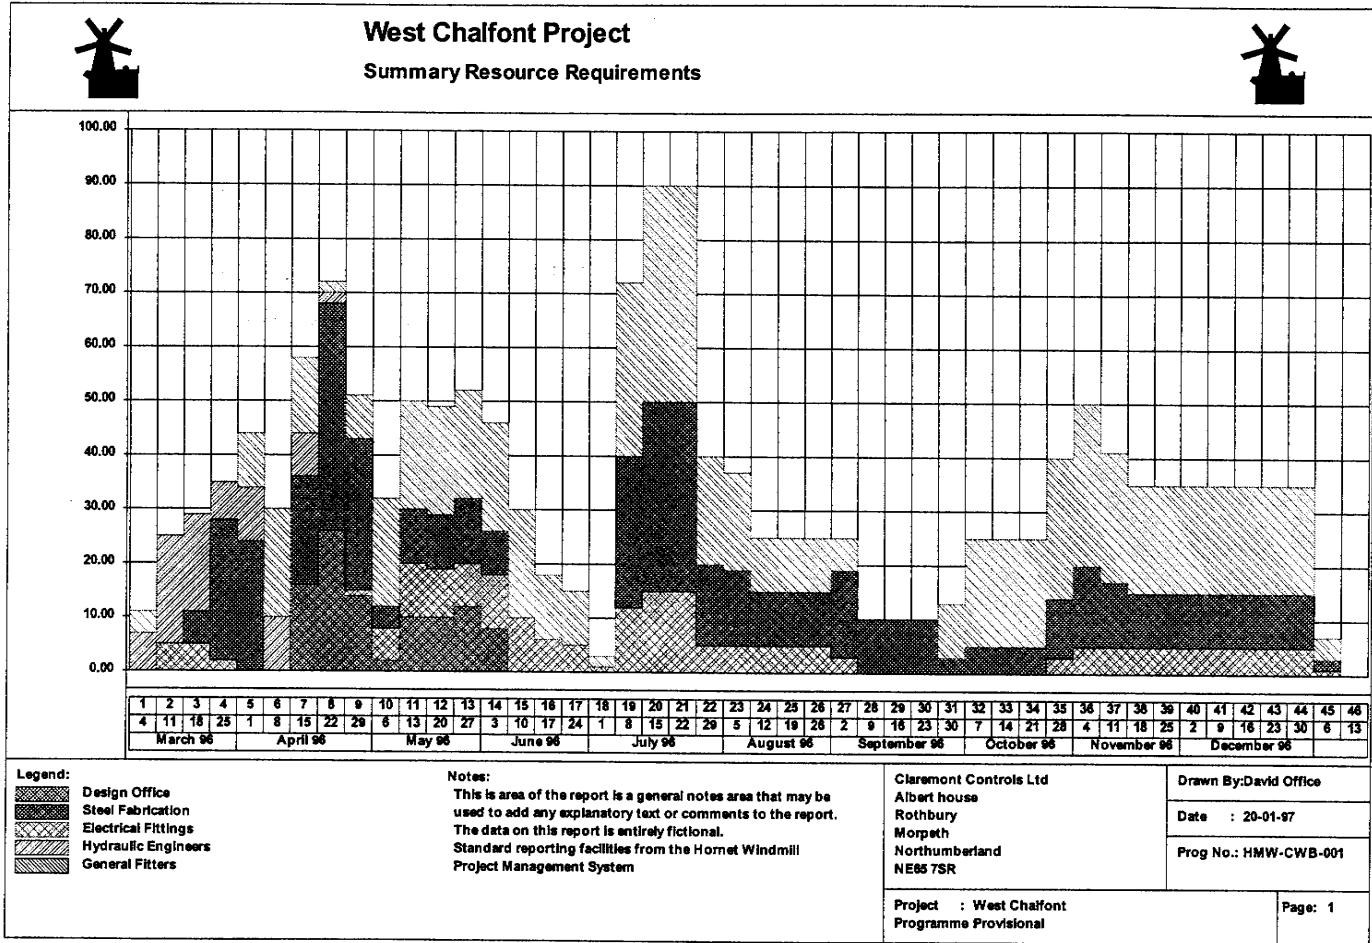


Figure 30.20 Histogram report showing four stacked resource profiles

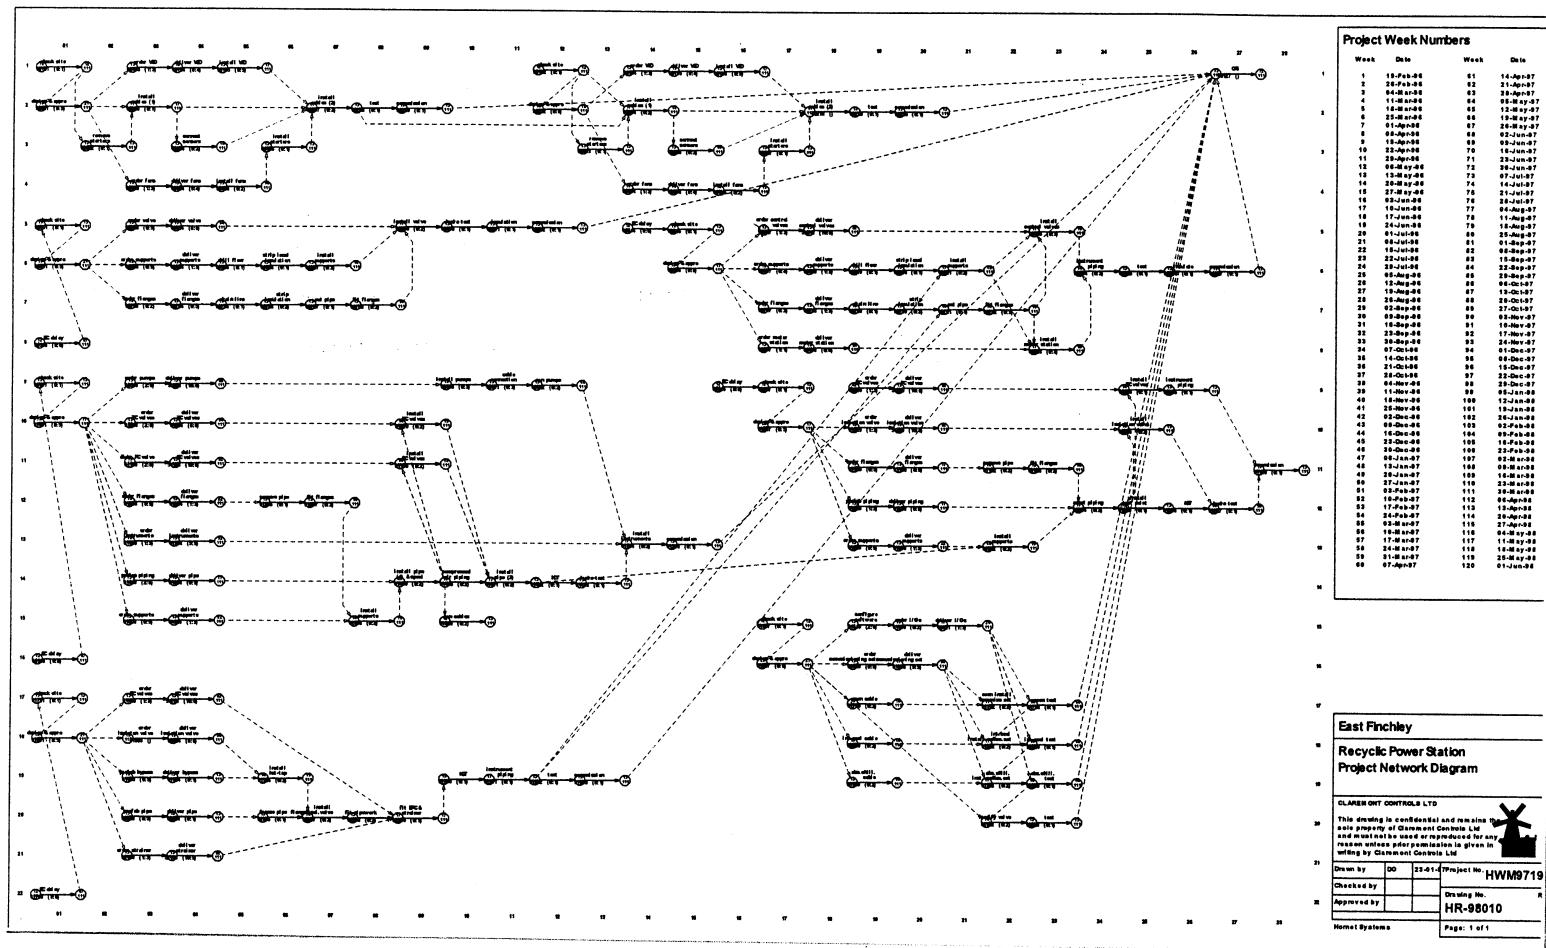


Figure 30.21 Network diagram drawn in the Activity on Arrow style. (Note: All link lines miss the nodes)

or show the current recorded progress marked up on the baseline schedule (giving the characteristic zig-zag progressed bar chart). Other style options to show float, colour-coded task bars, add the logic links and customize the page legend and titles are all supported.

Histogram reports show the planned resource requirements over the duration of the project and are the second most widely graphical project report. All histogram reports in Hornet Windmill allow up to eight different resource profiles to be drawn on each set of axes – either stacked on top of each other or drawn ‘side by side’, see Figure 30.20. S-curve calculations (cumulative profiles) are supported and the traditional *envelope* between early and late planned dates can be drawn. If required several graph axes can be shown on a single page, or the histogram drawn under a bar chart to give a powerful combined format report.

Network diagram reports may be drawn in either precedence style (activity on node) or arrow style (activity on arrow, see Figure 30.21) and also support various facilities to ‘fit diagram to page’. The design and data content shown for each task on the report can be varied and the report will mark the progress recorded against each task, highlight critical tasks and links, and colour code tasks to the users legend scheme. If the project network diagram is to be related to a hand-drafted original using a grid of rows and columns, the task numbering can be used to place the nodes in their appropriate locations on the page. The link lines all miss the nodes.

Tabular reports still provide a valuable format for the issuing of project data – particularly where a report is specifically targeted at those responsible for the attached content. Tabular reports can be combined with ‘fill me in’ boxes or columns for weekly update and return on project progress. This style of reporting can also be given in a format compatible with the Internet or the company Intranet – allowing direct access to information over a computer network without having to run or print full project management reports. Tabular reports also include the task logic listings – both the precedence and successor report or the logic thread report – referred to earlier.

Project cost control

Entering the man-hours figures for the SMAC Project Cost Control as described in Chapter 27 is extremely straightforward and takes the minimum of input. The user can select the appropriate data grid display to show all the

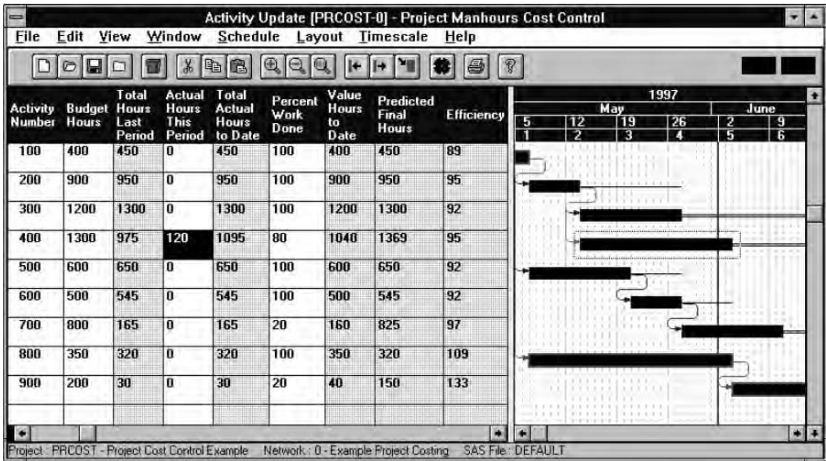


Figure 30.22 Task data grid showing cost control data columns

key cost control parameters on the main task data grid and bar chart display. On the display shown in Figure 30.22 the columns have been sized to display all required values simultaneously.

At this stage it is assumed that all project tasks have been entered, task durations set and the logic links added. A schedule of the project calculates the task start and finish dates, and shows the bar chart as the planned duration of the project. On the display the cursor is taken to the column headed **Budget Hours** and moved down this column adding the appropriate total manhours for each task on the grid in turn. Once completed Hornet Windmill can produce the Cost Control graphs showing the planned progress of the project over time – actual progress has yet to be added.

To add the progress details to the system, values have to be entered into the two columns **Actual Hours This Period** and **Percent Work Done**. Values are required for all tasks that have been progressed in the past week (or whatever the project reporting period is) giving the actual manhours expended, and the manager's assessment of % complete at the end of the period. As values are entered, Hornet Windmill will calculate the other values on the row (these values are shown with grey backgrounds).

If the record of the manhours is already compiled in a different computer system it should be possible to take this data and feed it directly into the Hornet Windmill system; utilities to do this are included with the Hornet software. This can greatly ease the running of the system as time-consuming

double entry of data values can be avoided. Similarly, one can use reports and/or other database systems to collate and import the weekly progress values on the project tasks.

Once the progress values for the period have been entered Hornet Windmill will complete the calculations to show the overall progress of the project to date. This can be viewed as a summary table showing the derived progress values for all reporting periods to date, see Figure 30.23.


Last Period Date	Last Period Number	Total Budget Manhours	Total Value Hours	Total Actual Hours	Overall % Complete	Predicted Final Manhours	Efficiency %
11 May 97	1	6250	1005	1105	16	6871	90
18 May 97	2	6250	2105	2275	34	6754	92
25 May 97	3	6250	4005	4225	64	6593	94
01 Jun 97	4	6250	5125	5385	82	6567	95

Project: PRDQST - Project Cost Control Example [c:\hornetw\prcost]

Figure 30.23 Summary table from the SMAC Cost Control

The SMAC control system is not an isolated management report as it is linked to a project network. Other management reports can be produced including a bar chart (or Gantt chart) that records the current progress of activities based against the original or planned completion schedule. The sample report shown in Figure 30.24 shows the planned position of activities as hollow bars against the project timescale. The bars are shaded to indicate the current percentage progress of each activity. A double vertical line marks the current date or date of the last progress update and the position of the shading on the bars in relation to this line shows whether activities are ahead or behind their original planned dates.

This report gives a very useful and easily understood snap shot of the current progress for project activities. The same data may be printed in a tabular form listing task dates and progress data in a series of columns, as

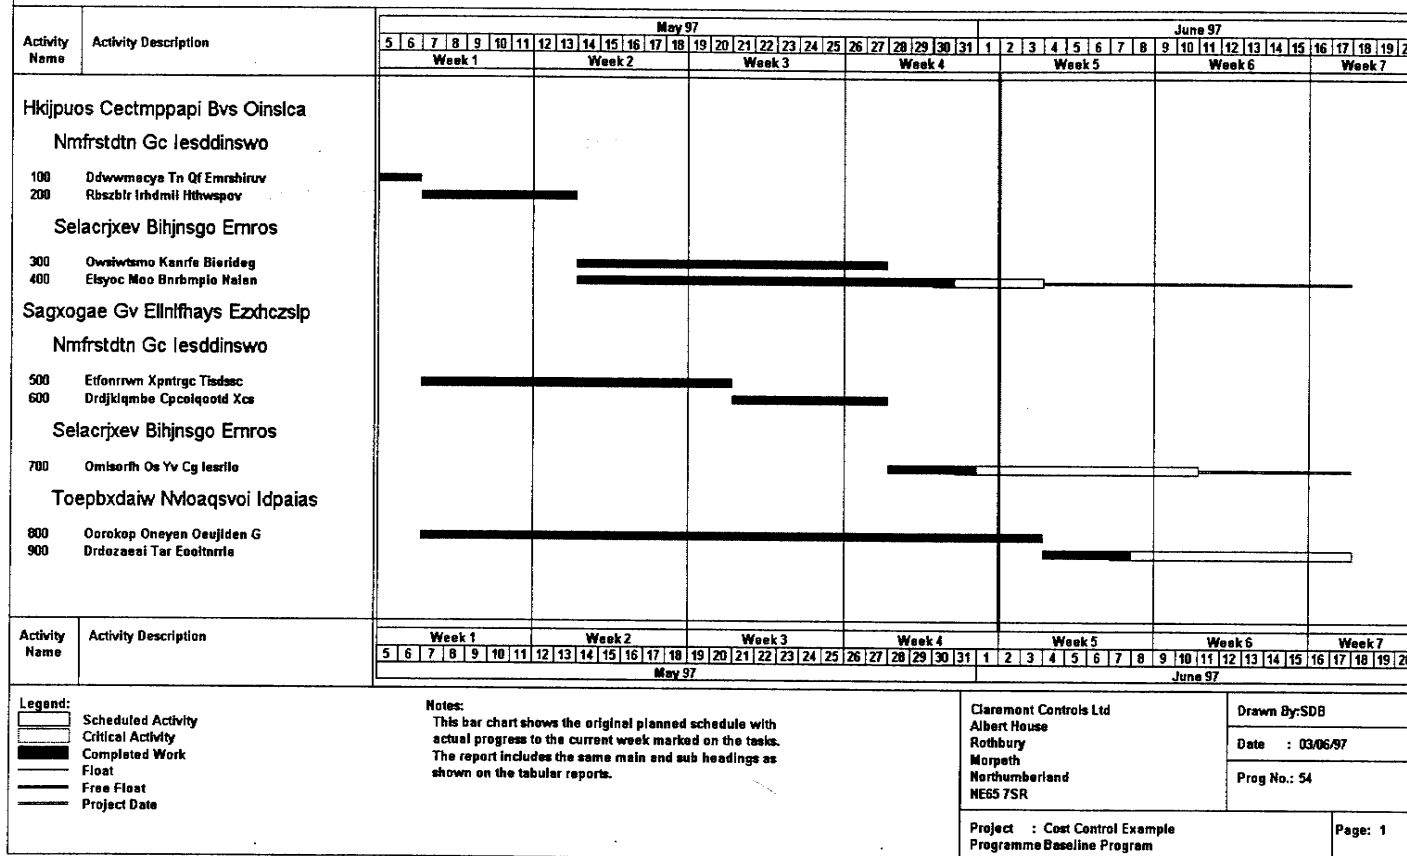

Reference: Progress After Weekly Update 4

Hornet Project Management Systems

Figure 30.24 Bar chart report showing current progress against original planned schedule

Project Manhour and Cost Report
Period Update Summary

Cost Control Example

Period Update No : 4

Network : 0
Description : Standard Project Network

Cost Control Data Listing

Date of Update : 01-Jun-97




Description : Standard Project Network				SCHEDULED DATES						MAN - HOURS					
Activity	Description	Duration	Budget Hours	Early Start	Early Finish	Late Start	Late Finish	Float	% Comp	This Period	Actuals Total	% Comp	Value	Estimated Final	% Eff.
Hkijpuos Cectmppapi Bvs Oinsica Nmfrstdn Gc Iesddinswo															
100	Ddwwmecya Tn Qf Emrshiruv	0:2	400	05-May-97	06-May-97	05-May-97	06-May-97		100	0	450	100	400	450	89
200	Rbszblr Irhdmil Hthwspov	1:0	900	07-May-97	13-May-97	21-May-97	27-May-97	2:0	100	0	950	100	900	950	95
Sub-Heading Totals:			1300							0	1400	100%	1300	1400	93%
Selacrpxev Bihjnsco Emros															
300	Owsiwtamo Kanrfe Blerideg	2:0	1200	14-May-97	27-May-97	04-Jun-97	17-Jun-97	3:0	100	250	1300	100	1200	1300	92
400	Elsyoc Moo Bnrbmpio Nalen	3:0	1300	14-May-97	03-Jun-97	28-May-97	17-Jun-97	2:0	75	350	975	75	975	1300	100
Sub-Heading Totals:			2500							600	2275	87%	2175	2615	96%
Main-Heading Totals:			3800							600	3675	91%	3475	4019	96%
Sagxogae Gv Ellnlfhays Ezdchzslp Nmfrstdn Gc Iesddinswo															
600	Etfonrrwn Xpntgrc Tladsac	2:0	600	07-May-97	20-May-97	14-May-97	27-May-97	1:0	100	0	650	100	600	650	92
600	Drdjkqmba Cpcolqootd Xcs	1:0	500	21-May-97	27-May-97	28-May-97	03-Jun-97	1:0	100	270	545	100	500	545	92
Sub-Heading Totals:			1100							270	1195	100%	1100	1195	92%
Selacrpxev Bihjnsco Emros															
700	Omlsorth Os Yv Cg Iesrilo	2:0	800	28-May-97	10-Jun-97	04-Jun-97	17-Jun-97	1:0	20	165	165	20	160	825	97
Sub-Heading Totals:			800							165	165	20%	160	825	97%
Toepbxdaiv NMoagsvoi Idpeias															
800	Oorokop Oneyen Oeujiden G	4:0	350	07-May-97	03-Jun-97	07-May-97	03-Jun-97		100	95	320	100	350	320	109
900	Drdozaaei Tar Ecoitnrrie	2:0	200	04-Jun-97	17-Jun-97	04-Jun-97	17-Jun-97		20	30	30	20	40	150	133
Sub-Heading Totals:			550							125	350	71%	390	494	111%
Main-Heading Totals:			2450							580	1710	67%	1650	2539	96%
Report Totals:			6250							1160	5395	82%	5125	6557	95%
Claremont Controls Ltd Albert House Rothbury Morpeth Northumberland Tel: 01 669 621 081 Fax: 01 669 621 182				Notes: This report lists the planned start and finish dates for all tasks and includes cost control progress values to the current week. The tasks are divided into a series of main and sub headings and the report includes sub-totals for each section.						Page : 1 Report Printed : 03/06/97 11:28					

Reference: Progress After Weekly Update 4

Hornet Project Management Systems

Figure 30.25 Tabular report giving Cost Control summary across project sections

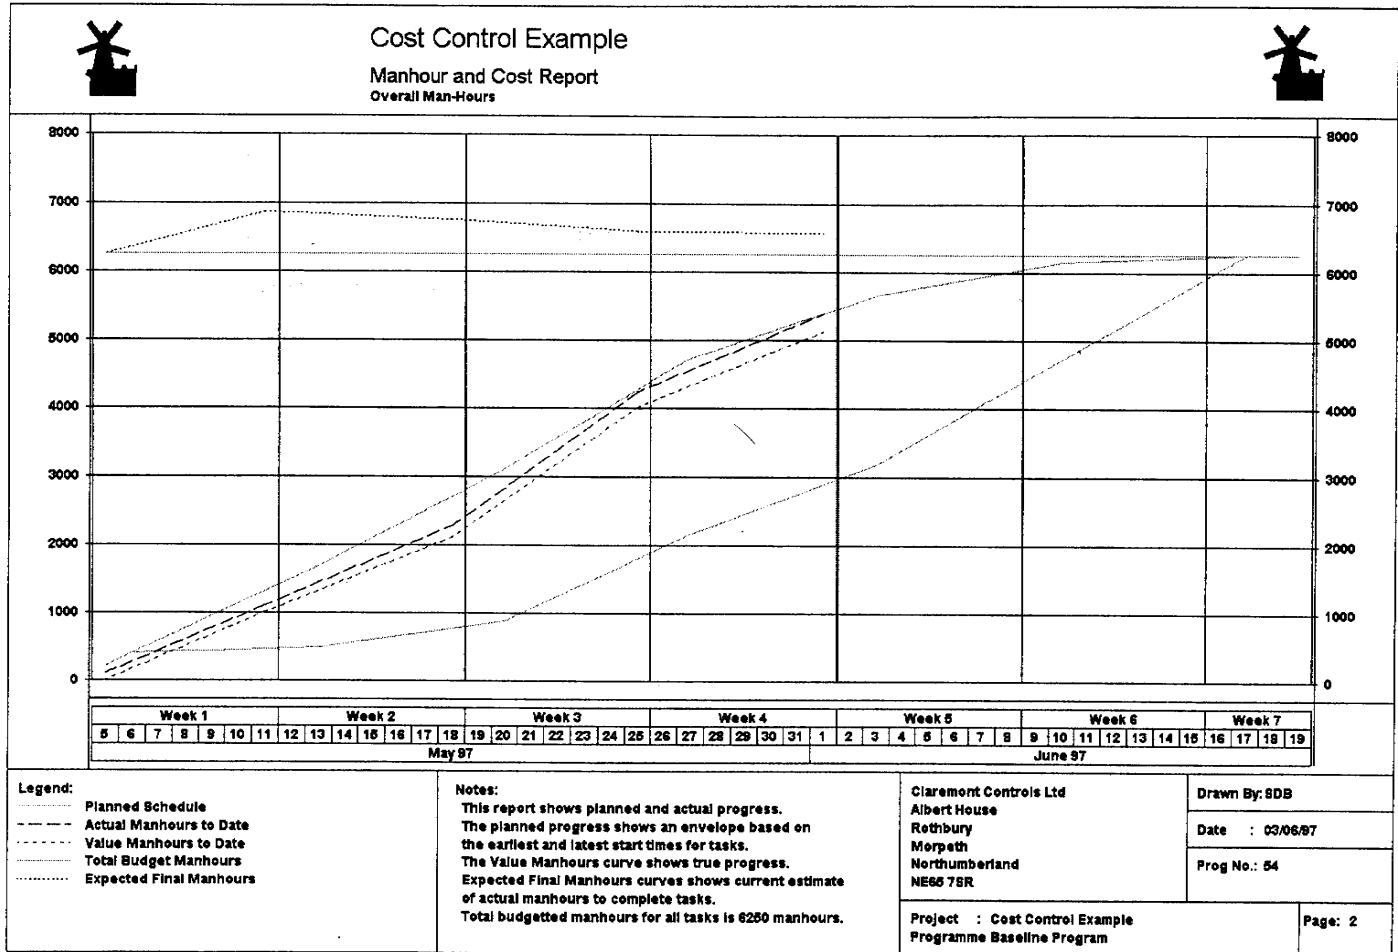

Reference: Progress After weekly Update 4

Horner Project Management Systems

Figure 30.26 Cost Control report showing Planned and Actual Manhours for the project

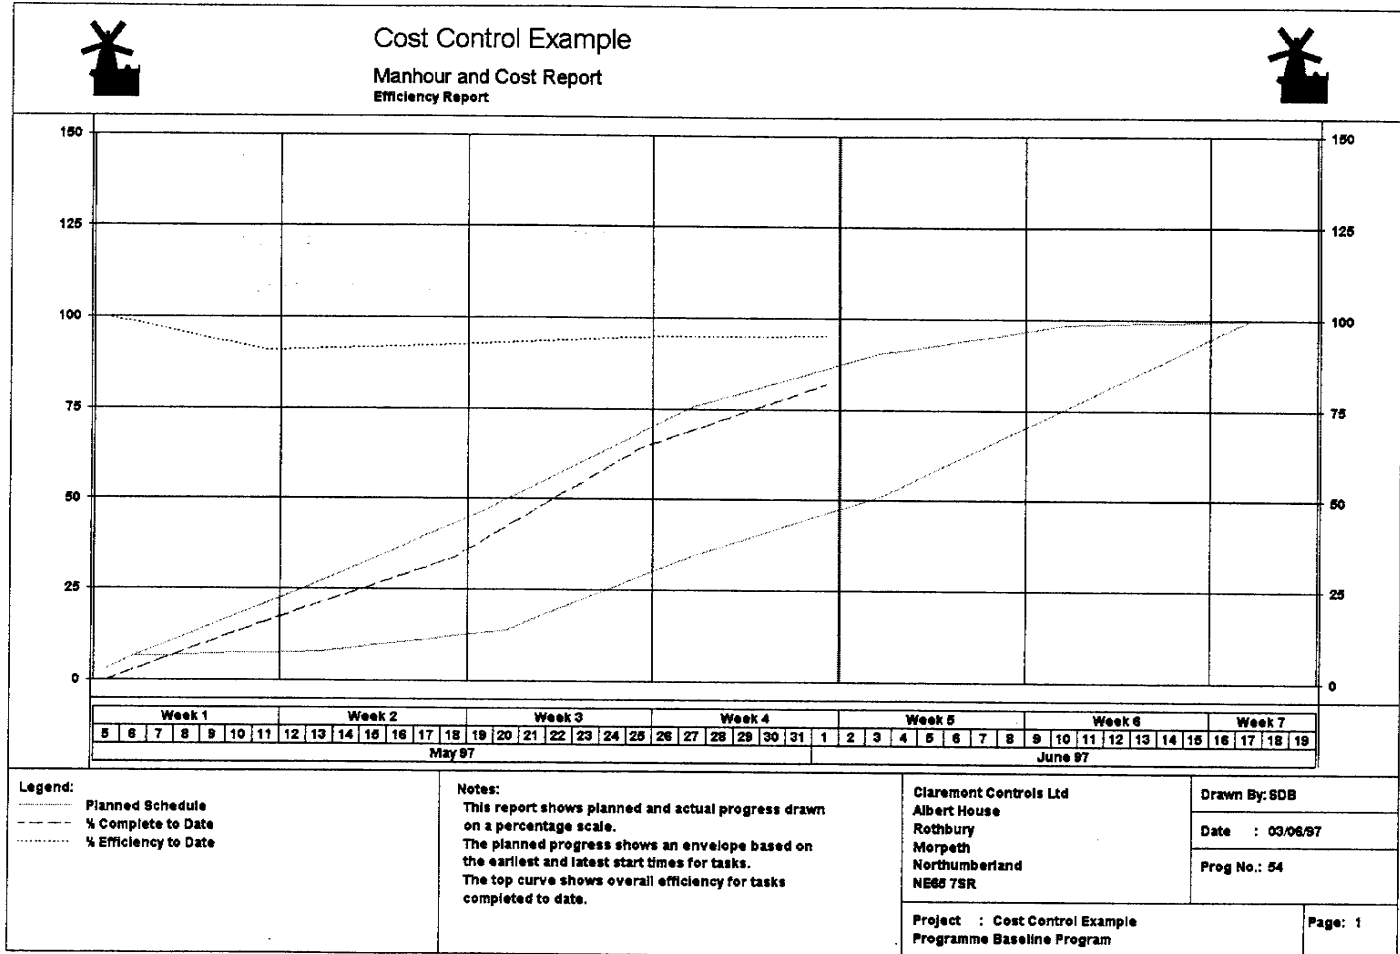


Figure 30.27 Cost Control report showing Percentage Planned Manhours and Efficiency for the project

shown in Figure 30.25. This report shows how main and subheadings may be applied to give progress summaries within different sections, in addition to the overall result for the entire project. This can be extremely useful in identifying any sections of the project that are falling behind that would otherwise be masked in a single overall figure.

If required these results can be copied to a spreadsheet application using the Windows Clipboard facility and included in management reports or carried forward into further analysis.

A much clearer picture of project progress is given by printing the two standard Cost Control graphs. The first report, Figure 30.26, shows lines for Planned Manhours, Actual and Value Manhours to Date, and Expected Final Manhours plotted against the project timescale. The second report, Figure 30.27, uses a percentage scale to show Planned, Completed and Efficiency values for each of the reporting periods currently completed. Both these reports will highlight variations from the planned schedule of work at a very early stage and thus give the project manager every opportunity to take any necessary corrective action.

All Hornet reports, including the Cost Control reports shown here, can be modified and extended. This may be needed to change column headings on reports to conform to existing methods, or to extend the report to add further details or breakdowns.

MS Project 98

Probably the most popular project management program in use today is MS Project. Since its first introduction, it was updated a number of times and its latest version, MS Project 98 has been further enhanced to enable communications to be made to the Internet as well as improving the existing capabilities relating to resource management, Earned Value Analysis and Intranet support.

The list below shows some of the additional facilities provided by the latest version of MS Project:

- Task Usage and Resource Usage
- Custom time-period tracking
- Cross project linking
- Resource contouring
- Multiple critical paths
- Task splitting
- Status date
- Customizable Gantt charts
- Workgroup features
- Web publishing
- Personal Web Server for Windows 95
- Office Assistant
- MS Office compatibility
- Database file format
- Full ODBC (Open Database Connectivity) support

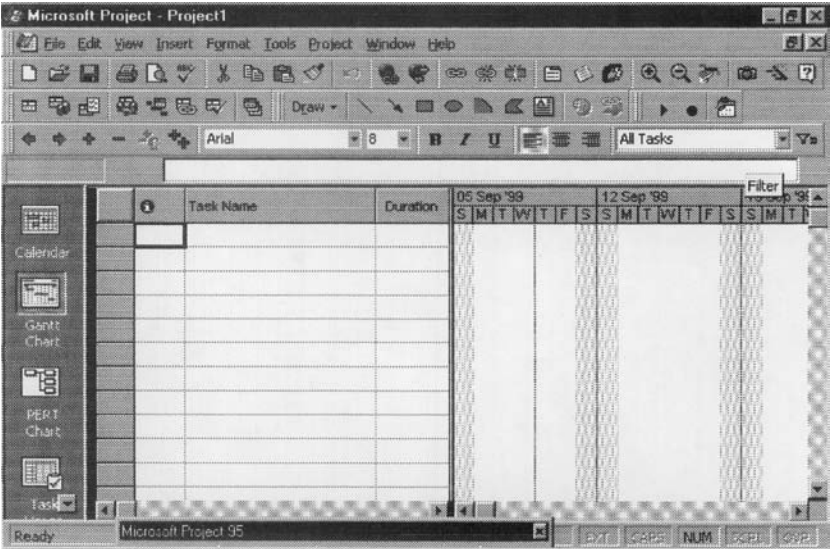


Figure 31.1

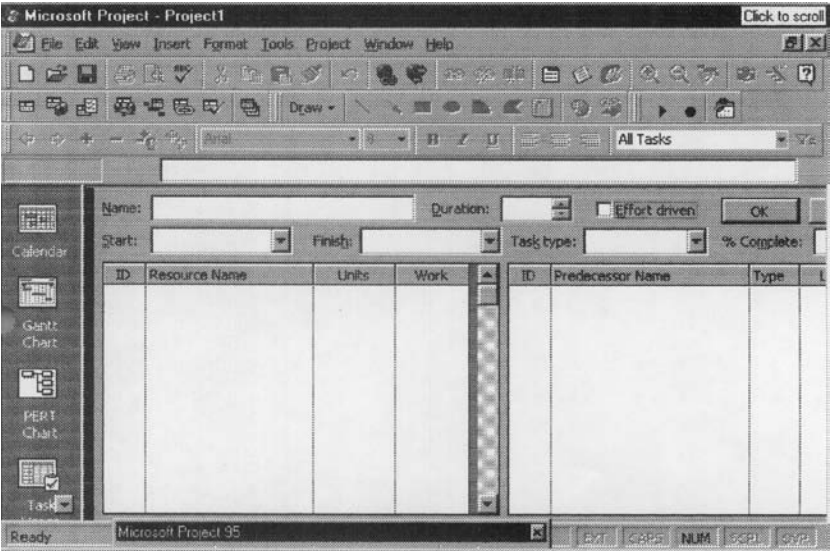


Figure 31.2

The basic principles, which are common to most commercial project management software packages, are described below.

When MS Project is opened, the Application window which contains the Project window appears as shown in Figure 31.1 (**View – Table – Entry**). The Project window shown is the Gantt chart view or Task Entry Table and is the default view of MS Project. The Project window can be split using a special 'split' feature (**Window – Split**) so that the lower section becomes the Task Form, used to enter additional information for each task. This is shown in Figure 31.2.

The first job is to set up the project using the Project Information box as shown in Figure 31.3. This, when completed, will show the Project Start date,

Figure 31.3

Finish date, a selection box which will show which of the two (Start date or Finish date) will be used as a basis for scheduling, the Current date, Status date and the type of calendar selected. The calendar can be Standard, 24 hours or Night Shift. If the Start date has been selected for scheduling, the Finish date will be adjusted automatically, depending on the actual programme.

The default calendar of MS Project is set up for an 8-hour day and a 5-day week. If this is not acceptable for the project in question, it can be changed in the 'Change Working Time' dialog box (**Tools – Change Working Time**). This box also allows the new working and non-working times, hours per day and hours per week to be entered and set as the default calendar using the 'Create New Base Calendar' dialog box (see Figure 31.4).

Resource calendars, based on the 'Base Calendar', can be created to suit the working times of any one of the resources employed on the project and are created automatically as soon as resources are added to the tasks.

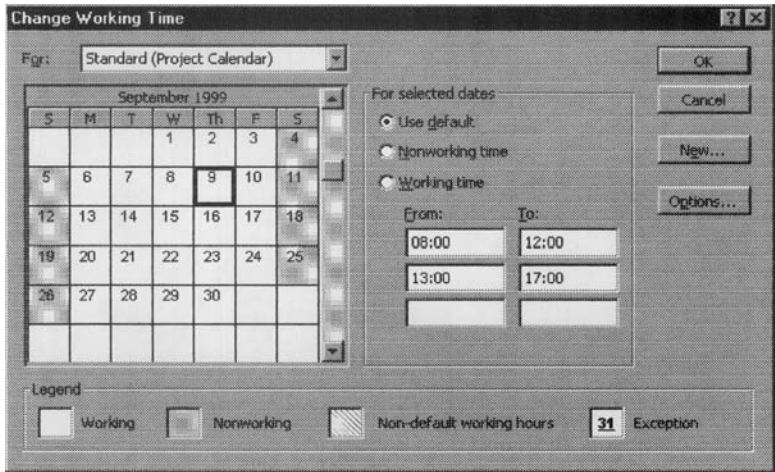


Figure 31.4

After entering the main parameters of the project, such as name, start date, time units, milestone dates etc., the activities or tasks (as they are called in MS Project) and their durations are listed on the ‘task entry table’ (see Figure 31.2).

This table assigns the tasks to an ID number and has columns for Task Name, Duration, Start, Finish, Predecessors, and Resource Names. The Finish date is calculated automatically by adding the Duration to the Start date.

A Resource Task Form showing any delays to the Start or Finish dates can be called up from **View – More Views – Resource Form** (see Figure 31.5).

As soon as a task has been entered, it is immediately displayed as a bar on a calendar scale to the right of the task entry table (see Figure 31.6).

When all the tasks have been entered, the interrelationship or linking of the tasks can be done by either:

- (a) linking the bars in the generated bar (or Gantt) chart (this is done automatically if the predecessors have been entered), or
- (b) giving the ID or name of the predecessor activity in the Task Form, which can be viewed on the same screen using the ‘split’ feature.

While this linking on the screen is relatively easy when all, or nearly all, the activities are visible on the screen, it becomes much more difficult to ensure

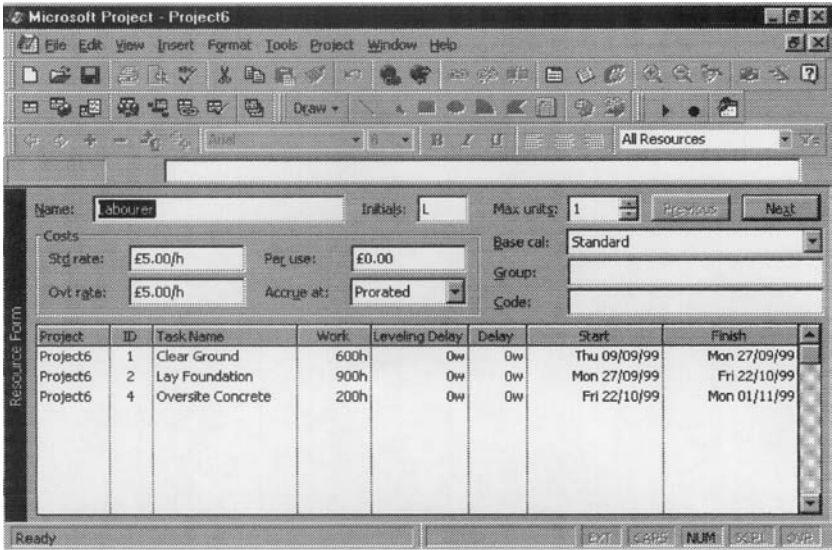


Figure 31.5

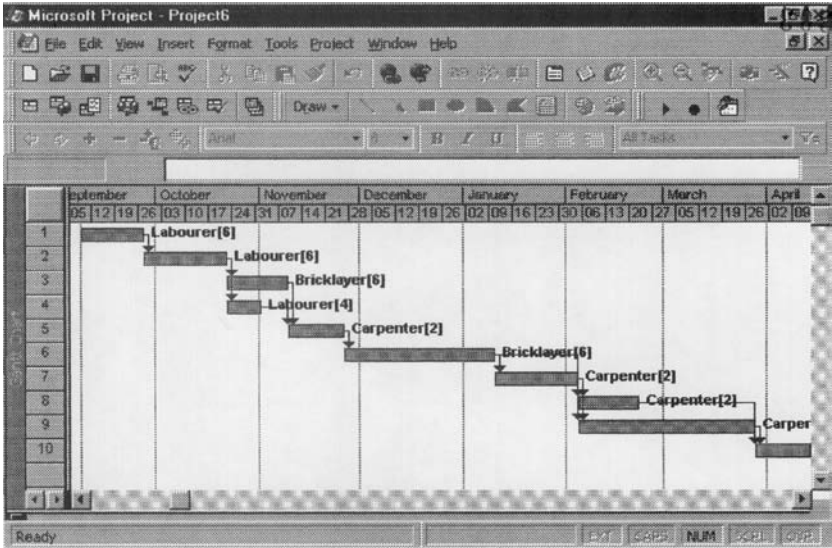


Figure 31.6

that no relationships are missed, when the network is bigger than, say, 30 activities. For this reason the network should always be draughted manually and the interrelationships checked and double checked before they are entered into the computer using the Task Form. The purpose of the computer program is to do the number crunching, not to take the place of the planner or project manager, who should know which activity is dependent on which.

Once all the tasks and their links have been entered, the cursor is placed on the 'Link Tasks' icon, which enables the computer to display the now modified bar chart, giving the completion date and listing the floats. The critical path is highlighted on the bar chart in either a different colour or a different pattern in the bars. Tasks which follow each other without a break are, if so chosen, shown in addition to the task bar, by a summary line stretching the total duration of the unbroken set of tasks. Milestones, i.e. tasks with zero duration, are shown as diamonds.

If the calculated completion date is not acceptable, it is very easy to change either the durations or the interrelationship of the links to give the desired result, assuming of course that the necessary resources are available to meet this date.

Task predecessors can also be changed easily by bringing up the Task Form and changing the name of the task predecessor in the Predecessor Name cell, in the right-hand part of this form. At the same time it is possible to change the ID number and (if required) the type of task relationship such as 'Finish to Start' 'Start to Start', 'Finish to Finish' or 'Start to Finish'. (It should be pointed out that 99% of all task relationships are 'Finish to Start'.) Lead and lag times specified in minutes, hours, days or weeks can also be entered in this screen.

MS Project automatically converts the Gantt chart into a precedence network called a 'PERT Chart', which can be displayed by choosing the PERT Chart command from the **VIEW – PERT Chart** menu or simply clicking the pictorial 'PERT Chart' icon on the left-hand edge of the entry screen. This area of the screen also contains similar pictorial icons for quick access to:

- The Project Calender
- Gantt Chart
- Task Usage
- Tracking Gantt
- Resource Graph
- Resource Sheet
- Resource Usage and
- More views

The nodes displayed in the PERT chart are by default quite large, so that in order to view a larger section of the network, one has to zoom out by pressing the appropriate zoom icon shown as a magnifying glass on the tool bar. The type of border around the task box indicates whether it is an ordinary activity, a critical activity, a summary activity or a milestone.

In practice it is still only possible to see quite a small network on this display due to the inevitable restriction of the screen size (see Figure 31.7). When the network is reduced to its smallest size, it becomes difficult to read the information in the nodes which consist of the task name, ID number, duration, early start date and late start date. If the network consists of a large number of activities, it is essential that it is printed out on a plotter, since if a line printer is used, one ends up with a large number of pieces of paper which have to be taped together. This restriction should be of little concern, since as stated previously, it is far more important to produce the network manually *before* using the computer to calculate the critical path, total floats, free floats and other information.

The position of the task boxes can be changed on the PERT chart by dragging and dropping the task boxes and by moving the link lines with the mouse. The link lines can be chosen to connect the boxes by straight lines (at any angle) or by lines running only at right angles.

Progress (or tracking) can be plotted on the Gantt chart by inputting the actual data for each task. The progress is now indicated by a solid black (or coloured) line within the original task bar. The length of this solid line is proportionate to the actual time expended.

Facilities exist for printing out a number of reports such as all the critical tasks, non-started tasks, the floats (total and free) for all tasks, the project statistics, project overview and resources. In MS Project, the float is called slack, i.e. total slack and free slack.

A filter facility enables the planner to prepare reports containing only selected groups of tasks such as only critical activities.

The latest version of MS Project enables the activities or tasks to be split. This is useful when the second half of an activity has to be interrupted for a while before it can be completed. This can be done by dragging and dropping task bars on the Gantt chart.

Many of these facilities may of course never be used, but at least they are available as part of the latest application for the more sophisticated planner.

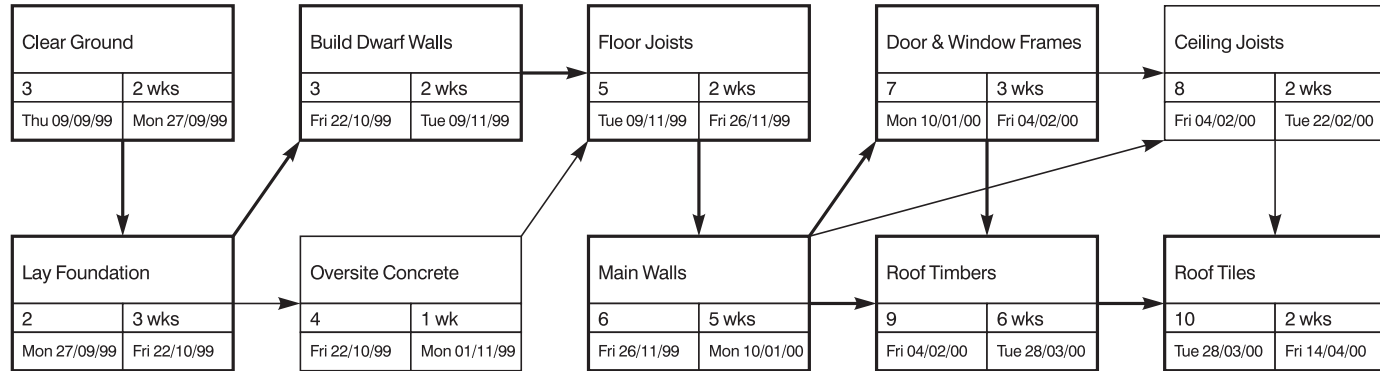


Figure 31.7

Resources

Resources can be entered in a number of ways, but the simplest method is to enter them directly in the left-hand part of the Task Form or in more detail on the Resource Information dialog box, which shows the name of the resource, e.g. foreman, his initials (or abbreviation), the dept or group he belongs to, the number (of foremen) available, the standard rate of pay (per hour), the overtime rate, and the cost per use, e.g. when an agreed rate for a consultant is used (see Figure 31.8).

The resources can also be allocated to tasks by clicking on the ‘Resource Assignment’ button, which brings up the Resource Assignment dialog box

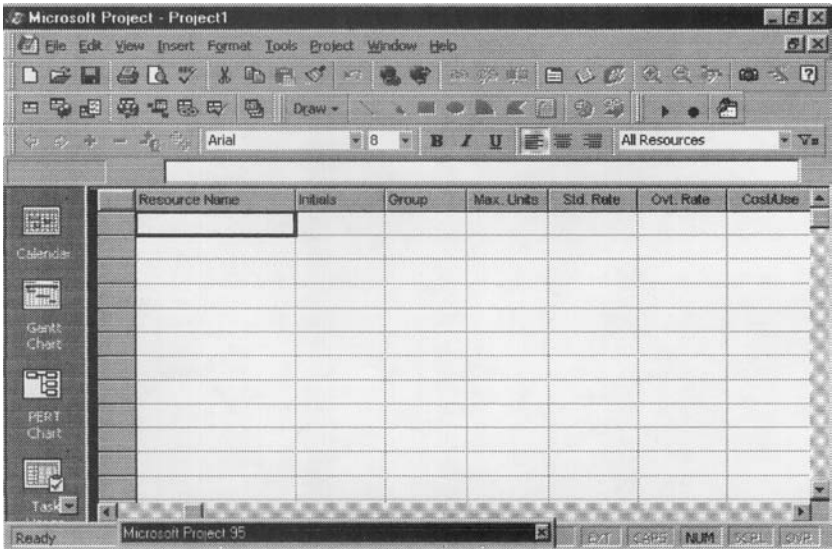


Figure 31.8

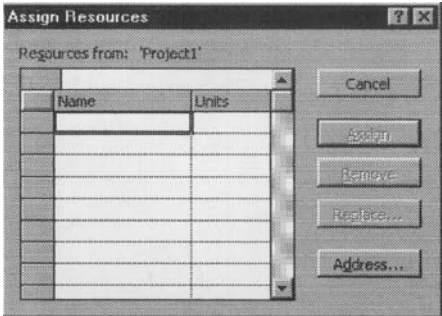


Figure 31.9

that displays all the previously entered resources (see Figure 31.9). By entering the name of the resource in an available cell together with the number of resource units available, the resource can be assigned to the selected task by clicking on the 'Assign' button. A facility exists for assigning a resource to several tasks simultaneously and showing the name of the resource next to the task bar on the Gantt chart.

MS Project now allows work to be assigned using predefined resource contours, which tell the program how the resource's work should be spread over the duration of the assignment. Thus the contours can be:

- Flat
- Back Loaded
- Bell
- Double Peak
- Early Peak
- Front Loaded
- Late Peak or
- Turtle

Scheduling can be time (fixed duration) driven or resource driven. The latter is the default setting and unless it has been changed in the Task Information dialog box, Ms Project will automatically extend the duration of an activity inversely to the resources allocated to that activity. For example, 4 men have been originally allocated to activity 'A', which was to take 12 days, and as it is now only possible to employ 3 men, the duration of activity 'A' will automatically be increased to 16 days. Conversely, if 6 men can be employed, the duration will be reduced to 8 days. Clearly if activity 'A' was on the critical path, the total project time will be changed accordingly.

The resource names can be added to the Gantt chart display next to the activity bars and displayed on the Resource Usage chart which will also indicate any under-or overusage of resources.

The distribution of a particular type of resource or all the resources can be shown graphically in the form of a conventional histogram or resource graph. This view can then be used to reallocate or smooth the resources to meet the availability criteria of the project.

By entering the monetary rates (rate per hour, rate per man, rate per day etc.) for each resource in the Resource Sheet, MS Project will calculate the cost of the resource for every activity. This is shown in the Task Cost table, Figure 31.10, accessed from **View – Table – Cost**. A Task Summary table

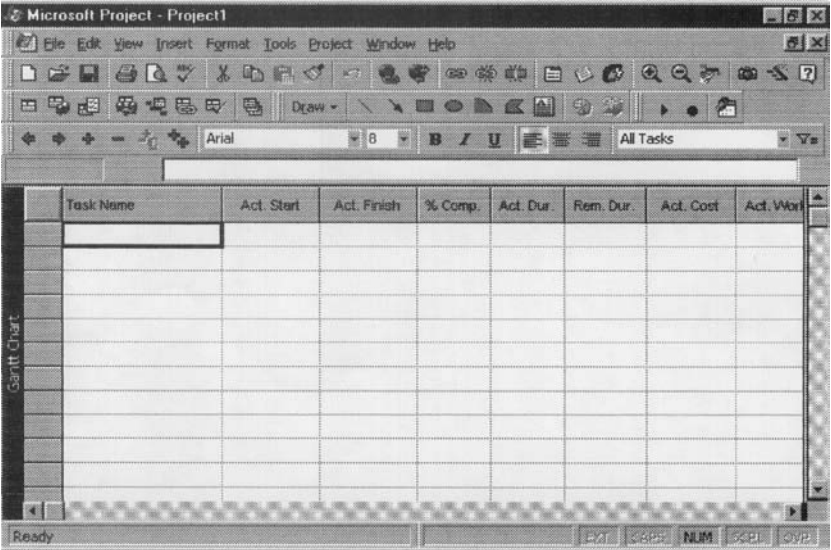


Figure 31.12

which shows the status of the project can be obtained from **View – Table – Summary** and is shown in Figure 31.11.

The Actual Start & Finish, % Complete, Actual & Remaining Duration, Actual Cost and Actual Work performed can be seen on the Task Tracking table, Figure 31.12, accessed from **View – Table – Tracking**. When scrolled, the information will also appear in bar chart form.

The latest version of MS Project can carry out Earned Value calculations, but unfortunately to view the all-important control curves showing the relationship between Actual, Planned and Earned Value, the data must be exported to Microsoft Excel with the aid of a Wizard. It is also possible to model cross-project dependencies by dragging and dropping between the two sets of bars in the different Gantt charts.

MS Project contains the usual comprehensive ‘Help’ system, and an interactive Office Assistant to provide guidance, and to explain the facilities of MS Project better, some of the views and reports are taken from the example of the bungalow described in Chapter 28.

Project close-out

Project close-out

Towards the end of the project, the project manager must make arrangements for a controlled close-out of the project. There is always a risk of time and money being expended on additional work not originally envisaged or where envisaged work is dragged out because no firm cut-off date has been imposed. However, before a project can be handed over, a large number of documents have to be checked and updated to reflect the latest version and as-built condition.

In addition, certain documents obtained and collated during the various phases of the project have to be bound and handed over to the client to enable the plant or systems to be operated and maintained. The following list gives some of the documents that fall into this category:

- Stage acceptance certificates
- Final handover certificate
- Operating instructions or manuals
- Maintenance instructions or manuals

- Spares lists (usually priced) divided into operating and strategic spares
- Lubrication schedules
- Quality control records and audit trails
- Material test certificates
- Equipment test and performance certificates
- Equipment, material and system guarantees

All contracts (and subcontracts) must be properly closed out and (if possible) all claims and back charges (including liquidated damages) agreed and settled.

The site must be cleared, all temporary buildings, structures and fences have to be removed, access roads made good and surplus material disposed of. This material can either be sold to the client or operator for spares or, provided the relevant certificates are attached, returned to the supplier or stock. Any uncertificated or unusable material has to be sold for scrap.

Close-out report

Using the information recorded in the project diary and the various project status reports, the project manager must now prepare his project close-out report. This should discuss the degree of compliance with the original project brief (or business case) and acceptance criteria and highlight any important problems encountered together with the solutions adopted.

Apart from giving a short history and post-implementation review of the project, the purpose of this document is to enable future project managers on similar projects to learn from the experience and issues encountered. For this reason the close-out report has to be properly indexed and archived in hard copy or electronic format for easy retrieval.

The report will be sent to the relevant stakeholders and discussed at a formal close-out meeting at which the stakeholders will be able to express their views on the success (or otherwise) of the project. At the end of this meeting the project can be considered to be formally closed.

Stages and sequence

Summary of project stages and sequence

The following pages show the stages and sequences in diagrammatic and tabular format.

Figure 32.1 shows the normal sequence of controls of a project from business case to close-out;


Figure 32.2 gives a diagrammatic version of the control techniques for the different project stages;

Figure 32.3 is a heirarchical version of the project sequence which also shows the chapter numbers in the book where the relevant stage or technique is discussed;

Table 32.1 is a detailed tabular breakdown of the sequence for a project control system, again from business case to project close-out.

While the diagrams given will cover most types of projects, it must be understood that projects vary enormously in scope, size and complexity.

The sequences and techniques given may therefore have to be changed to suit any particular project. Indeed certain techniques may not be applicable in their entirety or may have to be modified to suit different requirements. The principles are, however, fundamentally the same.

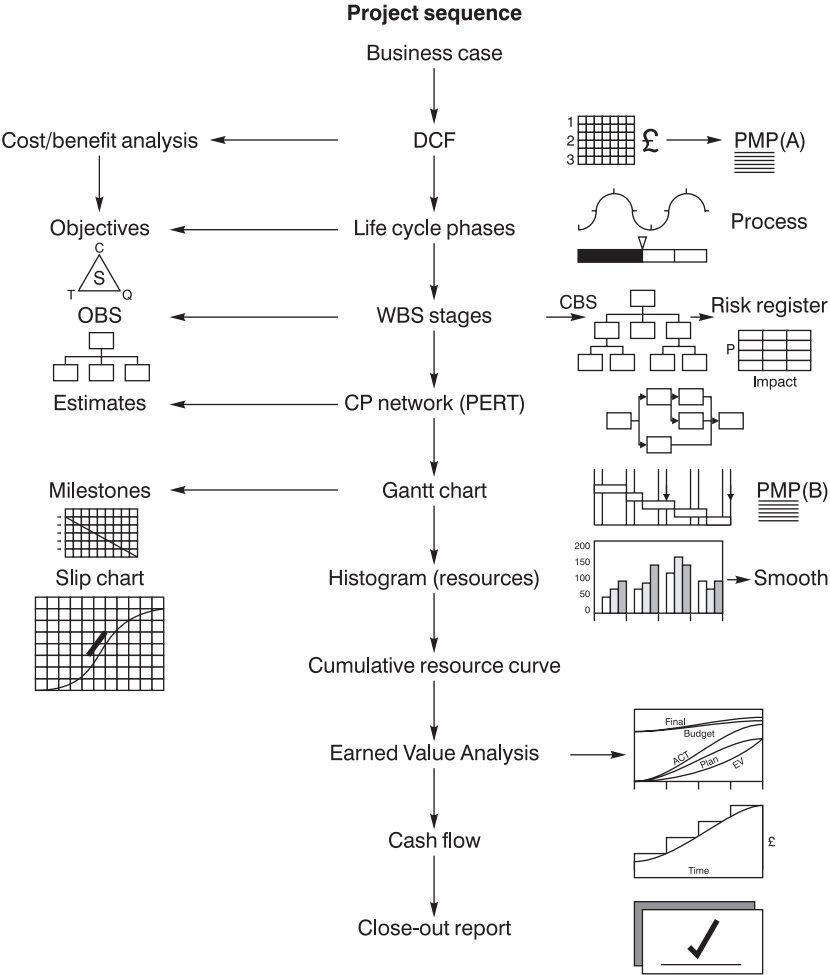


Reproduced with the kind permission of A.Lester (APM)

Figure 32.1

Project stage control techniques

Project


1. WBS




2. Activity Table

Activity	Duration	M/W Budget	Men/Wk	Float
A	4W	8	2	—
B	2W	6	3	3
C	5W	10	2	—
D	3W	3	1	—
E	2W	2	1	—


3. Network (AoA)




4. OR Network (AoN)




5. Bar Chart

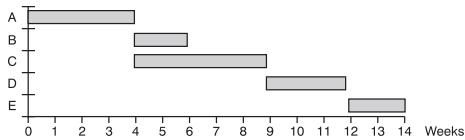


6. Histogram

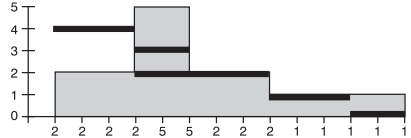

7. 'S' Curve

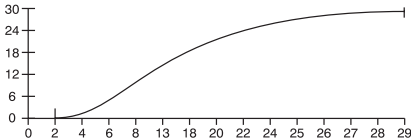

8. Progress Curve (EVA)

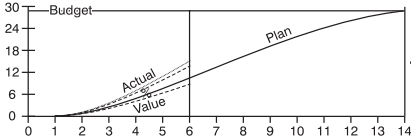

9. Cash Flow

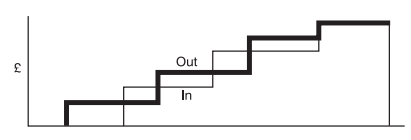


Figure 32.2

Project sequence

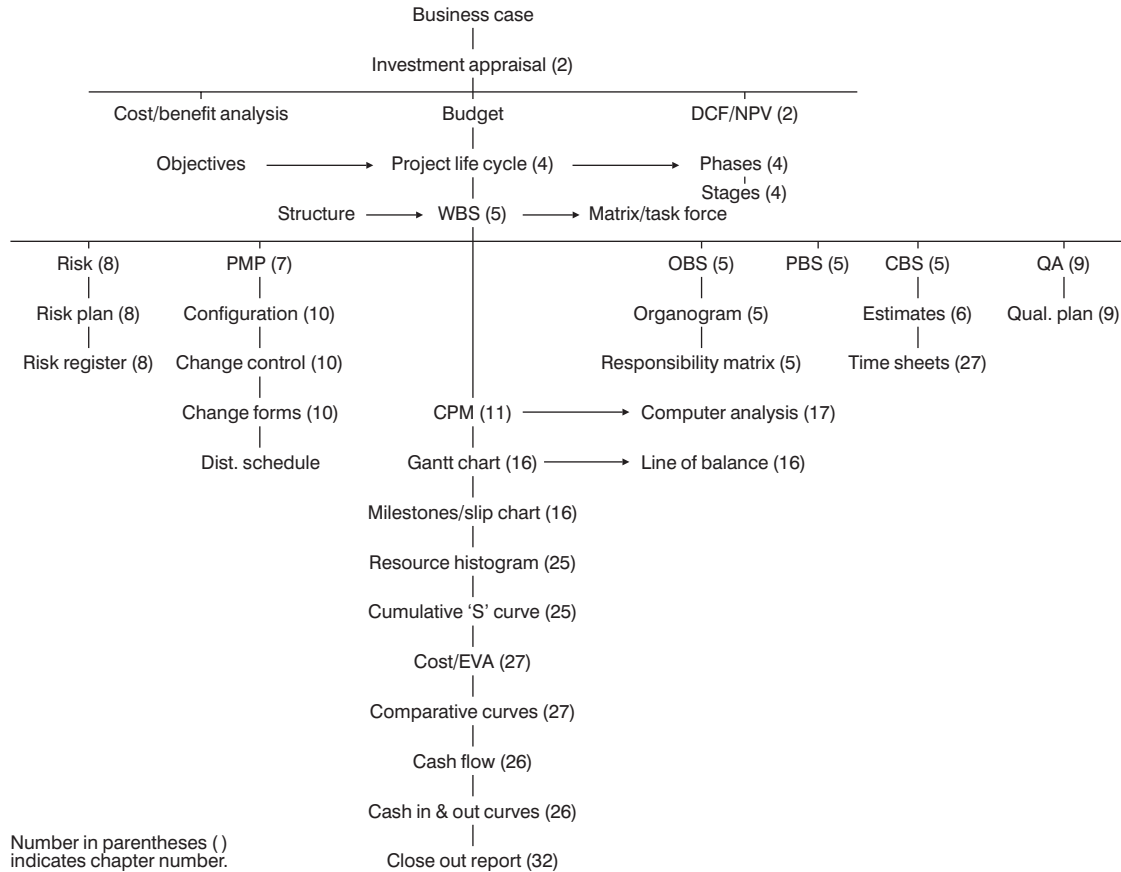


Figure 32.3

Table 32.1 Sequence for project control system

Business case
Cost/benefit analysis
Set objectives
DCF calculations
Establish project life cycle
Establish project phases
Produce project management plan (PMP)
Produce budget (labour, plant, materials, overheads etc.)
Draw work breakdown structure (WBS)
Draw product breakdown structure
Draw Organization Breakdown Structure
Draw Responsibility Matrix
List all possible risks
Carry out risk analysis
Draw up risk management plan
Produce risk register
Draw up activity list
Draw network logic (CPM) (free hand)
Add activity durations
Calculate forward pass
Revise logic (maximize parallel activities)
Calculate 2nd forward pass
Revise activity durations
Calculate 3rd forward pass
Calculate backward pass
Mark critical path (zero float)
Draw final network on grid system
Add activity numbers
Draw bar chart (Gantt chart)
Draw milestone slip chart
Produce resource table
Add resources to bar chart
Aggregate resources
Draw histogram
Smooth resources (utilize float)
Draw cumulative 'S' curve (to be used for EVA)
List activities in numerical order
Add budget values (person hours)
Record weekly actual hours (direct and indirect)
Record weekly % complete (in 5% steps)
Calculate value hours weekly
Calculate overall % complete weekly
Calculate overall efficiency weekly
Calculate anticipated final hours weekly
Draw time/person hour curves (budget, planned, actual, value, anticipated final)

Table 32.1 Continued

Draw time/% curves (% planned, % complete, % efficiency)
Analyse curves
Take appropriate management action
Calculate cost per activity (labour, plant, materials)
Add costs to bar chart activities
Aggregate costs
Draw curve for plant and material costs (outflow)
Draw curve for total cash OUT (this includes labour costs)
Draw curve for total cash IN
Analyse curves
Calculate overdraft requirements
Set up information distribution system
Set up weekly monitoring and recording system
Set up system for recording and assessing changes and extra work
Set up reporting system
Manage risks
Set up regular progress meetings
Write Close-out Report

34

Abbreviations and acronyms used in project management

<i>Abbreviation</i>	<i>Meaning</i>	<i>Usage</i>
ACC	Annual Capital Charge	Finance
ACWP	Actual Cost of Work Performed	EVA
AOA	Activity on Arrow	CPA
AON	Activity on Node	CPA
APM	Association for Project Management	PM
ARM	Availability, Reliability, Maintainability	MOD
BC	Business Case	PM
BCWP	Budgeted Cost of Work Performed	EVA
BCWS	Budgeted Cost of Work Scheduled	EVA
BOK	Body of Knowledge	PM
BS	British Standard	General
BSI	British Standards Institution	General
CAR	Contractor's All Risk	Construct
CBS	Cost Breakdown Structure	PM
CDM	Construction, Design and Management	Construction

<i>Abbreviation</i>	<i>Meaning</i>	<i>Usage</i>
CEN	Comité Européen de Normalization	General
CIF	Carriage, Insurance, Freight	Procurement
CM	Configuration Management	PM
CPA	Critical Path Analysis	PM
CPA	Contract Price Adjustment	Procurement
CPI	Cost Performance Index	EVA
CPM	Critical Path Methods	CPA
CSCS	Cost & Schedule Control System	EVA
DCF	Discounted Cash Flow	Finance
DDP	Delivery Duty Paid	Procurement
DIN	Deutsche Industrie Normen	General
EVA	Earned Value Analysis	PM
EVMS	Earned Value Management System	EVA
FF	Free Float	CPA
FLAC	Four Letter Acronym	General
FMEA	Failure Mode & Effect Analysis	MOD
FOB	Free on Board	Procurement
FOR	Free on Rail	Procurement
HR	Human Resources	General
H&S	Health & Safety	General
IA	Investment Appraisal	Finance
IPMA	International Project Management Association	PM
IPMT	Integrated Project Management Team	PM
IPR	Intellectual Property Rights	General
IRR	Internal Rate of Return	Finance
IS	Information Systems	General
ISEB	Information Systems Examination Board	General
ISO	International Organization for Standardization	General
IT	Information Technology	General
LCC	Life Cycle Costing	PM
LOB	Line of Balance	Construct
LRM	Linear Responsibility Matrix	PM
MOD	Ministry of Defence	General
NOSCOS	Needs, Objectives, Strategy & Organizations Control System	MOD
NDT	Non Destructive Testing	Construct
NPV	Net Present Value	Finance
OBS	Organization Breakdown Structure	PM
ORC	Optimal Replacement Chart	Finance
ORM	Optimal Replacement Method	Finance

<i>Abbreviation</i>	<i>Meaning</i>	<i>Usage</i>
PBS	Product Breakdown Structure	PM
PDM	Precedence Diagram Method	CPA
PERT	Program Evaluation & Review Technique	CPA
PFI	Private Finance Initiative	Finance
PM	Project Management	PM
PM	Project Manager	PM
PMP	Project Management Plan	PM
PPE	Post Project Evaluation	PM
PPP	Public–Private Partnership	Finance
PRD	Project Definition	PM
QA	Quality Assurance	General
QC	Quality Control	General
QMS	Quality Management System	General
QP	Quality Plan	General
R&D	Research and Development	General
RR	Rate of Return	Finance
SFR	Sinking Fund Return	Finance
SMART	Specific, Measurable, Achievable, Realistic, Timebound	MOD
SOW	Statement of Work	PM
SPI	Schedule Performance Index	EVA
SRD	Sponsor’s Requirement Definition	PM
SWOT	Strength, Weakness, Opportunity, Threat	PM
TCP	Time, Cost & Performance	PM
TF	Total Float	CPA
TQM	Total Quality Management	General
TOR	Terms of Reference	General
VA	Value Analysis	General
VE	Value Engineering	General
VM	Value Management	General
WBS	Work Breakdown Structure	PM

See also list of acronyms.

Acronyms used in project management

ARM	Availability, Reliability, Maintainability
CADMID	Concept, Assessment, Demonstration, Monitoring, In-Service, Disposal
CFIOT	Concept, Feasibility, In-Service, Operation, Termination
CS ² (CSCS)	Cost & Schedule Control System

EMAC	Engineering Manhours And Cost
FLAC	Four Letter Acronym
HASAWA	Health And Safety At Work Act
NAPNOC	No Agreed Price, No Contract
NIMBY	Not In My Back Yard
NOSCOS	Needs, Objectives, Strategy & Organization Control System
NOSOCS&R	Needs, Objectives, Strategy, Organization Control, System & Risk
PAYE	Pay As You Earn
PERT	Program, Evaluation & Review Technique
PESTEL	Political, Economic, Sociological, Technological, Environmental, Legal
PRAM	Project Risk Analysis & Management
PRINCE	Projects in a Controlled Environment
RIDDOR	Reporting of Injuries, Diseases & Dangerous Occurrences Regulations
RIRO	Rubbish In–Rubbish Out
SMAC	Site Manhours And Cost
SMART	Specific, Measurable, Achievable, Realistic & Time bound
SOW	Statement Of Work
SWOT	Strengths, Weaknesses, Opportunities & Threats

Glossary

Activity An operation on a network which takes time (or other resources) and is indicated by an arrow.

Actual cost of work performed (ACWP) Cumulative actual cost (in money or manhours) of work booked in a specific period.

Actual hours The manhours actually expended on an activity or contract over a defined period.

AoN Activity on Node.

AoA Activity on Arrow.

Arithmetical analysis A method for calculating floats arithmetically.

Arrow A symbol on a network to represent an activity or dummy.

Arrow diagram A diagram showing the inter-relationships of activities.

Back end The fabrication, construction and commissioning stage of a project.

Backward pass A process for subtracting durations from previous events, working backwards from the last event.

Banding The subdivision of a network into horizontal and vertical sections or bands to aid identification of activities and responsibilities.

Bar chart *See* **Gantt chart**.

Beta (*b*) distribution Standard distribution giving the expected time $t_e = (a + 4m + b)/6$.

Budget Quantified resources to achieve an objective, task or project by a set time.

Budgeted cost of work performed (BCWP) See Earned Value.

Budgeted cost of work scheduled (BCWS) Quantified cost (in money or manhours) of work scheduled (planned) in a set time.

Budget hours The hours allocated to an activity or contract at the estimate or proposal stage.

Business case The document setting out the information and financial plan to enable decision makers to approve and authorize the project.

Calendar Time scale of programme using dates.

Capital cost The project cost as shown in the balance sheet.

Cash flow Inward and outward movement of money of a contract or company.

Change control The process of recording, evaluating and authorizing project changes.

Change management The management of project variations (changes) in time, cost and scope.

Circle and link method See **Precedence diagram**.

Close out procedure The actions implemented and documents produced at the end of a project.

Computer analysis The method for calculating floats, etc. using a computer.

Configuration management The management of the creation, maintenance and distribution of documents and standards.

Contingency plan Alternative action plan to be implemented when a perceived risk materializes.

Cost/benefit analysis Analysis of the relationship between the cost and anticipated benefit of a task or project.

Cost breakdown structure (CBS) The hierarchical breakdown of costs when allocated to the work packages of a WBS.

Cost code Identity code given to a work element for cost control purposes.

Cost control The ability to monitor, compare and adjust expenditures and costs at regular and sufficiently frequent intervals to keep the costs within budget.

Cost performance index The ratio of the earned value (useful) cost and the actual cost.

Cost reporting The act of recording and reporting commitments and costs on a regular basis.

Cost variance The arithmetical difference between the earned value cost and the actual cost. This could be positive or negative.

CPA Critical path analysis. The technique for finding the critical path and hence the minimum project duration.

- CPM** Critical path method. *See CPA*
- CPS** Critical path scheduling. *See CPA*.
- Critical activity** An activity on the critical path which has zero float.
- Critical path** A chain of critical activities, i.e. the longest path of a project.
- Dangle** An activity which has a beginning node but is not connected at its end to a node which is part of the network.
- Deliverable** The end product of a project or defined stage.
- Dependency** The restriction on an activity by one or more preceding activities.
- Direct cost** The measurable cost directly attributed to the project.
- Discounted Cash Flow (DCF)** Technique for comparing future cash flows by discounting by a specific rate.
- Distribution schedule** A tabular record showing by whom and to whom the documents of a project are distributed.
- Dummy activity** A timeless activity used as a logical link or restraint between real activities in a network.
- Duration** The time taken by an activity.
- Earliest finish** The earliest time at which an activity can be finished.
- Earliest start** The earliest time at which an activity can be started.
- Earned value hours** *See Value hours*.
- End event** The last event of a project.
- EVA** Earned Value Analysis.
- Event** The beginning and end node of an activity, forming the intersection point with other activities.
- Feasibility study** Analysis of one or more courses of action to establish their feasibility or viability.
- Feedback** The flow of information to a planner for updating the network.
- Float** The period by which a non-critical activity can be delayed.
- Free float** The time by which an activity can be delayed without affecting a following activity.
- Forward pass** A process for adding durations to previous event times starting at the beginning of a project.
- Front end** The design and procurement stage of a project. This may or may not include the manufacturing period of equipment.
- Functional organization** Management structure of specialist groups carrying out specific functions or services.
- Gantt chart** A programming technique in which activities are represented by bars drawn to a time scale and against a time base.
- Graphics** Computer generated diagrams.
- Graphical analysis** A method for calculating the critical path and floats using a linked bar chart technique.

Grid Lines drawn on a network sheet to act as coordinates of the nodes.

Hammock An activity covering a number of activities between its starting and end node.

Hardware The name given to a computer and its accessories.

Histogram A series of vertical columns whose height is proportional to a particular resource or number of resources in any time period.

Independent float The difference between free float and the slack of a beginning event.

Indirect cost Cost attributable to a project, but not directly related to an activity or group within the project.

Input The information and data fed into a computer.

Interface The meeting point of two or more networks or strings.

Interfering float The difference between the total float and the free float. Also the slack of the end event.

Internal Rate of Return (IRR) The discount rate at which the Net Present Value is zero.

Investment appraisal Procedure for analysing the viability of an investment.

Ladder A string of activities which repeat themselves in a number of stages.

Lag The delay period between the end of one activity and the start of another.

Latest finish The latest time at which an activity can be finished without affecting subsequent activities.

Latest start The latest time at which an activity can be started without delaying the project.

Lead The time between the start of one activity and the start of another.

Lester diagram Network diagram which combines the advantages of arrow and precedence diagrams.

Line of balance Planning technique used for repetitive projects, sub-projects or operations.

Logic The realistic interrelationship of the activities on a network.

Logic links The link line connecting the activities of a precedence diagram.

Loop A cycle of activities which returns to its origin.

Manual analysis The method for calculating floats and the critical path without the use of a computer.

Master network Coordinating network of subnetworks.

Matrix The table of activities, durations and floats used in arithmetical analysis.

Matrix organization Management structure where functional departments allocate selected resources to a project.

Menu Screen listing of software functions.

Method statement Narrative or graphical description of the methods envisaged to construct or carry out selected operations.

Milestones Key event in a project which takes zero time.

Milestone slip chart Graph showing and predicting the slippage of milestones over the project period.

Negative float The time by which an activity is late in relation to its required time for meeting the programme.

Net Present Value (NPV) Aggregate of discounted future cash flows.

Network A diagram showing the logical interrelationships of activities.

Network analysis The method used for calculating the floats and critical path of a network.

Network logic The interrelationship of activities of a planning network.

Node The intersection point of activities. An event.

Organization breakdown structure (OBS) Diagrammatic representation of the hierarchical breakdown of management levels for a project.

Organogram Family tree of an organization showing levels of management.

Output The information and data produced by a computer.

P3 Primavera Project Planner.

Path The unbroken sequence of activities of a network.

PERT Programme Evaluation and Review Technique. Another name for CPA.

Phase A division of the project life cycle.

Planned cost The estimated (anticipated) cost of a project.

Precedence network A method of network programming in which the activities are written in the node boxes and connected by lines to show their interrelationship.

Preceding event The beginning event of an activity.

Printout *See* Output.

Product Breakdown Structure (PBS) Hierarchical decomposition of a project into various levels of products.

Program The set of instructions given to a computer.

Programme A group of related projects.

Programme manager Manager of a group of related projects.

Progress report A report which shows the time and cost status of a project, giving explanations for any deviations from the programme or cost plan.

Project A unique set of co-ordinated and controlled activities to introduce change within defined time, cost and quality/performance parameters.

Project life cycle All the processes and phases between the conception and termination of a project.

Project management The planning, monitoring and controlling of all aspects of a project.

Project management plan (PMP) A document which summarizes of all the main features encapsulating the Why, What, When, How, Where and Who of a project.

Project manager The individual who has the authority, responsibility and accountability to achieve the project objectives.

Project organization Organization structure in which the project manager has full authority and responsibility of the project team.

Project task force See Task force.

Quality management The management of all aspects of quality criteria, control, documentation and assurance.

Quality plan A plan that sets out the quality standards and criteria of the various tasks of a project.

Random numbering The numbering method used to identify events (or nodes) in which the numbers follow no set sequence.

Resource The physical means necessary to carry out an activity.

Resource levelling See Resource smoothing.

Resource smoothing The act of spreading the resources over a project to use the minimum resources at any one time and yet not delay the project.

Responsibility code Computer coding for sorting data by department.

Responsibility matrix A tabular presentation showing who or which department is responsible for set work items or packages.

Return on capital employed Profit (before interest and tax) divided by the capital employed given as a %.

Retentions Moneys held by employer for period of maintenance (guarantee) period.

Return on Investment (ROI) Average return over a specified period divided by the investment given as a %.

Risk The combination of the consequences and likelihood of occurrence of an adverse event or threat.

Risk analysis The systematic procedures used to determine the consequences or assess the likelihood of occurrence of an adverse event or threat.

Risk identification Process for finding and determining what could pose a risk.

Risk management Structured application of policies, procedures and practices for evaluating, monitoring and mitigating risks.

Risk management plan Document setting out strategic requirements for risk assessment and procedures.

Risk register Table showing the all identified risks, their owners, degree of P/I, and mitigation strategy.

Schedule *See* **Programme**.

Schedule Performance Index The ratio of earned value cost (or time) and the planned cost (or time).

Schedule variance The arithmetical difference between the earned value cost (or time) and the planned cost (or time).

Sequential numbering The numbering method in which the numbers follow a pattern to assist in identifying the activities.

Slack The period between the earliest and latest times of an event.

Slip chart *See* milestone slip chart.

SMAC Site man hour and cost. The name of the computer program developed by Foster Wheeler Power Products Limited for controlling man hours in the field.

Software The programs used by a computer.

Sponsor The individual or body who has primary responsibility for the project and is the primary risk taker.

Stakeholder Person or organization who has a vested interest in the project. This interest can be positive or negative.

Statement of Work (SOW) Description of a work package which defines the project performance criteria and resources.

Start event The first event of a project or activity.

Subnetwork A small network which shows a part of the activities of a main network in greater detail.

Succeeding event The end event of an activity.

Task The smallest work unit shown on a network programme (see also Activity).

Task data The attributes of a task such as duration, start and end date, resource requirement.

Task force Project organization consisting of a project team which includes all the disciplines and support services under the direction of a project manager.

Time estimate The time or duration of an activity.

Toolbar The list of function icons on a computer screen.

Topological numbering A numbering system where the beginning event of an activity must always have a higher number than the events of any activity preceding it.

Total float The spare time between the earliest and latest times of an activity.

Updating The process of changing a network or programme to take into account progress and logic variations.

Value hours The useful work hours spent on an activity. This figure is the product of the budget hours and the percentage complete of an activity or the whole contract.

Variance Amount by which a parameter varies from its specified value.

Weightings The percentage of an activity in terms of man hours or cost of an activity in relation to the contract as a whole, based on the budget values.

Work breakdown structure (WBS) Hierarchical decomposition of a project into various levels of management and work packages.

Work package Group of activities within a specified level of a work breakdown structure.

Bibliography

- Adair, J., *Effective Leadership*, PAN (1983)
- Ahuja, H.N., *Construction Performance Control by Networks*, Wiley (1976)
- Andersen, E.S., Grude, K.V. & Haug, Tor, *Goal Directed Project Management*, 2nd edn, Kogan Page (2002)
- Antill, J.M. & Woodhead, R., *Critical Path Methods in Construction Practice*, Wiley (1982)
- APM, *Body of Knowledge*, Association for Project Management (1996)
- APM, *Planning Contracts for Successful Project Management*, APM Group (1998)
- APM, *Project Risk Assessment and Management*, 'PRAM Guide', APM Group (1997)
- APM, *Standard Terms for the Appointment of a Project Manager*, APM Group (1998)
- Archibald, R.D., *Managing High-Technology Programs and Projects*, John Wiley (1976)
- Archibald, R.D. & Villoria, R.L., *Network-based Management Systems*, John Wiley (1967)
- Baden-Hellard, R., *Managing Construction Conflict*, Longman Scientific (1988)
- Baden-Hellard, R., *Project Partnering: Principle and Practice*, Thomas Telford Publications (1995)
- Baden-Hellard, R., *Total Quality in Construction Projects*, Thomas Telford Publications.

- Baguly, Phil, *Teach Yourself Project Management*, T.Y. Books (1999)
- Bank, J., *The Essence of Total Quality Project Management*, Prentice Hall (1992)
- Barnes, N.M.L. (ed.), *Financial Control*, Thomas Telford Publications (1990)
- Battersby, A., *Network Analysis*, Macmillan (1970)
- Belanger, T.C., *The Complete Planning Guide to Microsoft Project*, Butterworths (1996)
- Belbin, M., *Team Roles at Work*, Butterworth-Heinemann (1993)
- Boyce, C., *Successful Project Administration*, Hawksmere (1992)
- Bradley, K., *Prince: A Practical Handbook*, Butterworth-Heinemann (1992)
- Breech, E.F.L., *Construction Management in Principle and Practice*, Longman (1971)
- Briner, W., Hastings, C. & Geddes, M., *Project Leadership*, Gower (1996)
- British Standards Institution, *BS 6079, Part 1, Guide to Project Management*, BSI (2002)
- British Standards Institution, *BS 6079, Part 2, Project Management Vocabulary*, BSI (2000)
- British Standards Institution, *BS 6046, Parts 1–4, Use of network techniques in project management*, BSI (1992)
- British Standards Institution, *BS 7000, Design Management Systems*, BSI (1995)
- British Standards Institution, *BS ISO 10006, Quality Management – Guidelines to Quality in Project Management*, BSI (1997)
- Burke, R., *Project Management Planning & Control Techniques*, 3rd edn, John Wiley (1999)
- Burman, P.J., *Precedence Networks for Project Planning and Control*, McGraw-Hill (1972)
- Buttrick, R., *The Project Management Workout*, Pitman (1997)
- Carter, B. et al., *Introducing RISKMAN*, NCC Blackwell (1994)
- CCTA, *Guide to Programme Management*, HMSO (1997)
- CCTA, *Introduction to Management of Risk*, HMSO (1993)
- Chapman, C.B. & Ward, S., *Project Risk Management*, John Wiley (2000)
- Cleland, D.I. & Gareis, R., *Global Project Management*, McGraw-Hill (1993)
- Cleland, D.I. & King, W.R., *Project Management Handbook*, McGraw-Hill (1993)
- Cleland, D.I. & Ireland, L.R., *Project Management*, 4th edn, McGraw-Hill (2002)
- Cleland, D.I. & Ireland, L.R., *Project Manager's Portable Handbook*, McGraw Hill (2000)

- Clough, Richard H., Sears, Glenn A., and Sears, Keoki, *Construction Project Management*, 4th edn, John Wiley (2000)
- Corrie, R.K. (ed.) *Project Evaluations*, Thomas Telford Publications (1994)
- Davison-Fram, J., *Managing Projects in Organisations*, Jossey-Bass Publishers (1987)
- Dingle, J., *Project Management – Orientation for Decision Makers*, Edward Arnold (1997)
- Edwards, L., *Practical Risk Management in the Construction Industry*, Thomas Telford (1995)
- Field, Mike & Keller, Laurie, *Project Management*, Thomson (2002)
- Figenti, Enzo & Commimos, Dennis, *The Practice of Project Management*, Kogan Page (2002)
- Flanagan & Norman, *Risk Management in Construction*, Blackwell Scientific (1993)
- Fleming, Q.W. & Koppelman, J.M., *Earned Value Project Management Systems*, PMI (1996)
- Frame, Davidson, J., *Managing Projects in Organizations*, Rev. edn, Jossey Bass (1995)
- Frame, Davidson, J., *The New Project Management*, Jossey Bass (2002)
- Geddes, M., Hastings, C. & Briner, W., *Project Leadership*, Gower (1990)
- Gentle, Michael, *The CRM Project Management Handbook*, Kogan Page (2000)
- Goodlad, J.B., *Accounting for Construction Management: An Introduction*, Heinemann (1974)
- Goodman, L.J., *Project Planning and Management*, Van Nostrand Reinhold (1988)
- Graham, R.J., *Project Management as if People Mattered*, Prima Vera Press (1987)
- Greaseley, A., *Project Planning*, Butterworth-Heinemann (1997)
- Gray, C. & Larson, E., *Project Management*, McGraw-Hill (2002)
- Grey, S., *Practical Risk Assessment for Project Management*, John Wiley (1995)
- Hamilton, A., *Management by Projects*, Thomas Telford Publications (1997)
- Harris, F. and McCaffer, R., *Modern Construction Management*, Crosby Lockwood (1977)
- Harris, J., *Sharpen your Team's Skills in Project Management*, McGraw-Hill (1997)
- Harris, R.B., *Precedence & Arrow Networking Techniques for Construction*, Wiley (1978)
- Harrison, F.L., *Advanced Project Management*, Gower (1992)

- Heldman, Kim, *PMP Project Management Professional*, Sybex (2001)
- Hillebrandt, P.M., *Economic Theory and the Construction Industry*, Macmillan (1974)
- Hunt, J.W., *Managing People at Work*, McGraw-Hill (1986)
- Johnston, A.K., *A Hacker's Guide to Project Management*, Butterworths (1995)
- Kerzner, H., *Project Management*, Van Nostrand Reinhold (1995)
- Kliem, R.L. & Ludlin, I.S., *The People Side of Project Management*, Gower (1995)
- Kliem, R.L. & Ludlin, I.S., *Reducing Project Risk*, Gower (1997)
- Kwakye, A.A., *Construction Project Administration in Practice*, Longman (1997)
- Lake, Cathy, *Mastering Project Management*, Thorogood (1997)
- Lang, H.J. & Merino, D.L., *Selection Process for Capital Projects*, Wiley (1993)
- Lester, A., *Project Planning and Cost Control*, ASM (1988)
- Lester, A. and Benning, A., *Procurement in the Process Industry*, Butterworths (1989)
- Levine, Harvey, A., *Practical Project Management*, John Wiley (2002)
- Levy, Sidney M., *Project Management in Construction*, 4th edn, McGraw-Hill (2002)
- Lewin Maish, D., *Better Software Project Management*, AMACOM (2001)
- Lewis, James P., *Mastering Project Management*, McGraw-Hill (1997)
- Lewis, James P., *Team Based Project Management*, McGraw-Hill (1997)
- Lewis, James P., *Fundamentals of Project Management*, 2nd edn, AMACOM (2002)
- Lewis, James P., *Project Planning, Scheduling and Control*, 3rd edn, McGraw-Hill (2000)
- Lientz, B.P. & Rea, P., *International Project Management*, Academic Press (2003)
- Lock, D., *Project Management Handbook*, Gower (1987)
- Lock, D., *Project Management*, 7th edn, Gower (2000)
- Lock, D., *The Essentials of Project Management*, 2nd edn, Gower (2001)
- Lock, D., *Handbook of Engineering Management*, Butterworth-Heinemann (1993)
- Lockyer, K., *An Introduction to Critical Path Analysis*, Pitman (1970)
- Lockyer, K. and Gordon, J., *Project Management and Project Network Techniques*, 6th edn, Pitman (1996)
- Martin, Paula & Tate, Karen, *Getting Started in Project Management*, John Wiley (2001)
- Maylor, Harvey, *Project Management*, 3rd edn, Pearson (2003)

- Meredith, J.R. & Mantel, S.J., *Project Management: A Managerial Approach*, Wiley (1985)
- Merna, A. & Smith, N.J., *Projects Procured by Privately Financed Concession Contracts*, 2 volumes, Asia Law & Practice (1996)
- Merrett, A.J. & Sykes, A., *Capital Budgeting and Company Finance*, Longmans (1966)
- Moore, David, *Project Management*, Blackwell (2002)
- Morris, P.W.G., *The Management of Projects*, Thomas Telford Publications (1997)
- Morris, P.W.G. & Hough, G.H., *The Anatomy of Major Projects*, John Wiley (1987)
- Neale, R.H. & Neale, D.E., *Construction Planning*, Thomas Telford (1989)
- NEDC, *Guidelines for the Management of Major Construction Projects*, HMSO (1991)
- Newell, M.W., *Project Management Professional*, 2nd edn, AMACON (2002)
- Oaklands, J.S., *Total Quality Management*, Butterworth-Heinemann (1994)
- Obeng, E., *The Project Leader's Secret Handbook – All Change*, Pitman (1996)
- Obeng, E., *Putting Strategy to Work*, Pitman (1996)
- O'Brien, J.J. & Peatnick, F.L., *CPM in Construction Management*, 5th edn, McGraw-Hill (1999)
- O'Connell, F., *How to Run Successful Projects II*, Prentice Hall (1996)
- O'Neill, J.J., *Management of Industrial Projects*, Butterworths (1989)
- Oxley, R. & Paskitt, J., *Management Techniques Applied to the Construction Industry*, 5th edn, Blackwell (1996)
- OGC, *Best Practice Guidance*, The Stationery Office (2002)
- Parkin, J., *Management Decisions for Engineers*, Thomas Telford
- Phillips, J.J., Bothell, T.W. and Snead, C.L., *The Project Management Scorecard*, Butterworth-Heinemann (2002)
- Pilcher, R., *Project Cost Control in Construction*, Collins (1985)
- PMI, *A Guide to the Project Management Body of Knowledge*, Project Management Institute (USA) (1996)
- Reiss, G., *Project Management Demystified*, 2nd edn, Spon (2001)
- Reiss, G., *Programme Management Demystified*, Spon (1996)
- Ridley, J., *Safety at Work*, Butterworths (2003)
- Smith, N.J. (ed.), *Project Cost Estimating*, Thomas Telford Publications (1995)
- Smith, N.J. (ed.), *Engineering Project Management*, Blackwell Scientific (1995)

- Snell, M., *Cost Benefit Analysis for Engineers, Planners and Decision Makers*, Thomas Telford Publications (1997)
- Spender, Stephen, *Managing Projects Well*, Butterworth-Heinemann (2000)
- Snowden, M., *Management of Engineering Projects*, Butterworths (1977)
- Stevenson, Nancy, *MS Project 2002 for Dummies*, Hungry Minds (2002)
- Stone, R. (ed.), *Management of Engineering Projects*, Macmillan (1988)
- Thompson, P. & Perry, J., *Engineering Construction Risks*, Thomas Telford
- Tobis, Irene & Tobis, Michael, *Managing Multiple Projects*, McGraw-Hill (2002)
- Turner, J.R., *The Project Manager as Change Agent*, McGraw-Hill (1996)
- Turner, J.R., *The Handbook of Project-based Management*, McGraw-Hill (1998)
- Turner, J.R., *The Commercial Project Manager*, McGraw-Hill (1995)
- Walker, A., *Project Management in Construction*, Blackwell Science (2002)
- Ward, S.A., *Cost Engineering for Effective Project Control*, Wiley (1992)
- Wearne, S.H., *Principles of Engineering Organizations*, Thomas Telford Publications (1993)
- Winch, Graham M., *Managing Construction Projects*, Blackwell (2002)
- Woodward, John F., *Construction Project Management: Getting it Right First Time*, Thomas Telford Publications (1997)
- Young, Trevor, *The Handbook of Project Management*, Kogan Page (2001)
- Young, Trevor, *Successful Project Management*, Kogan Page (2001)

Index

- Abbreviations, 359–362
- Acknowledgements, xxi
- Acronyms, 362
- Activity box, 82, 83, 86
- Activity chain, 68, 69
- Activity list, 258, 260, 302
- Activity number, 82
- Activity sheet, 25, 260, 302
- Activity on arrow (AoA), 66, 67, 81, 90, 97, 115, 131, 259, 274, 303, 330
- Activity on node (AoN), 81, 97, 105, 131, 144, 149, 303
- Activity, 66–70, 74, 76, 78, 79, 82, 87, 91, 92, 95, 97–99
- Actual cost of work performed (ACWP), 251, 252, 254
- Actual hours, 222–227, 229, 231, 265, 311, 332, 333
- Analytical estimating, 40
- APM, 22
- Arithmetical Analysis, 78, 104
- Arrow diagram, 81, 88, 114, 232
- Arrow head, 6
- Arrow, 66
- Authorization, 21
- Automatic grouping, 315
- Average rate of return, 7, 12
- Backward pass, 83
- Banding, 170
- Bar chart, 65, 92, 112, 119, 151, 152, 154, 197, 205, 207, 211, 234, 262, 270, 280, 282, 283, 288, 306, 320
- Basic principles (networks), 65
- Beginning event, 106, 108
- Beginning slack, 106, 108, 111
- Beta distribution, 159
- Bibliography, 371
- Bills of quantities, 211, 247
- Bitumen refinery, 28
- Blocks, 25, 29, 30, 116, 158, 165
- Boiler programme, 169, 192
- Bottom-up estimating, 35
- Brainstorming, 48
- British Standards Institution (BSI), 251
- BS 6079, 1, 22, 43, 210
- Budget hours, 222, 224–226
- Budget at completion (BAC), 251, 252, 254
- Budgeted cost of work performed (BCWP), 251, 252, 254
- Budgeted cost of work scheduled (BCWS, 251, 252, 254
- Buffer, 124, 125
- Bungalow programme, 259
- Bureaux, 128
- Business case, 5, 289, 292
- Calendar window, 342
- Calendars, 317
- Cash flow, 211, 268, 271, 281, 285, 295

- Cash flow curve, 269, 288, 296, 297
- Cash flow forecasting, 211, 212
- Casting programme, 191
- Cause & effect analysis, 57
- CEGB, xvii
- Centrifugal pump manufacture, 186
- Chain of activities, 68, 69, 109
- Change management, 58, 62
- Change of contract notice, 59–61
- Change, 58, 59
- Check list, 49
- Circle and link diagram, 81
- Claims, 196, 197, 198
- Claremont Controls, 88, 253
- Close-out, 311, 351
- Close-out report, 352
- Coding tasks, 319
- Colliery surface reconstruction, 28
- Colouring up, 174
- Commercial programs, 131, 132
- Communication, 18
- Comparative estimating, 39
- Computer, 75, 157
- Computer analysis, 78, 127
- Computer bureaux, 128
- Computer print out, 103
- Concept, 19, 22, 23, 300
- Configuration audit, 63
- Configuration management, 58, 63
- Configuration status, 63
- Construction network, 214
- Construction restraint, 29
- Contingency, 53–55
- Contract scope change advice, 60
- Control graphs, 229, 251, 267, 284, 310, 336, 337
- Coordinates, 72, 74, 75
- Cost bound project, 3
- Cost Breakdown Structure (CBS), 34, 35, 301
- Cost control, 220, 331
- Cost control reports, 334–338
- Cost performance index (CPI), 251, 252, 254
- Cost report, 151, 335
- Cost variance, 251, 254
- Cost/benefit analysis, 2
- CPM, 65, 66, 158, 238
- Critical activity, 66, 109, 116, 133
- Critical path, 65, 91, 101, 109, 110, 112
- Critical path analysis (CPA), 189
- Dangle, 68
- Data grid, 314
- Data, 317
- DCF, 9
- Delays claim, 197
- Delphi technique, 49
- Dependencies, 79, 87
- Design network, 30
- Design philosophy, 257, 271
- Discount rate, 9
- Discount factor, 9, 10
- Discounted cash flow (DCF), 9
- Document control, 62
- Do-Lists, 150
- Du Ponts, svii
- Dummy activity, 67, 70, 103
- Dummy, 67, 68, 71, 74
- Duration, 71, 82, 108, 158
- Earliest finish, 82
- Earliest start, 82
- Earliest time, 108
- Earned value analysis (EVA), 90, 220, 266, 278, 279, 286, 287
- Earned value (BCWP), 251–254
- Efficiency, 254, 265
- End event, 108, 111
- End slack, 108
- Envelope, 331
- Estimate sheet, 275
- Estimating, 38, 39
- EVA, *see* Earned value analysis
- Evaluation, 21
- Event, 67, 105, 106, 108
- EVMS, 252
- Examples, 135
- Expert advice, 49, 55
- Exposure rating, 51
- Exposure table, 51
- Extended life cycle, 23, 24

-
- Factory moving, 185, 186
 - Failure mode analysis, 57
 - Feasibility study, 21–23, 300
 - Feedback, 149
 - Feedback sheet, 150
 - Finishing node, 67
 - Float, 78, 96, 106, 198, 205, 305
 - Flow diagram, 66, 84
 - Flow sheets, 195
 - Force majeure, 199
 - Forward pass, 83
 - Free float, 91, 96, 97, 102, 103, 107, 108–110
 - Functional organization, 16

 - Gantt chart, 112, 207, 344, 345, 348
 - Generic Work Breakdown Structure, 31
 - Geographical location, 25
 - Geographical proximity, 166
 - Glossary, 363
 - Graphical analysis, 78, 112
 - Grid, 73, 75, 90, 133, 274
 - Gridded background, 74

 - Hammocks, 76
 - Hardware, 127
 - Histogram report, 329, 331
 - Histogram, 205, 208, 209, 263, 282, 283, 307, 308, 329
 - HORNET Windmill, 253, 255, 312, 313
 - Housing estate, 26

 - Impact rating, 50, 51
 - Impact, 50
 - Implementation, 21
 - Independent float, 96, 108
 - Ink networks, 107
 - Input sheets, 150
 - Input, 150
 - Integrated system, 178, 253
 - Interfering float, 107, 108
 - Internal rate of return (IRR), 11, 12, 294, 295
 - Inter-relationships, 29, 30, 66, 81, 95
 - Investment appraisal, 6, 12, 290

 - IRR, *see* Internal rate of return
 - ISO 9000 series, 56, 57
 - ISO 10006, 56, 57
 - ISO 10007, 57
 - Isometric drawing, 273
 - Iterative sampling, 52

 - Key Performance Indicators (KPI), 5
 - Keyboard, 129
 - Kipling, Rudyard, 45

 - Ladder, 70, 75, 76
 - Latest finish, 92
 - Latest start, 92
 - Latest time, 108
 - Lester diagram, 78, 88, 304
 - Life cycle, *see* Project life cycle
 - Line of Balance, (LOB), 122
 - Linked bar chart, 92, 94
 - Logic changes, 150, 151
 - Logic, 323
 - Loop, 69

 - Mail order campaign, 187
 - Main display, 313
 - Management of change, 62
 - Man-hour/time curve, 236
 - Manual analysis, 128, 156
 - Manual techniques, 162
 - Manufacturing programme, 155
 - Manufacturing unit, 29
 - Master network, 159
 - Master record index (MRI), 64
 - Materials, 212
 - Matrix P/I, 50
 - Matrix organization, 16, 17
 - Method statement, 177, 179
 - Milestone slip chart, 120, 121, 305
 - Milestones, 120
 - Mitigation, 53, 54, 55
 - Mitigation strategy, 55, 298
 - Monitoring, 54, 55
 - Monte Carlo simulation, 47, 52
 - Motor car exercise, 289
 - Moving a factory, 185

- MS Project, 339
- Multistorey block of offices, 27
- Multi-start projects, 113

- National Building Agency (NBA), 126
- NEDO report, xviii, 161
- NEDO, xvii, 161
- Negative float, 97
- Net present value (NPV), 7, 9, 10, 12
- Network analysis, 66
- Network, 66, 158, 205, 274, 330
- New product, 182, 184
- New product network, 184
- Node box, 82
- Node, 66, 67
- NPV, *see* Net present value, 7
- Numbering, 71

- OCPCA, 272, 276
- Oil terminal, 27
- Operation, 21
- Operational system, 167, 168
- Optimistic time, 159
- Options, 6
- Organization breakdown structure (OBS), 35–37
- Organization structures, 16
- Output, 131
- Overall % completion, 246, 254
- Overheads & profit, 212, 213, 284

- P & I Diagram, 30
- P.C., *see* Personal computer
- P/I diagram, 50, 52
- P/I matrix, 50, 52
- Package boiler, 190
- Parallel activities, 146, 181
- Parameter sheet, 256
- Parametric estimating, 39
- Pareto analysis, 57
- Payback, 10, 12
- Percent/time curve, 237
- Percentage complete, 83, 220, 221, 224, 226, 237, 244, 245, 248, 249, 252, 254
- Performance bound project, 3
- Personal computer (PC), 129, 195
- PERT, 159, 344, 345
- Pessimistic time, 159
- Pharmaceutical factory, 26
- Phases, 21, 300
- Pipe installation, 160
- Pipe support erection, 160
- Pipeline project, 163
- Planned cost (BCWS), 251, 254
- Planners, 157, 172
- Plant, 212, 247
- Plot plan, 30, 218
- Polaris, 181
- Portland cement factory, 27
- Precedence diagram, 81, 82, 85, 114, 233
- Preceding event, 133
- Preceding node, 103, 110
- Present value factor, 7
- Print-out, 103, 133, 238
- Probability, 49, 50
- Probability rating, 50, 51
- Probable time, 159
- Procurement, 25
- Product breakdown structure (PBS), 33, 34, 300
- Product life cycle, 23
- Profit, 12
- Program, 130
- Programme life cycle, 23
- Progress reporting, 147
- Project close out, 351
- Project definition, 1
- Project life cycle, 20, 21, 22, 23, 300
- Project management plan (PMP), 42, 43, 44, 45
- Project management software, 132
- Project organization, 16, 18
- Project organization structure, 16, 18
- Project reports, 325
- Project risks, 32
- Project stages, 353, 355
- Project triangle, 2
- Project viability, 6
- Prompt list, 49
- Pump erection, 198, 199
- Pump manufacture, 186, 188, 189

-
- Pumping installation, 271
 - Punched card, 128
 - QMS, 56
 - Qualitative risk assessment, 49, 55
 - Quality assurance (QA), 56
 - Quality control, 57
 - Quality management, 56
 - Quality manual, 57
 - Quality plan, 57
 - Quantitative risk analysis, 47, 50, 55
 - Quantity surveyor, 40
 - Random numbering, 71, 72
 - Refinery, 28
 - Report code, 133
 - Report sheets, 150
 - Report, 109, 133
 - Resource allocation, 347
 - Resource levelling, *see* Resource smoothing
 - Resource loading, 203, 324
 - Resource restraint, 199
 - Resource smoothing, 204, 262, 263, 283, 306
 - Resource table, 261
 - Resources, 17, 203, 205, 206, 260, 261, 262, 347
 - Responsibility matrix, 36, 37, 301
 - Restraint, 79, 199
 - Retentions, 213
 - Return on investment, 6, 7
 - Risk, 46, 47
 - Risk analysis, *see* Risk management, 46, 298
 - Risk assessment, 49
 - Risk awareness, 47, 55
 - Risk breakdown structure, 32
 - Risk closure, 55
 - Risk evaluation, 50
 - Risk exposure, 51
 - Risk identification, 48, 55
 - Risk log, 299
 - Risk management, 46, 53
 - plan, 46, 47
 - Risk matrix, 50
 - Risk monitoring, 54, 55
 - Risk number, 50
 - Risk owner, 49, 50, 53, 55
 - Risk processes, 47
 - Risk register (Risk log), 54, 55
 - Risk reports, 47
 - Risk summary chart, 51
 - Safety bound project, 4
 - Safety 2, 3
 - Schedule performance index (SPI), 251, 253, 254
 - Schedule, 324
 - S-curve, 52, 208, 209, 210, 263, 282, 283, 307, 308
 - Scheduling, 324
 - Section heading, 320
 - Sensitivity analysis, 53
 - Sequence of activities, *see also* String of activities
 - Sequences for project, 353, 354, 355, 356, 357, 358
 - Sequential numbering, 71, 72
 - Similar equipment, 165
 - Site preparation contract, 174
 - Site problems, 160
 - Site organization, 25
 - Slack, *see* Float, 105
 - Slip chart, 120, 121, 305
 - Slippage, 148
 - SMAC, 133, 151, 221, 231, 252, 253, 278, 279, 280
 - SMART, 120
 - Software, 55, 132
 - Specialist groups, 156
 - Spreadsheet, 263
 - Stage of completion, 168
 - Stages, 353
 - Stakeholder (direct), 14
 - Stakeholder (indirect), 14
 - Stakeholder (negative), 14, 15
 - Stakeholder (positive), 14, 15
 - Stakeholder analysis, 14
 - Starting node, 67
 - Storage tanks, 201
 - String of activities, 99, 100, 101, 146
 - Sub-contracts, 212

- Subjective estimating, 39
- Sub-network, 173
- Succeeding node, 103, 110
- SWOT, 47
- Systems, 167, 168, 220–222, 253
- Tabular report, 331, 335
- Task coding, 318
- Task data, 316, 317
- Task numbering, 315
- Task force, 16, 18
- Task usage, 339, 344
- Teamwork, 158
- Terminal (oil), 27
- Termination, 20
- Time scaled network, 92, 93
- Time unit, 67, 106, 107
- Time bound project, 3
- Time estimates, 159
- Time for analysis, 117
- Time sheet, 240
- Time, 67, 106, 107, 146
- Top down estimating, 35
- Topological numbering, 71, 72
- Tornado Diagram, 53
- Total float, 82, 91, 96, 97, 106, 108, 277
- Trades & disciplines, 166
- Trend chart, 120
- Trends, 221
- US Navy, xvii
- Updating, 149, 150, 151, 158
- Value hour, 222, 223, 265
- VDU, 130
- Vendor, 151, 152, 155
- Warehouse, 212
- Watermeter, 182
- Weighting, 221, 223
- Work breakdown structure (WBS), 25, 31, 33, 34, 37, 49
- Work areas, 30
- Zero float, 102
- Zero time, 67

Can you manage without it?

The Institute of Quality Assurance

Do you want to network with like-minded individuals to share best practice?

IQA Membership

Membership of the Institute of Quality Assurance (IQA) is an asset to any quality professional. IQA offers professional recognition, demonstrating an individual or company's commitment to quality. Members gain access to networking, *Quality World* magazine, preferential training rates, quality information and much more.

Do you need more information on quality?

Qualityworld



With over 50 pages of editorial each month and all the latest jobs in quality, *Quality world* makes the ideal quality read. The magazine reports on the news, views and developments in quality management. It also covers contemporary business issues such as the environment, company culture, software and health and safety.

Subscribe today

IQA

Institute of Quality Assurance

For more information on the IQA and its products, or to subscribe to *Quality world*, please contact:

The Institute of Quality Assurance
12 Grosvenor Crescent, London SW1X 7EE
T: 020 7245 6722, F: 020 7245 6755
E: iqa@iqa.org,

www.iqa.org

Membership • Training • Education • Information • Publishing

